

PlantWatchPRO

supervisor for small-medium installations

CAREL



ENG User manual

High Efficiency Solutions





HACCP CAUTION:

The Food Safety programs based on HACCP procedures and on certain national standards, require that the devices used for food preservation are periodically checked to make sure that the measuring errors are within the allowed limits of the application of use.











Carel recommends compliance with the indications of European standard "Temperature recorders and thermometers for transport, storage and distribution of chilled, frozen, deep-frozen/ quick-frozen food and ice cream – PERIODIC VERIFICATION ", EN 13486 -2001 (or subsequent updates) or similar standards and prescriptions applicable in the country of use.

The manual contains further indications regarding technical feature, proper installation and configuration of the product.

KEY

	note	highlights an important point; in particular as regards the practical use of the various product functions
	warning	warns the user of critical areas for the use and safety of PlantWatchPRO
	USB key	indicates that the function can only be accessed directly from PlantWatchPRO (not via web) and using a USB memory key or a storage device (SD)
	tutorial	offers the user some simple configuration examples of the most common settings for the supervision of an installation

Content

1. PRESENTATION	5
2. GRAPHIC INTERFACE	6
Display.....	6
Touch screen keypad	6
Navigation buttons	7
Main menu	8
3. START UP	9
Wizard di Primo Avvio.....	9
4. CONFIGURATION	11
Line configuration.....	11
Model management	12
 How to configure a simple line	13
 How to differentiate a device (or a group of devices) from the standard	14
 How to customise a device model	15
Site information.....	16
Users	16
System pages.....	17
Network configuration.....	17
Support.....	18
 How to create a Restore Point	18
 How to use a previously created Restore Point	19
5. SCHEDULER	20
I/O Configuration	20
Phone book.....	21
Rule configuration.....	21
I/O test.....	22
Guardian.....	22
 How to set scheduled rules	24
 How to set the rules.....	26
 How to configure the Guardian program	27
 How to configure email.....	28
 How to create a scheduled rule to download a report from PlantWatchPRO	29

6. INSTALLATION	30	
Device details.....	30	
7. REPORTS	32	
Configure report.....	32	
Export report.....	32	
Print report	32	
Display data log.....	33	
8. ALARMS/EVENTS	34	
Active alarms.....	34	
Concluded alarms.....	34	
Events	34	
Relay	34	
Download alarms.....	34	
How to respond to alarm signals from PlantWatchPRO	35	
9. STORAGE DEVICE USE	37	

utser

installer / user



Before performing any operations, check that the PlantWatchPRO box contains:

1. the device itself
2. n°3 terminals
3. n°2 resistors
4. n°1 technical leaflet for mounting and drilling template for wall-holes (only for WALL version)
5. n°1 transformer (only for WALL version)
6. fixing screws



wall-mounted
version only

panel-mounted
version only

1. PRESENTATION

PlantWatchPRO is the new solution from CAREL for monitoring and supervision of small / medium-sized systems.

The upgraded hardware performance, combined with the new display 65K colour display, means users now have a powerful new tool for their work.

Compact and versatile, it allows installers, maintenance personnel and store managers to control and optimise refrigeration and air-conditioning systems.

Other innovative features of PlantWatchPRO include:

- possibility to connect and control up to 50 devices;
- possibility to connect and control CAREL or Modbus® devices over RS485 bus;
- log up to 500 variables;
- log data for up to one year (with sampling every 15 min).
- connection to Enterprise system: RemotePRO;
- Guardian software that increases and improves system reliability;
- 2 relay outputs, for alarm signals or managing lights;
- monitor auto-off to extend operating life;
- extraction of data such as: temperature, energy consumption, alarms, events, configurations and device models, using a USB memory key or SD Card;
- import new standard or customised devices;
- display graphs;
- external buzzer management;
- complete alarm configuration;
- active scheduled defrost management;
- access to the system via login credentials and profiling to allow different levels of control
- device suitable for industrial environments, no moving parts.
- possibility of remote access from PC, smartphone or tablet.

Wall version



Fig. 1.a

Key:

- | | |
|---|-------------|
| 1 | alarm light |
| 2 | power light |

Panel version



Fig. 1.b


Key:

- | | |
|---|-------------------|
| 1 | power/alarm light |
| 2 | USB port |

2. GRAPHIC INTERFACE

Display




One of the main features of PlantWatchPRO is the user interface. Web navigation also uses the same graphic interface, identical to the touchscreen except for some functions that can only be accessed directly from PlantWatchPRO using a storage device (these are highlighted in the text by ).



Touch screen keypad

The following keypad will be made available on the touchscreen display whenever data needs to be entered (letters, numbers or symbols):

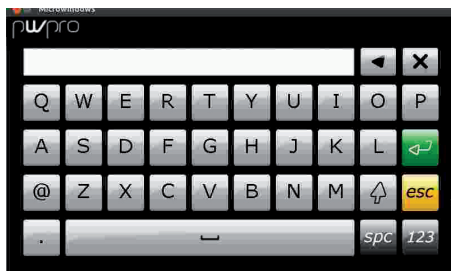

To switch from the main keypad (upper case) to the other keypads, use the following buttons:



to shift to lower case



for the numeric keypad



for symbols and punctuation






















delete one character











completely clear the field

Navigation buttons

 Alarm	displays the list of the devices in the installation and the corresponding alarms. When a device generates an alarm, this button turns red () until all the alarms have been reset, either automatically or manually, being acknowledged, cancelled or removed by the user (see corresponding chapter).
 Reload	restarts the system software, loading the changes made to the configuration; if the changes require the new configuration to be loaded, the button is red () until it is pressed to make the changes active. The reload operation may take a few seconds.  To make the changes to the system configuration effective, the software needs to be reloaded (using ), after having confirmed the changes.
 Guardian	opens the window for setting the "Guardian" program; the notification channels specified will be used by the "Guardian" to send any PlantWatchPRO malfunction warnings to the specific technical personnel. The outline of this button is red () when not configured
	CONFIRM button: confirms the changes made to the screen
	scrolls the list upwards
	scrolls the list downwards
	scrolls the list to the previous time period
	scrolls the list to the next time period
	scrolls the list to the next device
	scrolls the list to the previous device
	add
	remove  To remove an object (device, time band, action, ...), first press  and then select the object to remove


Main menu


The PlantWatchPRO main menu features the clock, the navigation buttons, the information on the name of the site, and five icons: Installation, Configuration, Reports, Alarms/Events and Scheduler; pressing each of these accesses other secondary menus with the lists of corresponding functions.


MAIN MENU ICONS		Description
	System	Global access to the devices in the system
	Alarms / Events	Access the section for displaying alarms / events and managing the relays
	Reports	Access the section for managing system reports
	Configuration	Access the section for system configuration/administration
	Scheduler	Access the section for managing alarm notifications and scheduled activities
	Buzzer	
	Help	
	Exit	


3. START UP

Setup wizard


① When PlantWatchPRO is first started, the following presentation screen will be displayed. Clicking  accesses the page for selecting the LANGUAGE

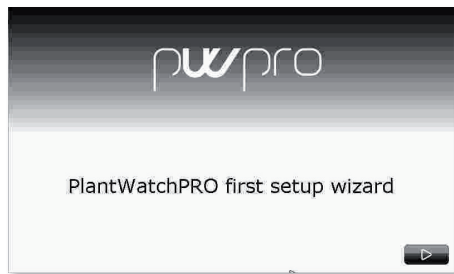


The selection can be modified by clicking the button provided ().


② Use the fields provided to select the desired items from the lists. The selection is confirmed by moving to the following screen ( button)




③ Select the time zone from the list or use the search button ()

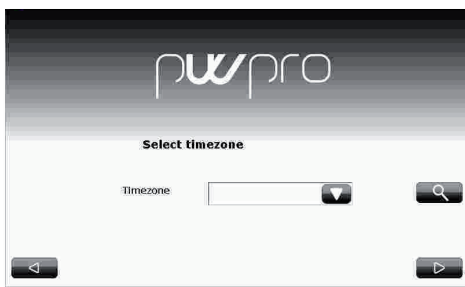

④ Now enter the date and time by selecting the corresponding fields.

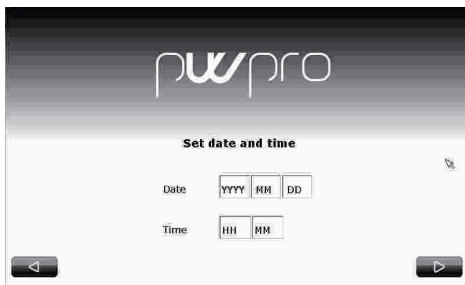

 The date format is "yyyy/mm/dd" and the time format is "hh/mm".

- 5 A password needs to be entered, minimum length 6 characters

The credentials for logging in the first time are:


USER: Admin

PASSWORD: selected during setup.

It is recommended to keep the password in a safe place: losing this information may compromise access to the system



- 6 Display and accept the End-User License Agreement (EULA)

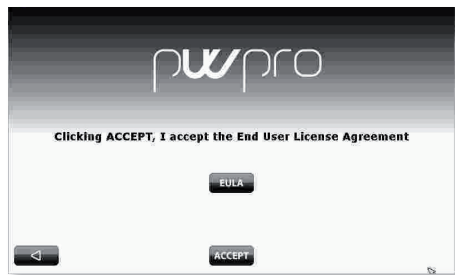


- 7 The final stage of setup involves confirming all the decisions made previously by clicking **ACCEPT** () or going back () to change the settings.



Important: check the settings carefully before proceeding, as once confirmed, the other languages and time zones can no longer be recovered.

A confirmation message then notifies the user that the settings have been saved and, once the system has been rebooted, the main menu will be accessed.

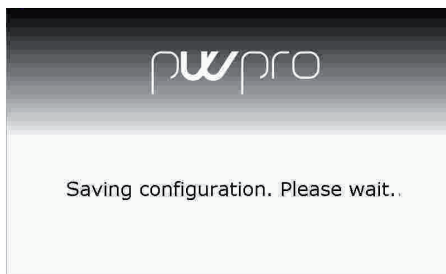

4. CONFIGURATION



Line configuration

Line 1 and Line 2

The system includes two lines for communication with field devices over RS485, using CAREL or Modbus® protocol.

Both lines can be configured in the same way. Once the procedure has been completed on line 1, repeat it in the same way for line 2.

Devices

To add or remove devices, use the  &  buttons provided). For each device, specify:

- The type from the list of devices available in the system
- System serial address
- Description for the user
- Group it belongs to (optional)




Each device can be enabled or disabled as desired and for system maintenance operations.



Connections

Each line can be configured according to the field protocol: CAREL or Modbus®, with the corresponding serial configuration parameters.

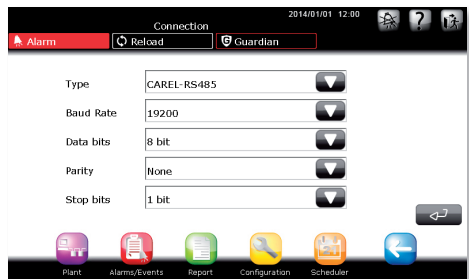


Model management

Model configuration

Each model in the system can be configured according to:

- Alarms (priority and enable);
- Log/graph/HACCP/main view;
- Description/unit of measure (custom description and unit of measure).

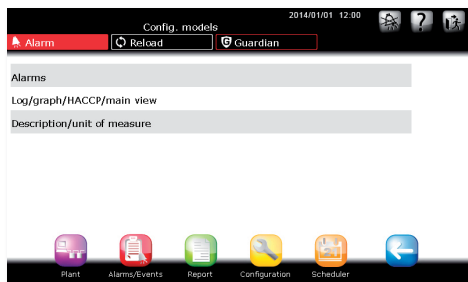

Export model

To export models. Check that there is free space on the USB or SD memory key.

Import model



The following models of devices can be imported:

- standard models (downloaded from <http://ksa.carel.com>);
- models exported from PlantWatchPRO;
- models created or modified using Device Creator.

To import a **standard model** (e.g.: *newstandardmodel*), download the .zip file from <http://ksa.carel.com> and unzip the file into the main directory of a USB or SD pen drive. At the end of the procedure, make sure that the "\\models\\standard*newstandardmodel*\" path has been created on the pen drive.

To import a **model exported from PlantWatchPRO** (e.g.: *IR33*) make sure the .xml file is placed on the storage device in "\\export*sitename*\\models*IR33.xml*".

(sitename is the name of the site set on the Configuration -> Site information page in the PlantWatchPRO that the model was exported from; if the model is exported directly to the USB pen drive, the path is created automatically).

To import a **model created or modified using Device Creator** (e.g.: *mymodel.xml*) make sure the .xml file is placed on the storage device in "export\\mydirectory\\models*mymodel.xml*. (*mydirectory* can be any name).



Important: if the Device Creator version is lower than 3.0 the .xml file must be located in \\models\\dcreator*mymodel.xml*



Important: if importing an existing model, some of the data will be overwritten.

Copy model

Used to create new models based on an existing model, then making the desired changes.



Updating the model used as the basis for others also changes all the models derived using the copy function.

Remove model

To remove a model that is not used by the installation and thus free up part of the PlantWatchPRO memory.



How to configure a simple line

First of all, the user needs to configure PlantWatchPRO in relation to the devices in the specific installation.

1



Access the configuration section and select LINE CONFIGURATION > LINE 1 > DEVICES. Add one or more devices as desired, pressing



Select in order:

- Type of device
- Description of the device
- Serial address. If there are consecutive devices of the same model on the serial line, enter the first and last address.
- Enable the device (default ON)
- Assign it to a group between 1 and 5 is desired. Groups are used to manage any scheduled actions on the devices




Each device on the same line must have a different address from the others, otherwise, if the same address is assigned twice, an error message will be displayed.

2

After having entered the devices, go back and press the LINE 1 → DEVICE CUSTOMISATION item.

Select the desired device. Then customise the description of each individual variable relating to the device.

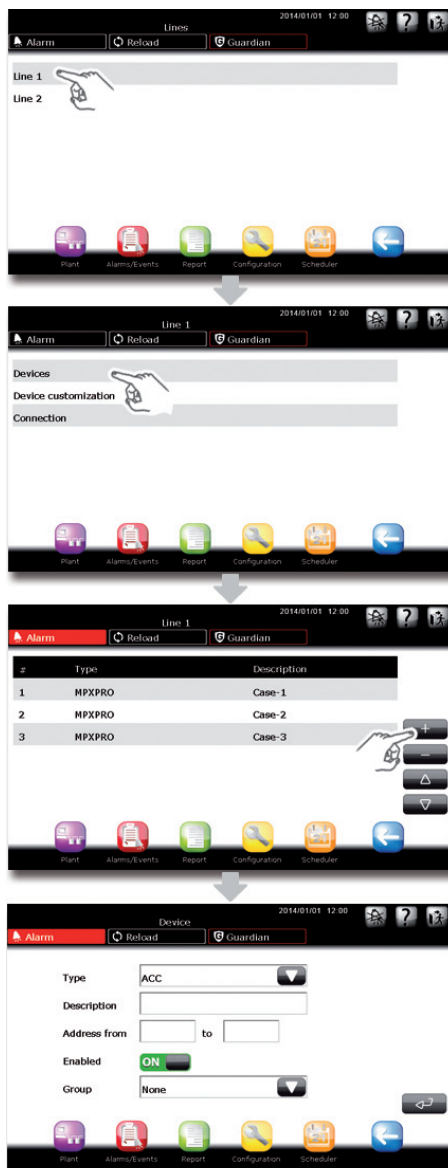


- 3 Go back and choose CONNECTION.
Select the type of protocol, CAREL/MODBUS, the Baud Rate, Data Bits, Parity and Stop Bits.
- 4 Repeat 1. 2. 3. points for LINE 2 (if present).



How to differentiate a device (or a group of devices) from the standard

An example of how to create another model of device with other features starting from the MPXPRO

- 1  Access the configuration section and select MODEL MANAGEMENT > COPY MODEL. From the list of devices, select the model to copy and enter the new name to give to the copied model.



The model created is now identical to the one used as the starting point.



- 2 Follow the instructions as shown in the procedure: "How to configure a device model".



After having created the new model with different features, a line can now be created with the same type of devices, following the first steps in the sequences shown in the tutorial on how to configure a simple line.

How to customise a device model

1



Access the configuration section and select MODEL MANAGEMENT > CONFIGURE MODELS. Select ALARMS.

For each model of device a specific alarm can be configured in relation to enabling and priority. (The priority of an alarm will be shown in the list with a different colour).



2



Access the configuration section and select MODEL MANAGEMENT > CONFIGURE MODELS. Select LOG/GRAPH/HACCP/MAIN VIEW. For each variable relating to a device model, select the following configuration options:

- Logging frequency
- Colour on the graph
- Possibility to select the variable for the HACCP report
- Variable displayed on the device's main page
- Variable included in the list of favourites.



The data recording period depends on the sample time, as shown in the table below:

Sampling time	Recording period
30 s	13 days
1 min	26 days
3 min	80 days
5 min	133 days
15 min	400 days



Site information

For each site, information can be entered relating to technical service for support in the event of problems.

Configuration > Site information

Store 1 2014/03/10 11:05

Alarm Reload Guardian

Name: Store 1 Tel.: 3453458337

Maintenance: Jhonny Tel.: 34855744849

Installed devices: 50 of 50

Logged variables: 498 of 500

Plant Alarms/Events Report Configuration Scheduler

The information for maintenance and the supervisory system connection IP address can be easily displayed by pressing **INFO** on the login screen.

Store 1 2014/01/01 12:00

Alarm Reload Guardian

User: Admin

Password:

INFO

Store 1 2014/01/01 12:00

Alarm Reload Guardian

Maintenance: Jhonny

Tel.: 6547810111

Net Address: 10.0.6.206

Software version: 2.2.1

OS Version: 1.31

MAC Address: 00:0A:5C:30:0F:51

Users

The system can manage and create users with different access profiles.

Configuration > Users

Store 1 2014/01/01 12:00

Alarm Reload Guardian

Administrator

Normal user

Remote assistance

Plant Alarms/Events Report Configuration Scheduler

Administrator

Used to modify the password for the administrator user.

Normal user

Used to create new users and assign them different privileges (site configuration/change parameters/alarm management).

Store 1 2014/01/01 12:00

Alarm Reload Guardian

Normal user

Username: Store Manager

Description: STMG

New password:

Confirm:

Site configuration: OFF Change parameters: OFF

Alarm management: ON

Plant Alarms/Events Report Configuration Scheduler


Remote service

Used to configure the user for remote service. For system security, the remote service user is normally disabled and should be only enabled when remote service is required.

System pages




The system includes a section for managing maintenance/saving and restoring the software data/version.

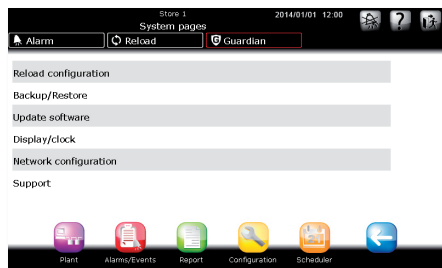Configuration > System page



Reload configuration


This is the function that makes the changes made to the previous configuration effective.

 No changes to the system will be active unless the  button is pressed, which remains red () as a reminder, while the system is still in the previous configuration. Only after having confirmed the changes on the reload page will the system be updated.

Backup/Restore

Backup site configuration

Once an installation has been configured, the configuration can be saved and exported and then used to configure another PlantWatchPRO.

 Operation also available via web


Restore site configuration

Import the system configuration from a USB or SD

key .

Restore point

This function creates and loads a complete image of the system; the function is used to restore the system

in the event of serious errors and/or faults. .

Update software

To update the PlantWatchPRO software, see Chap. 9.

Display/Clock

Control panel for the date/time and display settings.



Network configuration

Configuration of the network settings for the local network (LAN) connection.

By default, the USE DHCP item is selected, which allows the system to detect the network settings automatically. The network settings should only be configured manually by qualified personnel.



Support

In the event of service on a system in an "unknown" language, English can be activated as the default language.




Download service log



This page is used to export the information to send to the service centre if problems have occurred. After having inserted the USB or SD memory key, press enter to start the operation.

How to create a Restore Point

- 1 Select CONFIGURATION > SYSTEM PAGES > BACKUP/RESTORE > RESTORE POINT
- 2 Select CONFIRM

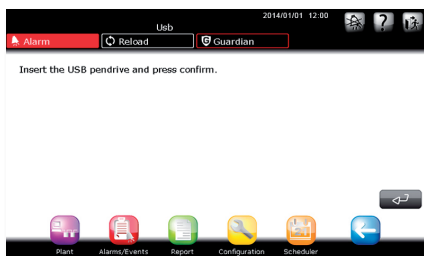


- 3 Select "USB key" and then CONFIRM

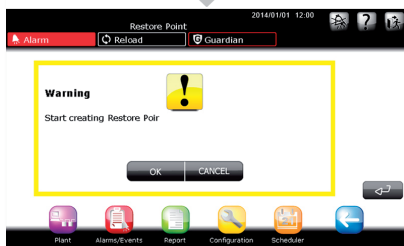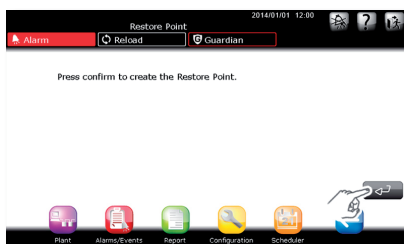

- 4 Once having confirmed the restore point creation screen, the system reboots.

- On reboot, the creation of the restore point is added to the vents

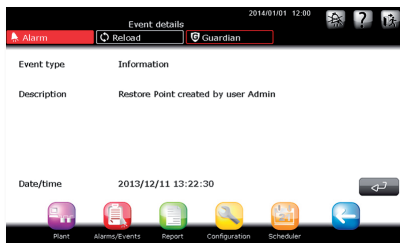

A file is created on the key:


F:\restorePW3\restorePW3-YYYY-MM-DD-hh-mm-ss

where


- F: indicated the USB drive
- YYYY year
- MM month
- DD day
- hh hours
- mm minutes
- ss seconds

How to use a previously created Restore Point


- When starting the system, PlantWatchPRO checks for any USB keys inserted, in the logical sequence USB and SD, if a key is detected it checks for a restore point, and if a restore point is found the system proposes the following screen.

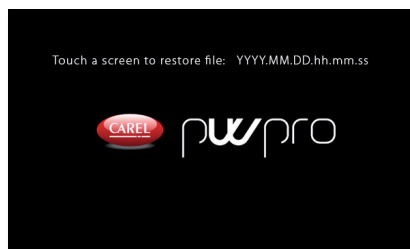

- the user then has **10 seconds** to accept the restore point, after this time the system starts normally. If any area of the screen is selected, the restore procedure starts.

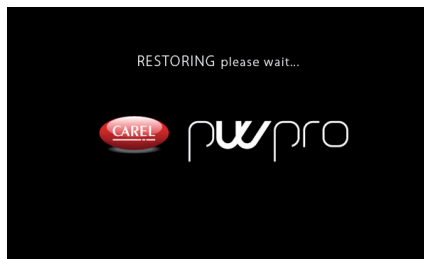

- In the event of problems, such as insufficient space on the USB or SD key or read and/or write problems during the procedure, the system will warn the user with a error message, awaiting confirmation by the user, after the which the system will be rebooted.

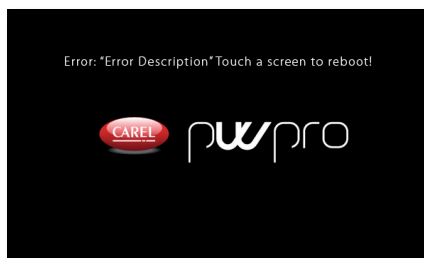

If the USB or SD key has more than one restore point, the unwanted restore point files should be deleted, so as to make sure that PlantWatchPRO only restores the desired configuration.

Important: once the backup or restore procedure has started, do not touch the screen and do not remove the key until the operation has terminated. The operation may take a number of minutes. At the end of the operation, the initial login screen is shown.

5. SCHEDULER

I/O Configuration

This menu used to configure the 4 system notification channels:

- SMS
- E-Mail
- RemotePRO
- Relay




For each channel, the number of attempts and the waiting time between attempts can be configured



SMS configuration

The number of attempts and the waiting time for each attempt can be set. The "Information" section shows the GSM modem connection data.

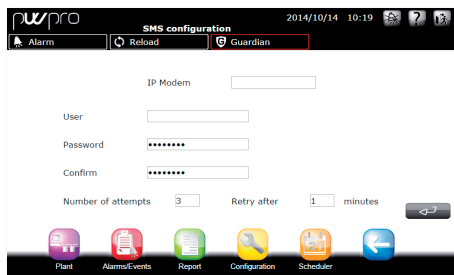


E-Mail configuration

The parameters for accessing the SMTP Server can be configured. Select the type of authentication required and the access credentials.



RemotePRO configuration

The number of connection attempts and the interval between attempts can be configured.

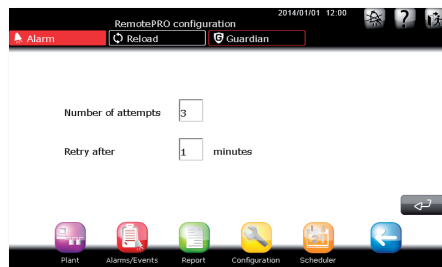

Relay configuration

The 2 relays can be configured, setting the parameters relating to:

- Type of reset: Manual, Automatic, Time
- Reset time
- Initial activation status



Phone book

Up to five SMS recipients, five e-mail addresses and one remote access connection can be entered.

Rule configuration

The system can be configured to manage rules in response to alarms from the field. A rule comprises:

- A condition based on the priority of the alarm
- A time band within which the condition must occur
- A notification action via a specific channel
- A delay before sending notification



Time bands


The user can define time bands whereby if the rule condition occurs within the defined interval, the actions associated with the rule are performed. The time bands can be DAILY/WEEKLY/SPECIAL EVENT



Actions

Notifications

Configuration of notifications and the corresponding channels.

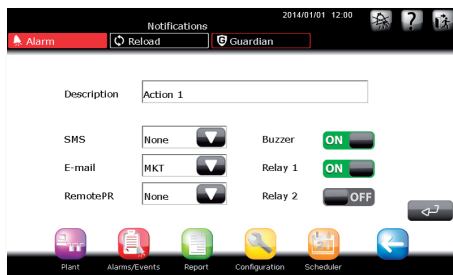

Scheduled activities

Configuration of scheduled activities for the devices in the system, divided into:

- Lights on/off
- Activate Defrost
- Device on/off
- Update RTC (Real Time Clock)



Report

The automatic generation of a report can be scheduled and sent to a printer or e-mail recipient.



Data saving

An automatic report can be created and saved to a mass storage device connected to the USB port or SD Card reader.



Rules

New rules can be configured and existing ones modified.

Scheduled rules

New scheduled rules can be configured and existing ones modified.



Sign of life: a scheduled action can be created that generates a system sign of life notification for the user.



I/O test

Used to test the notification channels.

Guardian

The Guardian process checks correct operation of the entire system so as to guarantee greater security and reliability.


The Guardian can be used to configure alternative notification channels so as to alert technical personnel of any malfunctions.



As well as the notification channels, the Guardian can also be used to configure alarms that, if not notified, must generate an alternative signal, including after a set time.



Tree of the "Scheduler" menu functions

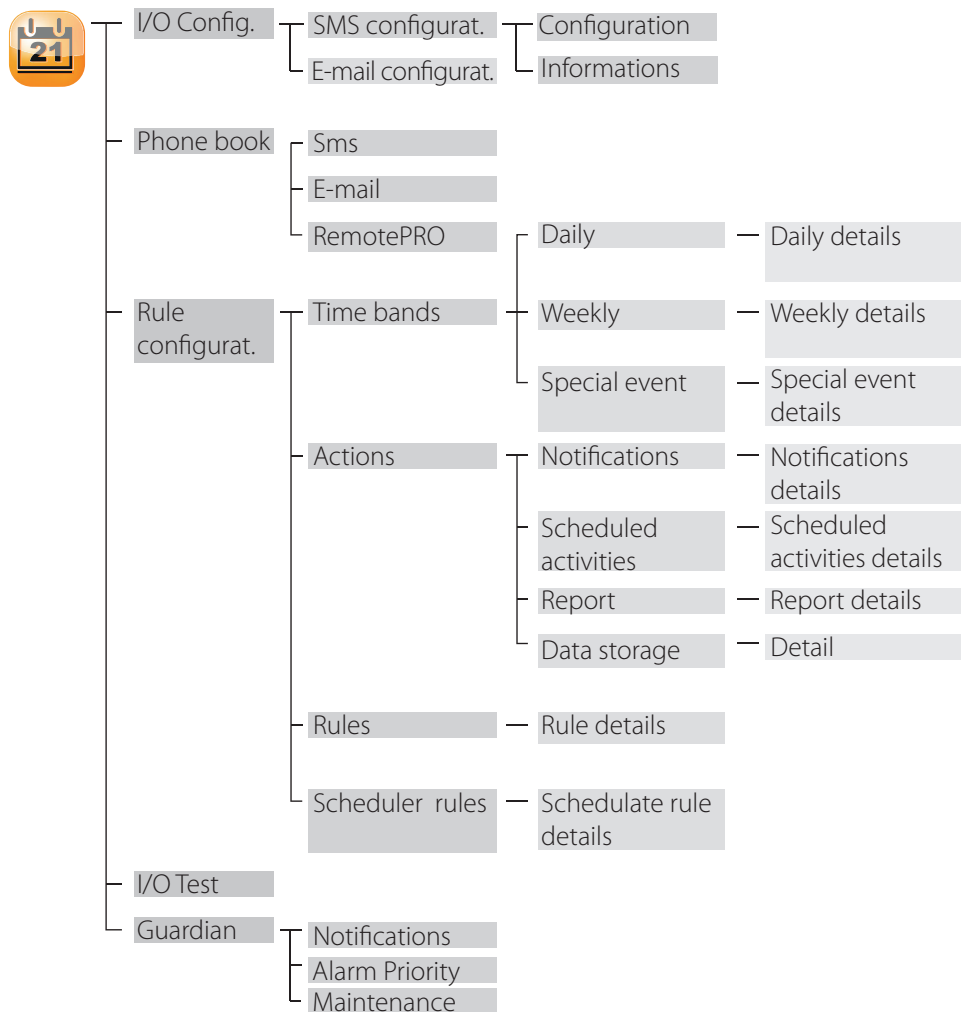



How to set scheduled rules




Below is a step-by-step description of how to turn off the lights at 20:00 each working day and turn them on again in the morning at 9:00.



- From the home page, enter the SCHEDULER → RULE CONFIGURATION → TIME BANDS → DAILY → **+** menu: enter the daily time bands for switching the light off or on; in the example two time bands have been created, called "working day" ("09:00-20:00") and "working night" ("20:01-08:59").






To set the night-time band "20:01 – 8:59", it must be divided into two bands: "20:01-23:59" and "00:00-08:59".

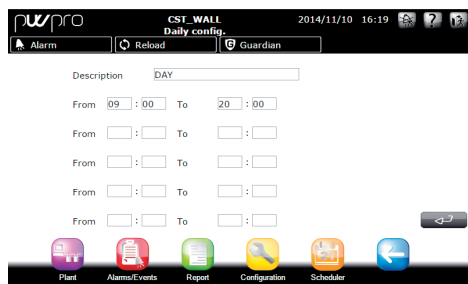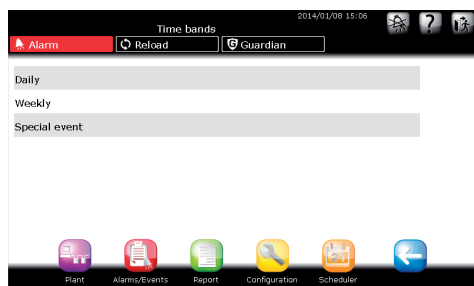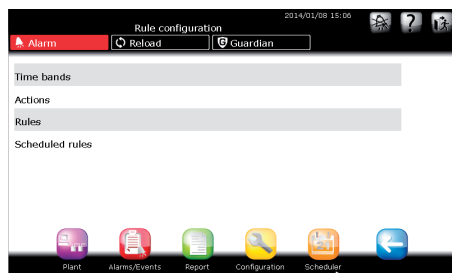- From the TIME BANDS → WEEKLY → **+** menu: now create the weekly light On/Off time bands; in the example two bands have been created relating to day and night (day= lights on, night= lights off), called "working week day" and "working week night", entering first the daily time bands created previously on the days from Monday to Friday (premises considered closed Saturday & Sunday).



- 3 Return to the RULE CONFIGURATION → ACTIONS → SCHEDULED ACTIVITIES →  menu: enter the desired actions (on the entire installation or just on some devices, using the option for assigning the actions to the GROUPS). Two actions have been created, "lights ON" and "lights OFF", turning the lights on and off respectively
- 4 Then go to RULE CONFIGURATION → SCHEDULED RULES →  : enter the new scheduled rules, that is, one that acts in the time band when the lights should be on, activating the action that switches the lights on (this rule will be called "lights on (day)") together with another rule that switches the lights off, thus activating the "lights OFF" action (this rule has been called "lights off (night)").

In four steps, a scheduled activity has been set that automatically switches the lights on and off; the same procedure can be used to create other rules acting on the installation (entire installation or just some devices).

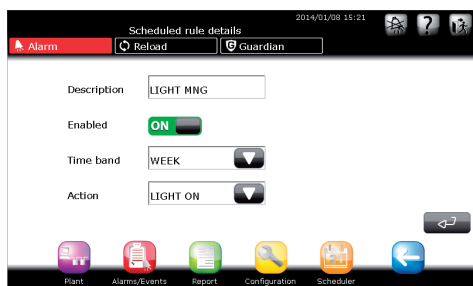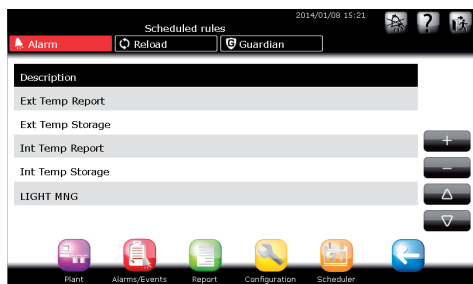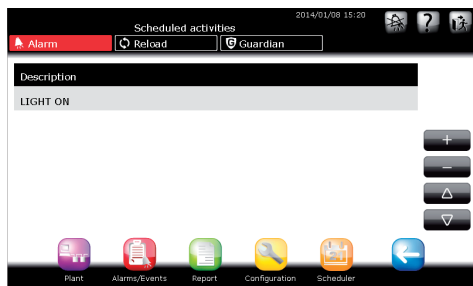



How to set the rules

Below is a description of how to set PlantWatchPRO to notify a highest priority alarm activated in the night-time time band (21:00-08:00) via SMS.




- 1 From the home page, enter the SCHEDULER → RULE CONFIGURATION → TIME BANDS → DAILY → menu: create a time band that goes from 21:00 to 08:00; in the example this has been called "night".



Remember that to set the night-time band "21:00-08:00" it must be divided into "21:00-23:59" "00:00-08:00".

- 2 Return to the RULE CONFIGURATION → ACTIONS → NOTIFICATIONS → menu: enter the notification action "send SMS", selecting from the SMS list the telephone number of "maintenance tech. X" to send the SMS to as the only notification channel.
- 3 Return to RULE CONFIGURATION → RULES → : now create a rule (called "night SMS"), applying a DELAY of one minute (enter "1" in the corresponding field); from ALARM PRIORITY choose "Highest", from TIME BANDS, "every night" (band previously created in the corresponding menu) and finally, from ACTION "send SMS".
Save again and reload the configuration.



With these settings, as soon as a highest priority alarm is activated, on any night of the week, PlantWatchPRO waits one minute and, if within this time interval the alarm has not concluded, notification of a highest priority alarm will be sent via SMS to "maintenance tech. X".

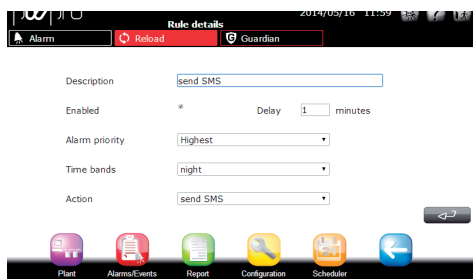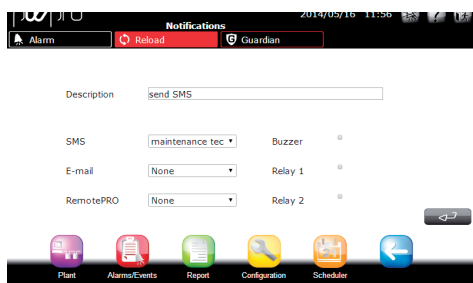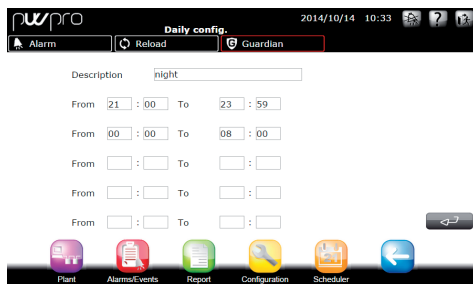

How to configure the Guardian program

Below is a description of how to send a Mail to a certain recipient if a highest priority alarm is activated on a field device.

- 1 From the home page, enter the SCHEDULER → PHONE BOOK → MAIL → menu, and enter the fax number to send the notification to, with a short description
- 2 Return to the SCHEDULER and enter the GUARDIAN → NOTIFICATIONS → from the list, choose the email address set previously in PHONE BOOK.
- 3 Return to the GUARDIAN and enter the ALARM PRIORITY → menu, select the type of alarm to be managed using the Guardian program; in this case select "Highest", to have the alarms with the highest priority signalled via email if the system does not manage them within 60 minutes ("60 min" is the time set by the user).

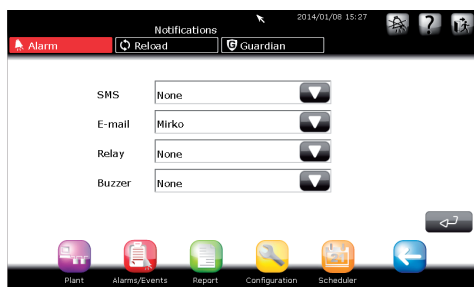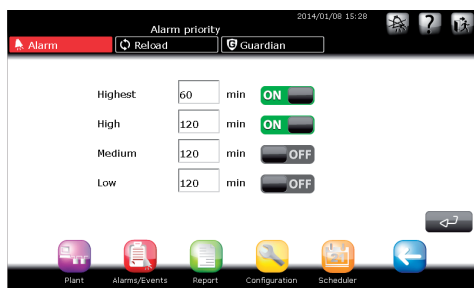



How to configure email

Below is a step-by-step description of how to configure the parameters to allow PlantWatchPRO to send email.

- 1 From the home page enter the SCHEDULER → I/O CONFIGURATION → E-MAIL CONFIGURATION menu to access the parameter configuration screen
- 2 Under SENDER enter the e-mail address of the sender of the e-mail
- 3 The USER, PASSWORD and SMTP fields should be completed with the data supplied by the ISP.



Warning: the IP address or the URL, must be entered in the SMTP field. This configuration should be completed by qualified personnel (systems administrators)




- 4 Then enter the NUMBER OF ATTEMPTS to be made and the delay between attempts (RETRY AFTER __ MINUTES field)

The screenshot displays the 'E-mail' configuration window. At the top, there are tabs for 'Alarm', 'Reload', and 'Guardian'. The main area contains several input fields and toggle switches: 'SMTP' is set to '10.0.1.34', 'Port' is '25', 'Authentication' is 'ON', 'TLS' is 'ON', and 'SSL' is 'OFF'. The 'Sender' field contains 'pw3@carel.com'. Below this are fields for 'User' and 'Password' (masked with asterisks). Further down, 'Number of attempt' is set to '2' and 'Retry after' is set to '1 minutes'. At the bottom, a navigation bar includes icons for 'Plant', 'Alarms/Events', 'Report', 'Configuration', 'Scheduler', and a back arrow.

How to create a scheduled rule to download a report from PlantWatchPRO

Below is the procedure for creating a schedule rule to save a HACCP report to a memory key inserted in the first slot at a set time. Firstly a time band and a HACCP report need to be created, as shown previously. Then:

- 1 From the home page, access SCHEDULER → RULE CONFIGURATION → ACTIONS → DATA STORAGE
- 2 Add a new action, enter a description (e.g. HACCP report), select the report created previously to be downloaded and USB channel 1. Confirm and in the DURATION/FREQUENCY field select the desired combination (1 day/5 minutes), then select confirm to save
- 3 From the home page, access SCHEDULER → RULE → CONFIGURATION SCHEDULED RULES
- 4 Add a new scheduled rule, enter a description (Download report), select a time band (band 1) and the previously saved action. Save again and reload the configuration.
- 5 The rule saved will download the report to the selected USB channel at the time set in the time band.
- 6 By default, a daily scheduled rule is set that downloads a HACCP report every day, with a frequency of 30 minutes, relating to the previous day. This rule is disabled, to enable it access SCHEDULER → RULE CONFIGURATION → SCHEDULED RULES, select the ALL_HACCP rule, select the "Enabled" option and then save and reload the configuration.

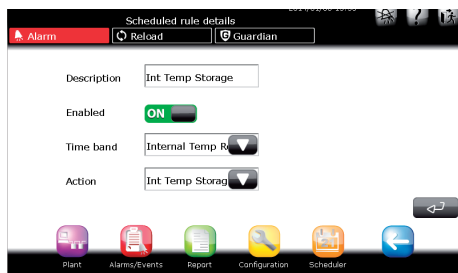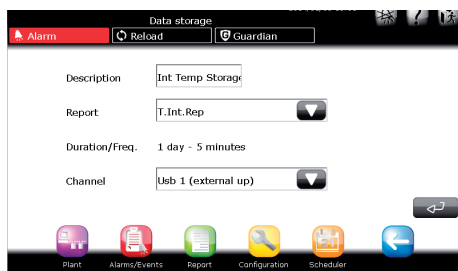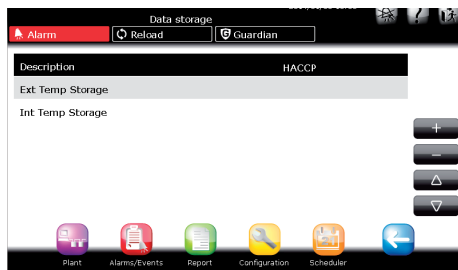

6. INSTALLATION

installer

user

On entering this menu, the user can access all the devices configured in the system, with their relative operating status. The LED alongside the name of the device may have the following meaning:

- green - the device is working correctly.
- red - the device has at least one active alarm.
- blue - the device is disabled. The supervisory system cannot manage the alarms relating to the device.
- grey - the device is offline.

In addition, the main variables that the device provides the user are also shown. These variables can be configured in the configuration section, under model management.

Device	Variable	Value
Case-1	Defrost temp. (Sd)	71.0 °C/°F
	Regulation temp.	114.0 °C/°F
Case-2	Defrost temp. (Sd)	136.0 °C/°F
	Regulation temp.	76.0 °C/°F
Case-3	Defrost temp. (Sd)	2.0 °C/°F
	Regulation temp.	56.0 °C/°F

Bottom navigation bar: Plant, Alarms/Events, Report, Configuration, Scheduler.

Device details

On entering the details for each individual device, the following sub-sections are available for the specific device:

Read variables
Write parameters
Parameters broadcast
Active alarms
Concluded alarms
Graph

Bottom navigation bar: Plant, Alarms/Events, Report, Configuration, Scheduler, Back.

Read-only variables

In turn divided into:

Favourites

Most-used variables selected by the user.

All variables

All the variables that the device makes available for supervision

Read/write parameters

In turn divided into:

Favourites

Most-used parameters selected by the user.

All parameters

All the parameters that the device makes available for supervision.

Group 1 – Alarm configuration

List of alarm configuration parameters.

Group 2 – Control

List of control parameters.

Group 3 – Clock

List of parameters relating to the device's clock.

Group 4 – Device configuration

List of device configuration parameters.

Group 5 – Commands

List of parameters relating to the commands available.

Active alarms

List of active alarms on the device in question.

Concluded alarms

List of reset alarms on the device in question.

Graph

Possibility to plot the trend in certain logged variables for the device. The user can select the following graph options:

- day displayed
- time window: 1 hour, 3 hours, 12 hours, 24 hours
- grid to enhance display of the data


Start: 2013 12 09

Period: 24 hours

Grid: ON

Bottom navigation bar: Plant, Alarms/Events, Report, Configuration, Scheduler, Back.

Once the configuration parameters have been set, press the confirm button to generate the graph.

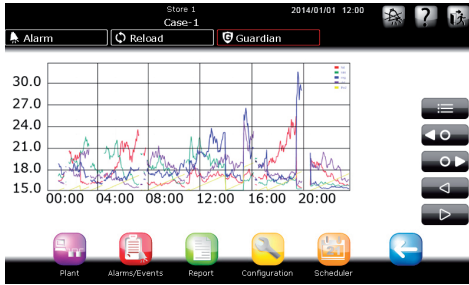

	Button for selecting the variables to be plotted, with the corresponding colour
	Move backwards between devices
	Move forwards between devices
	Move the selected time period backwards
	Move the selected time period forwards

Graph of the variables. The horizontal axis shows the time scale, while the vertical axis shows the values of the variable. (The colours have been set previously by the user in the CONFIGURATION menu).


use the and buttons to scroll the time axis and the and buttons to move from one device to another.

PlantWatchPRO can plot up to five values at the same time.

Search

To search for variables or parameters based on parts of the description or code.

Tree of the "Installation" menu functions

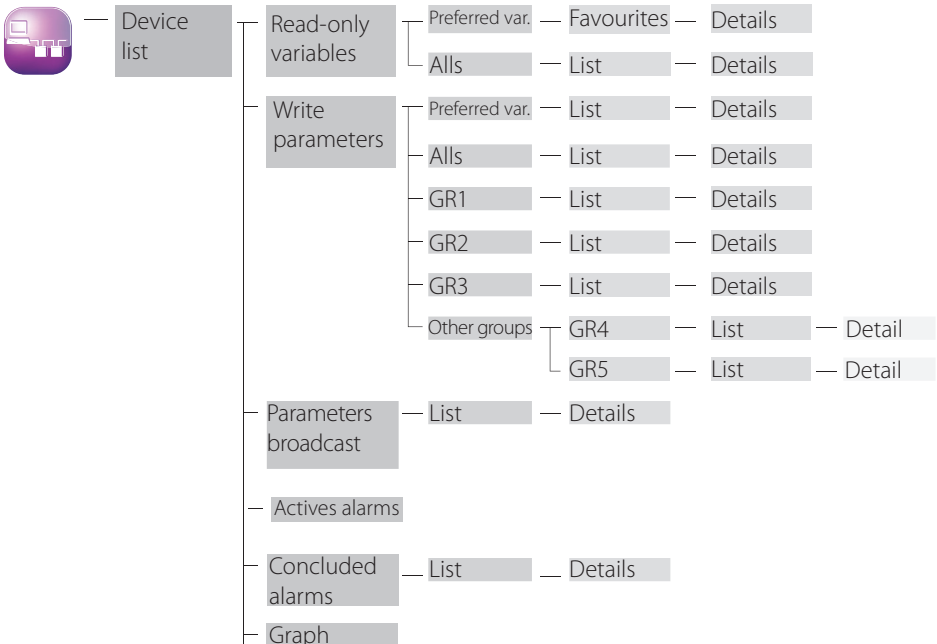


7. REPORTS

Configure report



Create report

Used to create a report, defining the name and description, the type (HACCP) and the list of the variables included.

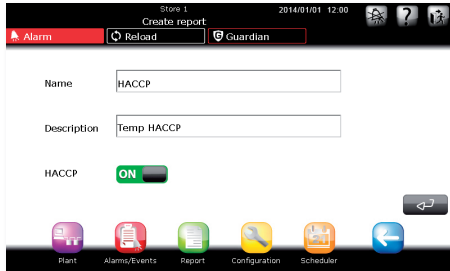

If the report is defined as HACCP, it may only include the HACCP variables for the devices in the installation. The definition of the device HACCP variables can be customised under Model configuration.

To simplify selection for the user, PWPRO will automatically check the variable, as in the example here. When clicking on the desired variable it will automatically be checked, clicking enter includes it in the report:

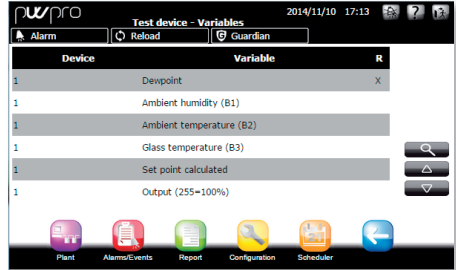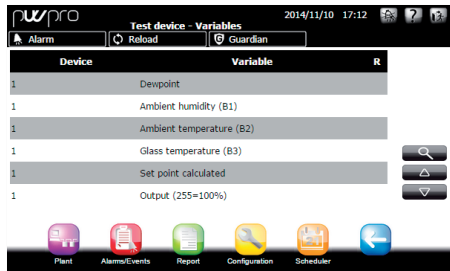

Edit report

Edit description

To modify the description of the report.

Edit configuration

To modify the list of the variables in the report.

Copy report

To generate a new report starting from an existing report.

Delete report

To delete the report.

Export report

Export HACCP report

Used to enter the values of the parameters (starting date, report name, period and frequency) corresponding to the HACCP report to be downloaded.

Export log report

Used to enter the values of the parameters (starting date, report name and period) corresponding to the log report to be downloaded.

Print report

Print HACCP report

Used to enter the values of the parameters (starting date, report name, period and frequency) corresponding to the HACCP report to be printed.

Print log report

Used to enter the values of the parameters (starting date, report name and period) corresponding to the log report to be printed.



PlantWatchPRO is compatible with any USB printer that supports PostScript language.




Via web, PlantWatchPRO opens a dialogue box prompting for the directory used to save the HACCP report (".rtf" format, compatible with Microsoft® Word) or log report (".csv" format, compatible with Microsoft® Excel).

Display data log

Directly displays the values of the logged variables.

Tree of the "Reports" menu functions

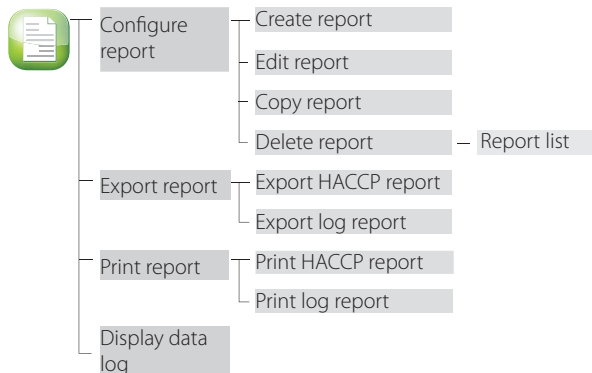

8. ALARMS/EVENTS

Active alarms

Displays the active alarms on the system;
key to alarm colours:

- red - highest priority;
- orange - high priority;
- yellow - medium priority;
- white - low priority.



If the message in the EVENT column is too long to be displayed in full, to read it select the corresponding row and open the details

Relay

Used to disable the relays activated by PlantWatchPRO. Pressing the corresponding fields and confirming (↵) disables the relays.

Download alarms

This saves the list of active alarms from a certain date onwards; the data is saved to a file in ".csv" format (compatible with Microsoft® Excel).


Concluded alarms

Shows the list of concluded alarms.

Events

List of the events saved by the system. The icons have the following meanings:

- information event
- error event
- warning event

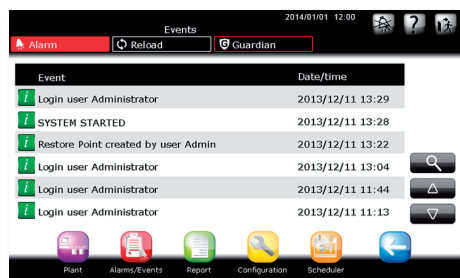


Tree of the "Alarms/events" menu functions"



How to respond to alarm signals from PlantWatchPRO

Below is a description of how alarms are shown on the PlantWatchPRO display and how to respond.

- 1 If the ALARM button turns red () an alarm is active on one of the field devices.

Enter ALARMS/EVENTS → ACTIVE ALARMS → to display the list of active alarms in the entire installation, highlighted in four different colours depending on the level of priority:

- red - highest;
- orange - high;
- yellow - medium;
- white - low.



In the example, "No Connection" alarm is activated on different devices in order to show the different colors and priorities.

- 2 From the list of active alarms, pressing the row showing the alarm in question accesses the page with the details of the alarm. This highlights the date and the time when the alarm was activated, plus three fields (ACK, CANCEL, and REM.) that are empty if the page is being accessed for the first time.




Abbreviations:



Ack. - acknowledge alarm;

Canc. - cancel alarm, that is, all the actions relating to the alarm are cancelled (e.g. send SMS...) before being undertaken by PlantWatchPRO;


Rem. - remove alarm from the list of active alarms.

- 3 Pressing the  button PlantWatchPRO records the user who performed the operation as the person acknowledging the alarm; in addition, the date and the time when the operation was performed are also recorded.



- 4 Pressing the  button again records the time and date the alarm was cancelled and who performed the operation; this may be a different user from the one who previously acknowledged the alarm.
- 5 Pressing  a third time records the identity of the user who removed the alarm on PlantWatchPRO.
- 6 Once the alarm has been removed, it no longer appears in the list of ACTIVE ALARMS, but rather can be seen in another screen with the list of CONCLUDED ALARMS.



Once no more alarms are active, the  button returns to its initial status.

- 7 Pressing the row with the desired alarm again opens the detail screen, showing the date, time and name of the user who acknowledged, cancelled and removed the alarm.



9. STORAGE DEVICE USE

The system can transfer data using a USB or SD memory key.

In fact, the user can download the logged values of the selected variables, the HACCP report, the configuration of the complete site, the changes made to various models (to be then exported to others sites for reuse) and the list of alarms activated in the installation.

The USB or SD memory key can also be used to upload new data to the system; this is useful, for example, for importing the configuration of a previously configured site, models created based on the default models or those available in the standard libraries, or those created using the special Device Creator (IDE package).

A USB or SD memory key can also be used to install new updated versions of the PlantWatchPRO software.

The following functions are only accessible directly on PlantWatchPRO and only using the memory key

(highlighted in the manual by 

- IMPORT MODEL;
- RESTORE SITE CONFIGURATION;
- UPDATE SOFTWARE.

Other functions that require a memory key, and are also accessible via web:

- EXPORT LOG REPORT;
- EXPORT HACCP REPORT;
- BACKUP SITE CONFIGURATION;
- EXPORT MODEL;
- DOWNLOAD ALARMS;
- UPDATE SOFTWARE.

The table below shows a list of the functions that use the memory key to save data; the names of the directories (created automatically by the software) where the data are saved are listed (with the corresponding addresses), as well as the format the file is downloaded in.

Function	File path	File format
DOWNLOAD HACCP REPORT	G:\export\site_name\report	.rtf
BACKUP SITE CONFIGURATION	G:\export\site_name\config	---
DOWNLOAD ALARMS	G:\export\site_name\alarms	.csv
EXPORT MODEL	G:\export\site_name\models	.xml



The USB or SD key must be formatted with the FAT32 file system.



"G:\\" is the name that usually denotes the removable memory drive on the PC, in this case, the USB memory key;
 "site_name" is the name that assigned to the directory where the files will be saved and is the name that the user has assigned to the site under CONFIGURATION → SITE INFORMATION.





The available device storage are:

- USB;
- SD.

Once having confirmed the insert USB key request screen, a list is shown to select the desired USB key from the options available. The description is shown as follows:

USB port - Key model – Manufacturer

Example:

USB 1 – DataTraveler G2 – Kingston

USB 2 - Transcend 2GB - JetFlash

The USB key used to perform the required operation can therefore be selected with precision.



CAREL

CAREL INDUSTRIES Hqs

Via dell'Industria, 11 - 35020 Brugine - Padova (Italy)

Tel. (+39) 049.9716611 - Fax (+39) 049.9716600

e-mail: CAREL@CAREL.com - www.CAREL.com

Agenzia / Agency: