



USER MANUAL





μChiller

+0300053EN - ENG Up to date version available on

www.carel.com



GENERAL WARNINGS



CAREL bases the development of its products on decades of experience in HVAC/R, on continuous investments in technological innovations to products, procedures and strict quality processes with in-circuit and functional testing on 100% of its products, and on the most innovative production technology available on the market. CAREL and its subsidiaries/ affiliates nonetheless cannot guarantee that all the aspects of the product and the software included with the product respond to the requirements of the final application, despite the product being developed according to start- of- the- art techniques. The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. CAREL may, based on specific agreements, act as a consultant for the successful commissioning of the final unit/application, however in no case does it accept liability for the correct operation of the final equipment/system. The CAREL product is a state-of-the-art product, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website www.carel.com. Each CAREL product, in relation to its advanced level of technology, requires setup/ configuration/programming/commissioning to be able to operate in the best possible way for the specific application. Failure to complete such operations, which are required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases. Only qualified personnel may install or carry out technical service on the product.

The customer must only use the product in the manner described in the documentation relating to the product. In addition to observing any further warnings described in this manual, the following warnings must be heeded for all CAREL products:

- prevent the electronic circuits from getting wet. Rain, humidity and all types of liquids or condensate contain corrosive minerals that may damage the electronic circuits. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not install the device in particularly hot environments. Too high temperatures may reduce the life of electronic devices, damage them and deform or melt the plastic parts. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not attempt to open the device in any way other thandescribed in the manual.
- do not drop, hit or shake the device, as the internal circuits and mechanisms may be irreparably damaged.
- do not use corrosive chemicals, solvents or aggressive detergents to clean the device.
- do not use the product for applications other than those specified in the technical manual.

All of the above suggestions likewise apply to the controllers, serial cards, programming keys or any other accessory in the CAREL product portfolio. CAREL adopts a policy of continual development. Consequently, CAREL reserves the right to make changes and improvements to any product described in this document without prior warning. The technical specifications shown in the manual may be changed without prior warning. The liability of CAREL in relation to its products is specified in the CAREL general contract conditions, available on the website www.carel.com and/ or by specific agreements with customers; specifically, to the extent where allowed by applicable legislation, in no case will CAREL, its employees or subsidiaries/affiliates be liable for any lost earnings or sales, losses of data and information, costs of replacement goods or services, damage to things or people, downtime or any direct, indirect, incidental, actual, punitive, exemplary, special or consequential damage of any kind whatsoever, whether contractual, extra-contractual or due to negligence, or any other liabilities deriving from the installation, use or impossibility to use the product, even if CAREL or its subsidiaries/affiliates are warned of the possibility of such damage.

DISPOSAL





Fig. 1

Fig. 2

INFORMATION FOR USERS ON THE CORRECT HANDLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

The product is made up of metal parts and plastic parts. In reference to European Union directive 2002/96/EC issued on 27 January 2003 and related national legislation, please note that:

- WEEE cannot be disposed of as municipal waste and such waste must be collected and disposed of separately;
- the public or private waste collection systems defined by local legislation must be used. In addition, the equipment can be returned to the distributor at the end of its working life when buying new equipment;
- the equipment may contain hazardous substances: the improper use or incorrect disposal of such may have negative effects on human health and on the environment;
- the symbol (crossed- out wheeled bin) shown on the product or on the packaging and on the instruction sheet indicates that the equipment has been introduced onto the market after 13 August 2005 and that it must be disposed of separately;
- in the event of illegal disposal of electrical and electronic waste, the penalties are specified by local waste disposal legislation.

Warranty on materials: 2 years (from production date, excluding consumables)

Approval: the quality and safety of CAREL S.p.A. products are guaranteed by the ISO 9001 certified design and production system.

IMPORTANT



READ CAREFULLY IN THE TEXT!

Separate as much as possible the probe and digital input cables from cables to inductive loads and power cables, so as to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel cables) and signal cables in the same conduits.

Key to the symbols:



Important: to bring critical issues to the attention of those using the product.



Note: to focus attention on important topics; in particular the practical application of the various product functions.



Important: This product is to be integrated and/or incorporated into the final apparatus or equipment. Verification of conformity to the laws and technical standards in force in the country where the final apparatus or equipment will be operated is the manufacturer's responsibility. Before delivering the product, Carel has already completed the checks and tests required by the relevant European directives and harmonised standards, using a typical test setup, which however cannot be considered as representing all possible conditions of the final installation.

µchiller +0300053EN rel. 2.5 - 03.10.2024



Index

1.	Int	roduction	7
	1.1	Main functions	7
	1.2	Models	8
	1.3	Accessories	8
2.	Ins	tallation	12
	2.1	Warnings	
	2.2	Panel version	
	2.3	DIN rail version	
	2.4	Electrical installation	
	2.5	Probe/digital input connection	
	2.6	Connection to user terminals	
	2.7	Positioning inside the panel	
	2.8	Electrical installation	
	2.9	Connecting serial ports with two circuits	17
	2.10	Connection to Power+ (for BLDC)	
		Positioning of probes/ components	
		Input/output configuration	
		Functional diagrams	
3.	Init	tial configuration	38
٥.	3.1	APPLICA app	
	3.2	Configuration procedure	
	3.3	Unit set-up parameter list	
	3.4	Applica Desktop	
	3.5	Configuration procedure with Applica Desktop	
		- Legacy Model	46
4.	He	er interface	10
4.	41	Introduction	
	4.2	User terminal	
	4.3	Standard display	
		• •	
5.		nctions	
	5.1	Temperature control	
	5.2	User pumps	
	5.3	Frost protection control	
	5.4	Compressor rotation	
	5.5	Compressor management	
	5.6	BLDC compressor protectors	
	5.7	BLDC comp. alarm prevention	
	5.8	Compressor alarms	
	5.9	Power+ Speed drive Expansion valve driver	
		Control of the expansion valve	
		Ultracap module and blackout management (DIN only)	
		Source pump	
		Logs	
		Source fans	
		Free cooling	
		Types of free cooling	
		Free cooling	
		Defrost	
		4-way valve management	
		Manual device management	
		Air/air unit management (Legacy model only)	
		Automatic heater management for water units	
	0	(Legacy model only)	86
	5.24	Condensing unit management	
		9	27

6.	Parameter table	88
	6.1 System	88
	6.2 Compressor	
	6.3 BLDC and Inverter	90
	6.4 Valve	90
	6.5 Source	91
	6.6 Input/output configuration	92
	6.7 mCH2 parameters (Legacy models only)	93
	6.8 BMS port	93
	6.9 Password	93
	6.10 Dashboard values	93
	6.11 Settings	94
7.	Supervisor table	95
	7.1 Coil Status	
	7.2 Holding Register	96
	7.3 Input Register	101
	7.4 Input Status	103
8.	Alarms and signals	106
•	8.1 Types of alarms	
	8.2 Alarm list	
^	Tack wise laws of costinue	100
9.	Technical specifications	
	9.1 Connector/cable table	
10	. Release notes	111



1. INTRODUCTION

μChiller is the Carel solution for complete management of air/water and water/water chillers and heat pumps, and condensing units. The solution also allows the field replacement of μchiller2 and μchiller2 SE with the new product (hereinafter called the Legacy model). The maximum configuration manages 2 compressors per circuit (*), up to a maximum of 2 circuits (using an expansion card for circuit 2). The distinctive element of μChiller is complete control of high- efficiency units through integrated management of electronic expansion valves (ExV) and brushless BLDC compressors, thus ensuring greater compressor protection and reliability and a high-efficiency unit. The user terminal allows wireless connectivity with mobile devices and is built- in on the panel mounted models, or sold separately on DIN rail mounted models. CAREL's "APPLICA" app, available on Google Play for the Android operating system, makes it easier to configure parameters and commission the unit in the field.

(*): 2 On/Off compressors or 1 BLDC compressor + 1 On/Off compressor.

1.1 Main functions

Ref.	Description
Main features	Up to two circuits and 2 + 2 compressors
	Compressors in tandem configuration with possible BLDC compressor (*)
	Air/water chiller or heat pump (A/W)
	Water/water chiller or heat pump (W/W)
	Cooling-only condensing unit
	Reverse-cycle condensing unit
	Air/air unit, cooling only (Legacy models only)
	Air/air unit, reverse-cycle (Legacy models only)
	1 evaporator per unit (2 evaporators on Legacy model only)
	Reverse-cycle water/water unit with reversal on the hydronic circuit
	Air-cooled condenser with separate/shared air circuit for A/W units
	Water-cooled condenser with single circuit for W/W units
Handan	3
Hardware	Panel mounted model: management of ON-OFF compressors
	DIN rail mounted model: management of ON-OFF compressors
	DIN rail mounted model, enhanced: management of ON-OFF compressors
	DIN rail mounted model, high efficiency: management of BLDC compressors
User interface	2-row 7-segment LED display, optional pGDx graphic display, communication with
	APPLICA app (compatible with NFC and BTLE) for mobile devices
Temperature control	PID at start-up
	PID when running
	Set point compensation on outdoor temperature
Compressor rotation	FIFO or timed
Compressor management	Generic scroll compressors - Specific BLDC compressors (see list on KSA at:
	KSA / SW&Support /Configuration & Updating software / ST Configuration / Refrigerant Gases)
Oil management with BLDC	Oil recovery function (extended operation at part load)
5	Oil equalisation (tandem with BLDC compressor)
Circuit destabilisation	Forced compressor rotation (extended operation at part load)
ExV driver	Built-in valve driver on enhanced and high efficiency models
EXV direct	External driver management via FieldBus port (all versions)
Programming with time bands	Unit ON-OFF or 2nd set point (1 time band per day)
riogramming with time bands	"Noise reduction" function for condenser fans (1 time band per day)
User pumps	1/2 pumps (2 pumps only with 2 circuits)
	Rotation by time or with pump overload alarm
	Cyclical activation during standby
Water-cooled condenser	1 common pump for both circuits
Air-cooled condenser	Independent fans on each circuit or common to both circuits
	On/off or modulating fans with condensing temperature control
	Optimised start-up to quickly bring the compressor(s) to steady operation
	Fan anti-block protection (harsh climate)
Defrost	Simultaneous
	Separate
	Independent
	Only when the fans are used
	Defrost interval managed based on outside temperature
	(Sliding defrost)
Prevent	Prevention of scroll compressor operating limits in relation to condensing and evaporation temperature
	Evaporator frost prevention
	Total management of the BLDC compressor envelope limits
Alarms	
Aidillis	Management of automatic and manual reset according to alarm severity (see "Alarms").
	Alarm log (up to 20 events): alarm and reset date and time recorded
Connectivity/supervision	RS485 serial port
	Baud rate up to 115200 bit/s
	Frame configurable by parity (none, even, odd) and stop bits (1 or 2); databits fixed at 8 bits.
	Frame configurable by Parity (None, Even, Odd) and StopBits (1 or 2); Databits fixed at 8 bits.

Tab. 1.a

μchiller +0300053EN rel. 2.5 - 03.10.2024

^(*) the configuration envisaged requires the capacity of the ON/OFF compressor to be equal to 60% of the capacity of the BLDC compressor (at maximum speed).





1.2 Models

P/N	Assembly	Connectivity	Compresso management:	Notes	Electronic expansion valve management
UCHBP00000190	panel	NFC	On/Off	Standard version	bipolar: with EVD Evolution driver
UCHBP00000200	panel	NFC, Bluetooth (BLE)	On/Off	Standard version	bipolar: with EVD Evolution driver
UCHBD00001230	DIN rail	-	On/Off	Standard version	bipolar: with EVD Evolution driver
UCHBDE0001150	DIN rail	-	On/Off	Enhanced version	unipolar: built-in; bipolar with external EVD Evolution driver
UCHBDH0001150	DIN rail	-	On/Off and BLDC	-	unipolar: built-in; bipolar with external EVD Evolution driver
UCHBE00001230: 2nd circuit expansion	DIN rail	-	On/Off and BLDC		bipolar: with external EVD Evolution driver
UCHBE00001150: 2nd circuit expansion	DIN rail	-	On/Off and BLDC	Enhanced version	unipolar: built-in; bipolar: with external EVD Evolution driver
UCHBP000X0190	panel	NFC	On/Off	Legacy version	bipolar: with EVD Evolution driver
UCHBP000X0200	NFC, Bluetooth	NFC, Bluetooth	On/Off	Legacy version	bipolar: with EVD Evolution driver
UCHBD000X1230	DIN rail	-	On/Off	Legacy version	bipolar: with EVD Evolution driver

Tab. 1.b

Connectors available

P/N	Description	
UCHCOND000	uChiller DIN Molex/Free connector kit	
UCHCOND010	Chiller DIN Molex/Free 100 cm connector and cable kit	
UCHCONP000	Chiller panel Molex/Free connector kit	
UCHCONP010	Chiller panel Molex/Free 100 cm connector and cable kit	
UCHCONP030	uChiller panel Molex/Free 300cm connector and cable kit	
UCHCONPMC0	Panel mount adapter kit for MCH2	

Tab. 1.c

1.3 Accessories

1.3.1 µChiller user terminal

For DIN rail mounted models (built-in on the panel model). The user terminal includes the display and keypad, comprising four buttons that, when pressed alone or combined with other buttons, access the operations available for the "User" and "Service" profiles (see the paragraph on "Commissioning"). Connectivity - NFC or NFC + Bluetooth (BLE) based on the model - allows interaction with mobile devices and simplifies unit commissioning (after having installed the CAREL "Applica" APP for the Android operating system, see chapters "Commissioning" and "User interface"). For assembly, see the technical leaflet +0500146IE.



Part number	Description
AX5000PD20A20	User terminal (NFC)
AX5000PD20A30	User terminal (NFC, Bluetooth BLE)
ACS00CB000020	Connection cable L=1.5 m
ACS00CB000010	Connection cable L=3 m

Fig. 1.a Tab. 1.d

1.3.2 pGDx Touch user terminal

The 4.3" pGDx graphic terminal is part of the touch screen family designed to make the user interface simple and intuitive. The electronic technology used and the 65K colour display enable management of high quality images and advanced features to ensure a high aesthetic standard. The touch screen display guarantees simple human-machine interaction, making it easier to browse between the various screens. See the technical leaflet +050001895. To update the pGDx, an update package is available on KSA, in the uChiller/pGDx Application section. For the interface to function correctly, the uChiller FW and pGDx FW must be aligned to the same version. The uChiller version is also indicated in the name of the update package.



Part number	Description
PGR04****B***	pGDx, 1 x RS485 port, 1 x 24 Vdc power connector, 1 optional keypad
	connector
PGR04****C***	pGDx, 1 x opto-isolated RS485 port, 1 x 24 Vdc power connector, 1
	optional keypad connector, 1 Ethernet port

Fig. 1.b Tab. 1.e

8 Introduction µchiller +0300053EN rel. 2.5 - 03.10.2024



1.3.3 EVD Evolution/EVD Evolution twin valve driver

The Enhanced and High Efficiency models have the driver built-into the controller, able to drive unipolar valves (up to Carel model E3V, with a cooling capacity less than 90-100kW); all versions can be connected to the external EVD Evolution driver to drive bipolar valves (with a higher cooling capacity).





	Part number	Description	
	EVD0000T20 EVD evolution twin universal (RS485/Modbus)		
	EVD0000T21	EVD evolution twin universal, (RS485/Modbus) multiple pack of 10 pcs.	
	EVD0000T50 EVD evolution twin Carel valve (RS485/Modbus)		
EVD0000T51 EVD evolution twin Carel valve, (RS485/Modbus) multiple pack of 10 pcs.			

Fig. 1.c

Tab. 1.f

1.3.4 Temperature sensors

NTC sensors for measuring the temperatures in the user circuit, the outdoor air or source, and the refrigeration circuit. NTC**HT sensors are recommended for discharge temperature measurement (with BLDC compressors in heat pump mode).





Fig. 1.d

Part number	Туре	Range
NTC060HF01	10 kΩ ±1% @25°C, IP67	-50 to 90°C strap-on
NTC060HP00	10 kΩ ±1% @25°C, IP67	-50 to 50 °C (105°C in air)
NTC060HT00	50 kΩ ±1% @25°C, IP67	-30 to 100°C RH95% in air (150°C in a dry environment)

Tab. 1.g



Notice: see manual +040010025 (ITA- ENG) /+040010026 (FRE- GER) for guidelines on installing the sensors on the unit.

1.3.5 Pressure sensors

These measure:

- 1. evaporation pressure in the circuit, used to control superheat, manage the evaporator frost protection function and the operating limits;
- 2. condensing pressure in the circuit, to control the condensing stage and manage the operating limits.

See the technical leaflet +050000488.







Fig. 1.e

Part number	Туре	Application	Range
SPKT0*13P*	0-5V	LP R407C, R290	-1 to 9.3 bars
SPKT0*43P*	0-5V	LP R410A, R32	0 to 17.3 bars
SPKT0*33P*	0-5V	HP R407C, R290	0 to 34.5 bars
SPKT0*B6P*	0-5V	HP R410A, R32	0 to 45 bars
SPKT0011C*	4-20mA	LP R407C, R290	0 to 10 bars
SPKT0041C*	4-20mA	LP R410A, R32	0 to 18.2 bars
SPKT0031C*	4-20mA	HP R407C, R290	0 to 30 bars
SPKT00B1C*	4-20mA	HP R410A, R32	0 to 44.8 bars
SPKC00*310	IP67 connection cable		L=2 to 12 m
SPKC00*311	IP67 connection cable - 50 pcs		L=0.65 to 1.3 m

Tab. 1.h

μchiller +0300053EN rel. 2.5 - 03.10.2024 Introduction





1.3.6 Unipolar valve (P/N E2V**FSAC*)



Used with a compatible stator from the E2VSTA03**series. Unipolar electronic expansion valve, managed directly by the controller, which guarantees precise refrigerant flow even at low flow- rates. See the technical leaflet +050001680.

1.3.7 Ultracap module (EVD0000UC0)



Fig. 1.g

The Ultracap module EVD0000UC0 is an optional external backup module for the EVD Evolution driver that ensures the valves are closed in the event of a power failure. The module guarantees temporary power supply to one EVD Evolution driver (single or twin) only in the event of a power failure, for enough time to immediately close the connected electronic valves (one or two). It therefore also avoids the need to install a solenoid valve in the refrigeration circuit, or a backup coil kit.

1.3.8 Ultracap module for unipolar valve (EVD000HAC0)



Fig. 1.h

The Ultracap module EVD000HAC0 is an optional device used with the μ Chiller models equipped with an integrated unipolar electronic valve driver. This external backup module closes the valve in the event of a power failure.

Part number	Description
EVD000HAC0	Ultracap module for HVAC ACU APPLICATIONS
ACS00CB002370	Ultracap module cable for unipolar valve 0.3 m

1.3.9 Phase control speed controllers



Fig. 1.i

FCS/FCR series speed controllers are available to control and optimise the performance of the condenser fans when connected to a μ Chiller family controller. These controllers are available in the single-phase and three-phase versions.

P/N	Description
FCSM042300	Speed controller, 0-10V 4A/230VAC
FCSM082300	Speed controller, 0-10V 8A/230VAC
FCSM122300	Speed controller, 0-10V 12A/230VAC
FCSM0423L0	Speed controller, 0-10V 4A/230VAC, linear output
FCSM0823L0	Speed controller, 0-10V 8A/230VAC, linear output
FCSM1223L0	Speed controller, 0-10V 12A/230VAC, linear output
FCR306402R	Speed controller, 3PH 400V, 06A, -20+50C, IP55, 0/10V
FCR309404R	Speed controller, 3PH 400V, 09A, -20+50C, IP55, 0/10V
FCR312402R	Speed controller, 3PH 400V, 12A, -20+50C, IP55, 0/10V

10 Introduction µchiller +0300053EN rel. 2.5 - 03.10.2024



1.3.10 Couldgate for tERA connection



CloudGate is CAREL's new family of IoT gateways to enable monitoring and tERA platform services for HVAC/R systems with up to 10 units.

Compact, standard installation inside an electrical panel and a local LED interface with immediate indication of communication status make Cloudgate easy to install in the field, without the need for experts in connectivity devices.

1.3.11 Connector kit



Part number	Description	
UCHCONP000	uChiller panel MOLEX/free connector kit	
UCHCONP010	uChiller panel MOLEX/free connector and 100 cm cable kit	
UCHCONP030	uChiller panel Molex/free connector and 300 cm cable kit	
UCHCOND000	uChiller DIN MOLEX/free connector kit	
UCHCOND010	uChiller DIN MOLEX/free connector and 100 cm cable kit	
UCHCONPMC0	Adapter kit for MCH2	

Fig. 1.k

1.3.12 Cables for LED displays (DIN models only)



Part number	Description
ACS00CB000010	Display cable AX JST/JST 3 M
ACS00CB000020	Display cable AX JST/JST 1.5 m
ACS00CB000012	Display cable AX JST/JST 3 m, multiple pack (10 pcs)
ACS00CB000022	Display cable AX JST/JST 1.5 m, multiple pack (10 pcs)

Fig. 1.l

1.3.13 USB/RS485 converter (CVSTDUMOR0)



Fig. 1.m

Electronic device used to interface an RS485 network to a personal computer via the USB port. See the technical leaflet +050000590.

μchiller +0300053EN rel. 2.5 - 03.10.2024



2. INSTALLATION

2.1 Warnings

Important: avoid installing the controller in environments with the following characteristics:

- temperature and humidity that do not comply with the ambient operating conditions (see "Technical specifications");
- · strong vibrations or knocks;
- · exposure to water sprays or condensate;
- exposure to aggressive and polluting atmospheres (e.g.: sulphur and ammonia gases, saline mist, smoke) which may cause corrosion and/or oxidation;
- strong magnetic and/or radio frequency interference (thus avoid installation near transmitting
- antennae);
- · exposure to direct sunlight and the elements in general;
- · wide and rapid fluctuations in ambient temperature;
- exposure to dust (formation of corrosive patina with possible oxidation and reduction of insulation).

2.2 Panel version

2.2.1 Dimensions - mm (in)

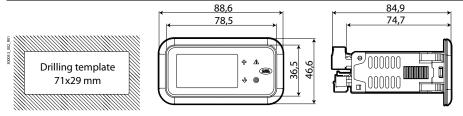


Fig. 2.a

2.2.2 Assembly

▲ Important: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

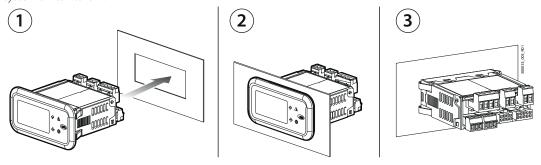


Fig. 2.b

- 3. Place the controller in the opening, pressing lightly on the side anchoring tabs.
- 4. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel).

Important: IP65 front protection is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface: ≤ 0.5 mm;
- thickness of the electrical panel sheet metal: 0.8-2 mm;
- maximum roughness of the surface where the gasket is applied: \leq 120 μ m.

Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product.



2.2.3 Removal

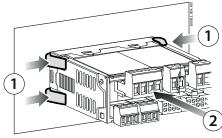


Fig. 2.c


Open the electrical panel from the rear and press the anchoring tabs and then the controller to remove it.


- 1. Gently press the side anchoring tabs on the controller;
- 2. Exert slight pressure on the controller until it is removed.

▲ Important: the operation does not require the use of a screwdriver or other tools.

2.3 DIN rail version

2.3.1 Dimensions - mm(in)

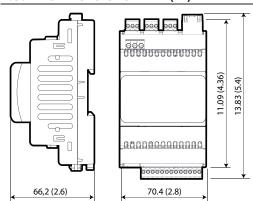

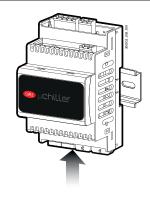

Apply slight pressure to the controller resting on the DIN rail until the rear tab clicks into place.

Fig. 2.d

2.3.2 Removal

Use a screwdriver as a lever in the hole to lift and release the tab. The tab is held in the locked position by return springs.

2.4 Electrical installation

Important: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

2.4.1 Description of the terminals

Panel model

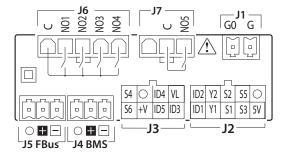


Fig. 2.e





DIN rail model

Basic


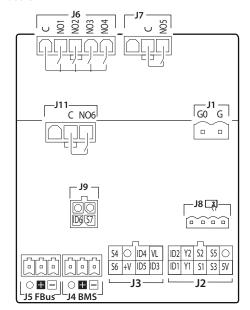


Fig. 2.f

Enhanced/ High Efficiency

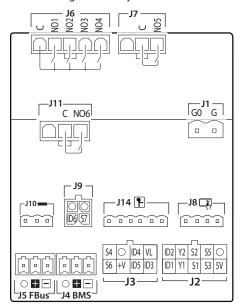


Ref.		Description
J1	G	Power supply
	G0	Power supply: reference
J2	5V	Ratiometric probe power supply
	S3	Analogue input 3
	S1	Analogue input 1
	Y1	Analogue output 1
	ID1	Digital input 1
	0	GND: reference for probes, digital inputs and analogue outputs
	S5	Analogue input 5
	S2	Analogue input 2
	Y2	Analogue output 2
	ID2	Digital input 2
J3	ID3	Digital input 3
	ID5	Digital input 5
	+V	Power supply to 4-20 mA active probes
	S6	Analogue input 6
	VL	Not used
	ID4	Digital input 4
	0	GND: reference for analogue and digital inputs
	S4	Analogue input 4
J4	-	BMS serial port (RS485): Rx/Tx-
	+	BMS serial port (RS485): Rx/Tx+
	0	BMS serial port (RS485): GND

Ref.		Description
J5	-	Fieldbus serial port (RS485): Rx/Tx -
	+	Fieldbus serial port (RS485): Rx/Tx +
	0	Fieldbus serial port (RS485): GND
J6	С	Common for relays 1, 2, 3, 4
	NO1	Digital output (relay) 1
	NO2	Digital output (relay) 2
	NO3	Digital output (relay) 3
	NO4	Digital output (relay) 4
 J7	С	Common for relay 5
	NO5	Digital output (relay) 5
J8	-	Unit terminal connector (AX5* or PGR04*)
J9	S7	Analogue input 7
	ID6	Digital input 6
	0	Input reference
	0	Input reference
J10*	G	Power supply for Ultracap module
	G0	
	Vbat	Emergency power from Ultracap modul
J11	-	(not used)
	C	Common for relay 6
	NO6	Digital output (relay) 6
J14*		Carel ExV unipolar valve connector

Tab. 2.a

2.5 Probe/digital input connection

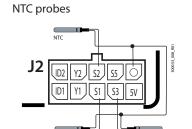

0-5 V ratiometric pressure probes


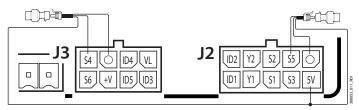


Fig. 2.h

^(*) for DIN Enhanced / High Efficiency models only



0-10 Vdc probes

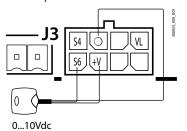

4-20 mA probes/digital inputs

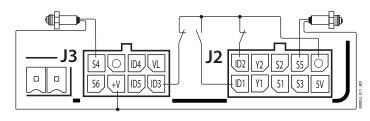


Fig. 2.i Fig. 2.j

Cantuallantamainala	Pressure transducer with current signal		
Controller terminals	1		
+V	Power supply	brown	
S1	Signal	white	

Controller terminals	Pressure transducer with current signal		
Controller terminals	1	_	
5V	Power supply	black	
0	Power reference	green	
S1	Signal	white	
		TIO	

Tab. 2.b

Tab. 2.c



Notice: if an ExV valve is connected, an NTC temperature sensor must also be connected to read the gas suction temperature: this sensor must be connected to one of the available inputs provided. For the position of the sensor on the suction pipe, see the installation guide +040010025 "Sonde e sensori - Guida alla scelta e all'installazione ottimale / Probes and sensors - Selection and optimal installation guide", available at carel.com under product => sensor => quick guide.

2.6 Connection to user terminals

2.6.1 Panel model

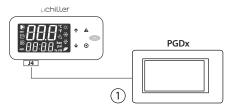


Fig. 2.k

2.6.2 DIN rail model

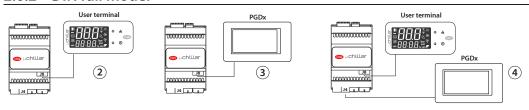


Fig. 2.l

Connection to connector J4

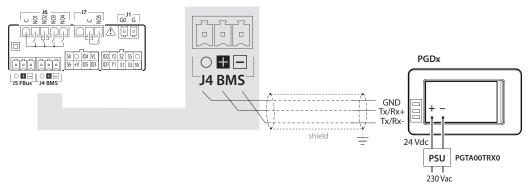


Fig. 2.m





Connection to connector J8

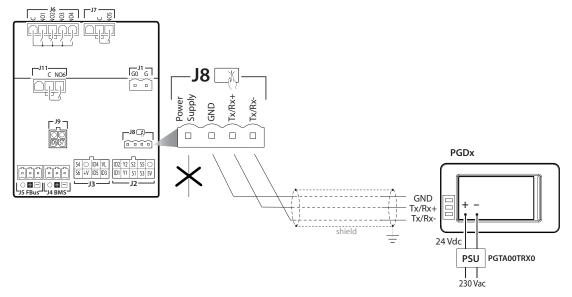


Fig. 2.n

Notice: (1) and (4) with PGDx connected to port J4 (BMS): the parameters must be set as shown in the following table.

Communication parameters

User	Display	Code	Description	Value	3
S	Х	Hd00	BMS: serial address	1	
S	Х	Hd01	BMS: baud rate	6	
			3=9600; 4=19200; 5=38400; 6=57600; 7=115200		
S	Х	Hd02	BMS: settings	0	
			0=8-NONE-1; 1=8-NONE-2; 2=8-EVEN-1; 3=8-EVEN-2; 4=8-ODD-1; 5=8-ODD-2		

Tab. 2.d

2.6.3 pGDx Data Transfer

pGDx transfers all Modbus data available on the uChiller BMS 485 port via its ETH port, using Modbus TCP/IP protocol. A supervisor connected to the pGDx ETH port can thus read/write the same parameters available on the BMS port. The pGDx can therefore be added to the system without losing the features required for supervision.

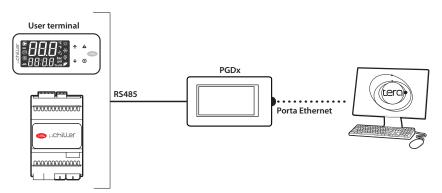


Fig. 2.0

2.7 Positioning inside the panel

The position of the controller in the electrical cabinet must be chosen so as to guarantee correct physical separation from the power components (solenoids, contactors, actuators, inverters, ...) and the connected cables. Proximity to such devices/cables may create random malfunctions that are not immediately evident. The structure of the panel must allow the correct flow of cooling air.



2.8 Electrical installation

▲ Important: When laying the wiring, "physically" separate the power part from the control part. The proximity of these two sets of wires will, in most cases, cause problems of induced disturbance or, over time, malfunctions or damage to the components. The ideal solution is to house these two circuits in two separate cabinets. Sometimes this is not possible, and therefore the power part and the control part must be installed in two separate areas inside the same panel.

For the control signals, it is recommended to use shielded cables with twisted wires. If the control cables have to cross over the power cables, the intersections must be as near as possible to 90 degrees, always avoiding running the control cables parallel to the power cables.

Pay attention to the following warnings:

- use cable ends suitable for the corresponding terminals. Loosen each screw and insert the cable ends, then tighten the screws. When the operation is completed, slightly tug the cables to check they are sufficiently tight;
- separate as much as possible the probe signal, digital input and serial line cables from the cables carrying inductive loads and power cables to avoid possible electromagnetic disturbance. Never run power cables (including the electrical cables) and probe signal cables in the same conduits. Do not install the probe cables in the immediate vicinity of power devices (contactors, circuit breakers or similar);
- reduce the path of the probe cables as much as possible, and avoid spiral paths that enclose power devices;
- avoid touching or nearly touching the electronic components fitted on the boards to avoid electrostatic discharges (extremely damaging) from the operator to the components;
- do not secure the cables to the terminals by pressing the screwdriver with excessive force, to avoid damaging the controller: maximum tightening torque 0.22-0.25 N•m;
- for applications subject to considerable vibrations (1.5 mm pk- pk 10/55 Hz), secure the cables connected to the controller around 3 cm from the connectors using clamps;
- all the extra low voltage connections (analogue and digital inputs, analogue outputs, serial bus connections, power supplies) must have reinforced or double insulation from the mains network.

2.9 Connecting serial ports with two circuits

For serial connections (FBus and BMS ports), the cables used must be suitable for the RS485 standard (shielded twisted pair, see the specifications in the following table). The earth connection of the shield must be made using the shortest connection possible on the metal plate at the bottom of the electrical panel.

Main device	Serial port	I ma asy (ma)	Wire/wire capaci-	Resistance on first and last	Max no. of secondary	Data rate
Main device		Lmax (m)	tance (pF/m)	device	devices on bus	(bit/s)
μChiller	FBus	10	<90	120 Ω	16	19200
PC (supervision)	BMS	500	<90	120 Ω	16	115200

Tab. 2.e

Notice: 120 Ω 1/4W terminating resistors on the first and last devices in the network must be used when the length exceeds 100 m.

For two-circuit units, the power supply connections must be in phase between the two controllers (G0 on the main controller and G0 on the secondary controller connected to the same power supply wire); the serial connection between the two controllers (J5 FBus on the main and J4 BMS on the secondary) must be made as shown in the figure (+ with + and - with -).

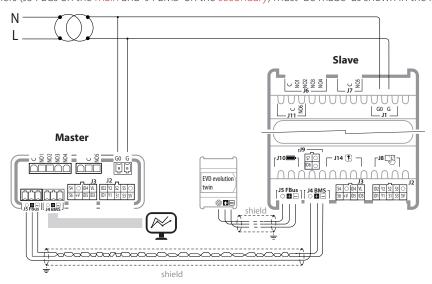


Fig. 2.p





2.10 Connection to Power+ (for BLDC)

For the serial connection between the controller and the Power+ speed drive, see the specific manual. Also see the following diagrams.

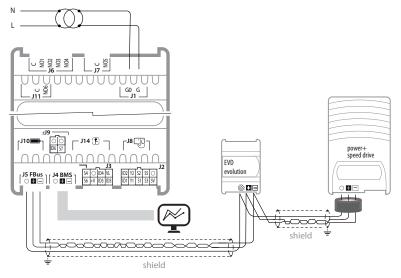


Fig. 2.q

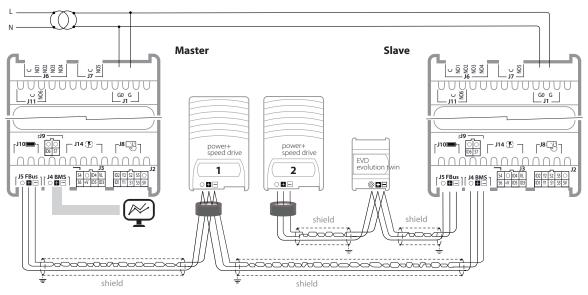


Fig. 2.r

Notice: if connecting Power+ (for BLDC) and EVD evolution, the connection parameters are not configurable, and must be set as shown in the table.


Device	Address	Network settings	Baudrate
Power+ speed drive 1	1	8 - NONE - 2	19200
Power+ speed drive 2	1	8 - NONE - 2	19200
EVD evolution	198	8 - NONE -2	19200

Tab. 2.f



2.11 Positioning of probes/ components

Water-cooled unit

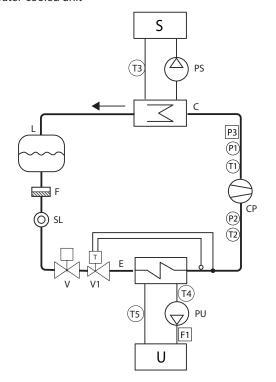

Air-cooled unit

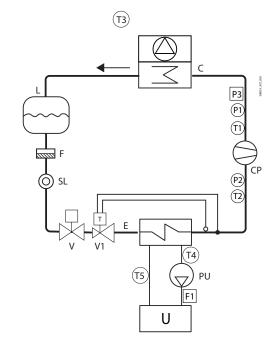


Fig. 2.s

Ref.	Description
S	Source
U	User
E	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
C	Condenser
SL	Liquid sightglass
P1	Condensing pressure transducer
V	Solenoid valve
V1	Thermostatic expansion valve

Fig. 2.t


Ref.	Description	
PU	User pump	
PS	Source pump	
P2	Evaporation pressure transducer	
T1	Discharge temperature	
T2	Suction temperature	
P3	High pressure switch	
T3	Outside air temperature	
F1	User pump flow switch	
T4	Water delivery temperature (to) user	
T5	Water return temperature (from) user	
T6	Water delivery temperature (to) source	

Tab. 2.g

2.12 Input/output configuration

Information on how to configure the μ Chiller Legacy inputs and outputs to replace mCH2 and mCH2 SE is shown below.

Panel mounting model

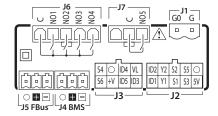

DIN rail model (Basic)

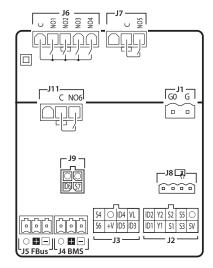


Fig. 2.u Fig. 2.v





2.12.1 Analogue inputs

The analogue inputs on μ Chiller are divided into four groups, according to the type of probe connected. The groups and the list of parameters used to configure the different analogue inputs are shown below:

Group	Sensor	Main config. parameter	Secondary config. parameter
GRP1	S1	HC31	HC41
	S2	HC32	HC42
	S3	HC00	HC43
GRP2	S4	HC34	HC44
	S5	HC35	HC45
GRP3	S6	HC03	HC05
GRP4*	S7*	HC04*	HC47

Tab. 2.h

(*) available only on DIN version

The meanings assigned to the analogue inputs according to the various groups for the circuit 1 controller are as follows:

Value	GRP1	GRP2	GRP3
0	Not used	Not used	Not used
1	Source delivery water temp.	Source delivery water temp.	Source delivery water temp.
2	Outside temperature	Outside temperature	Outside temperature
3	Discharge temperature circuit 1	Discharge temperature circuit 1	Remote set point
4	Condensing temperature circ. 1	Condensing temperature circ. 1	Discharge temperature circuit 1
5	Suction temperature circ. 1	Suction temperature circ. 1	Condensing temperature circ. 1
6	Evaporation temperature circ. 1	Evaporation temperature circ. 1	Suction temperature circ. 1
7	System return water temperature	Condensing pressure circ. 1 *	Evaporation temperature circ. 1
8	System delivery water temp.	Evaporation pressure circ. 1 *	Condensing pressure circ. 1 *
9		System return water temperature	Evaporation pressure circ. 1 *
10		System delivery water temp.	System return water temperature
11			System delivery water temp.
12			Capacity request

Tab. 2.i

(*) On the Legacy model, the evaporation pressure sensor on circ. 1 and condensing pressure sensor on circ. 1 are not used...

The meanings assigned to the analogue inputs according to the various groups for the circuit 2 controller are as follows:

Value	GRP1	GRP2	GRP3
0	Not used	Not used	Not used
1	Source delivery water temp.	Source delivery water temp.	Source delivery water temp.
2	Outside temperature	Outside temperature	Outside temperature
3	Discharge temperature circuit 2	Discharge temperature circuit 2	Remote set point
4	Condensing temperature circ. 2	Condensing temperature circ. 2	Discharge temperature circuit 2
5	Suction temperature circ. 2	Suction temperature circ. 2	Condensing temperature circ. 2
6	Evaporation temperature circ. 2	Evaporation temperature circ. 2	Suction temperature circ. 2
7	Common delivery water temperature	Condensing pressure circ. 2	Evaporation temperature circ. 2
8	Evap. water delivery temp. 2	Evaporation pressure circ. 2	Condensing pressure circ. 2
9		Common delivery water temperature	Evaporation pressure circ. 2
10		Evap. water delivery temp. 2	Common delivery water temperature
11			Evaporator 2 water outlet temperature
12			Capacity request

Tab. 2.j

2.12.2 Digital inputs

Below is the list of parameters used to configure the digital inputs:

Digital input	Main configuration parameter	Secondary configuration parameter
ID1	HC14	HC16
ID2	HC15	HC17
ID3	High pressure switch circ. 1	High pressure switch circ. 2
ID4	HC06	HC09
ID5	HC07	HC10
ID6*	HC08*	HC11

Tab. 2.k

(*) available only on DIN version



The digital input configuration parameters can have the following meaning:

Value	Main description (circuit 1)	Secondary description (circuit 2)	
0	Not used	Not used	
1	User pump flow switch	User pump flow switch	
2 *	Comp. 1 thermal protector circ. 1	Comp. 1 thermal prot circ. 2	
3 *	Comp. 2 thermal protector circ. 1	Comp. 2 thermal prot. circ. 2	
4	Remote on/off	Remote on/off	
5	Cooling/heating	Cooling/heating	
6	2nd set point	2nd set point	
7	Remote alarm	Remote alarm	
8	User pump 1 thermal protector	User pump 1 thermal protector	
9	Low pressure switch circ. 1	Low pressure switch circ. 2	
10	User pump 2 thermal protector	User pump 2 thermal protector	
11**	Comp. 1 request circ. 1	Comp. 1 request circ. 2	
12**	Comp. 2 request circ. 1	Comp. 2 request circ. 2	
13	Source fan/pump overload	Source fan/pump overload	

Tab. 2.I

(*) In the Legacy model, compressor 1 thermal protector circ.1 and compressor 1 thermal protector circ. 2 are circuit 1 and circuit 2 thermal protector respectively. In the Legacy model, compressor 2 thermal protector circ.1 and compressor 2 thermal protector circ. 2 are not used.

(**) available only for condensing units.

2.12.3 Analogue outputs

Below is the list of parameters used to configure the analogue outputs:

Analogue output	Main configuration parameter	Secondary configuration parameter
Y1	HC71	HC81
Y2	HC72	HC82

Tab. 2.m

The analogue input configuration parameters can have the following meaning:

Value	Main description (circuit 1)	Secondary description (circuit 2)
0	Not used	Not used
1	On-off source fan/pump circ. 1	On-off source fan/pump circ. 2
2	Modulating source fan circ. 1	Modulating source fan circ.2
3	Free cooling	AC compressor circ. 2
4	AC compressor circ. 1	

Tab. 2.n

2.12.4 Digital outputs

Below is the list of parameters used to configure the digital outputs:

Digital input	Main configuration parameter	Secondary configuration parameter
NO1	HC51	HC61
NO2	HC52	HC62
NO3	HC53	HC63
NO4	HC54	HC64
NO5	HC55	HC65
NO6*	HC56	HC66

Tab. 2.0

(*) available only on DIN version

The digital output configuration parameters can have the following meaning:

Value	Main description (circuit 1)	Secondary description (circuit 2)
0	Not used	Not used
1	Compressor1 circuit 1	Compressor1 circuit 2
2	Compressor 2 circuit 1	Compressor 2 circuit 2
3	User heater 1	User heater 2
4	User pump 1 / user fan	User pump 2
5	Source pump / fan	Source pump / fan
6	Frost protection heater evaporator 1	Frost protection heater evaporator 2
7 4-way valve circuit 1 4-way valve circuit 2		4-way valve circuit 2
8	Oil equalisation valve circuit 1 Oil equalisation valve circuit 2	
9	Freecooling valve	
10	General alarm	
11	User pump 2	
12	User heater 2	

Tab. 2.p





2.13 Functional diagrams

This chapter illustrates some examples of possible configurations for the types of units that can be controlled by uChiller. The configurations shown are examples only and are not a complete list of all possible combinations.


As regards the type of sensors, the one shown in the configurations represents the default.

However, other types of sensors can also be configured, such as the 4-20 mA active pressure sensor rather than the 0-5 V ratio-metric sensor.

For detailed information on the I/O configuration parameters, see §3.3.2 I/O configuration.

2.13.1 Chillers, On/Off compressors and thermostatic expansion valve

Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

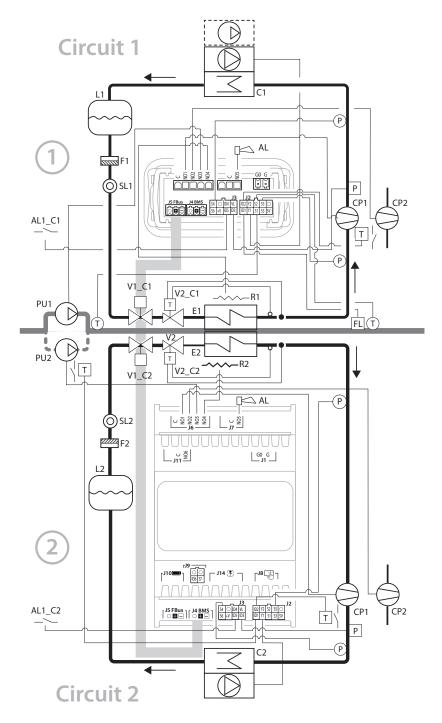

Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
PU1/2	User pump 1/2
L1/2	Liquid receiver 1/2
AL1_C1/2	Remote alarm circuit 1/2
CP1/2	Compressor 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Thermostatic expansion valve
	circuit 1
V2_C2	Thermostatic expansion valve
	circuit 2
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
AL	Alarm
R1/2	Frost protection heater 1/2
Р	Pressure transducer/
	pressure switch
Τ	Temperature probe/
	thermostat

Fig. 2.w



Ref.	Description	Type	Configuration parameters	
S1	Return temperature from user	NTC	Hc31	
S2	Delivery temperature to user	NTC	Hc32	
S3	Not present	-	Hc00	
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042	
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039	
S6	Not present	-	Hc03; U025; U026; U027	

Tab. 2.r

Analogue inputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Not present	-	Hc43
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027



Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061

Tab. 2.t

Digital inputs - Secondary circuit 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10;
ID6	Not present	Hc11

Tab. 2.u

Digital outputs - Main circuit 1

Ref.	Description	Configuration parameters
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Frost protection heater (*)	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55: U064

Tab. 2.v

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration parameters
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
	Frost protection heater (*)	Hc64; U066; S063; U065
C5-NO5	Not used	Hc65; U064
C6-NO6	Not used	Hc66

Tab. 2.w

Analogue outputs - Main circuit 1

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.x

Analogue outputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	


Tab. 2.y





2.13.2 Chillers, On/Off compressors with free cooling and thermostatic expansion valve

Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

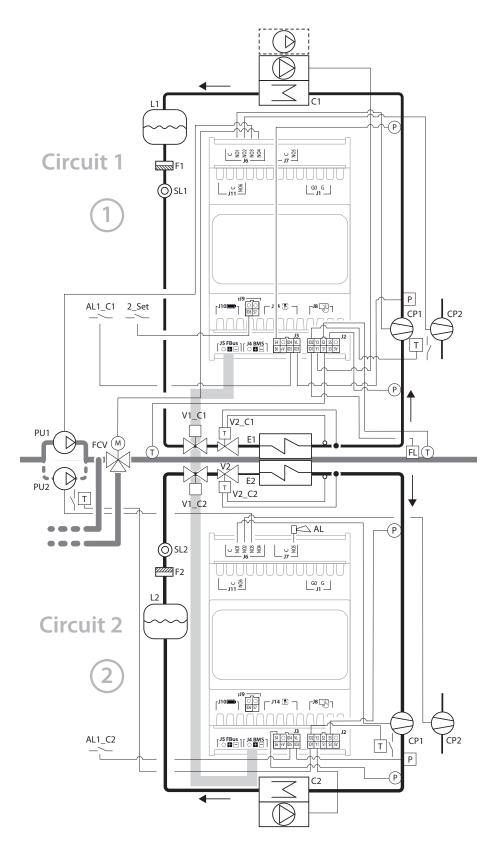

Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Thermostatic expansion
	valve circuit 1
V2_C2	Thermostatic expansion
	valve circuit 2
FCV	Free cooling valve
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
CP1/2	Compressor 1/2
PU1/2	User pump 1/2
Р	Pressure transducer/
	pressure switch
Τ	Temperature probe/
	thermostat
AL	Alarm
AL1_	Remote alarm circuit
C1/2	1/2
2_Set	2nd set point
L1/2	Liquid receiver 1/2

Fig. 2.x Tab. 2.z



Ref.	Description	Туре	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027

Tab. 2.aa

Analogue inputs - Secondary circuit 1

Ref.	Description	Туре	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Not present	-	Hc43
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027

Tab. 2.ab



Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters	
ID1	User pump flow switch	Hc14; U060	
ID2	Compressor 1 overload	Hc15; C035	
ID3	High pressure switch	C034	
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061	
ID5	Not present	Hc07; C035; U059; U058; U062; U057; U061	
ID6	Not present	HC08; C035; U059; U058; U062; U057; U061	

Tab. 2.ac

Ingressi digitali - Secondary circuito 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc10
ID6	Not present	Hc11

Tab. 2.ad

Digital outputs - Main circuit 1

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Free cooling valve (*)	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Not used	Hc56
		Tab. 2.ae

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Not used	Hc64
C5-NO5	Alarm	Hc65
C6-NO6	Not used	Hc66

Tab. 2.af

Notice: (*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

Analogue outputs - Main circuit 1

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	
				Tab 3 am

Tab. 2.ag

Analogue outputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.ah





2.13.3 Chillers/heat pumps, On/Off compressors and bipolar ExV expansion valve

Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

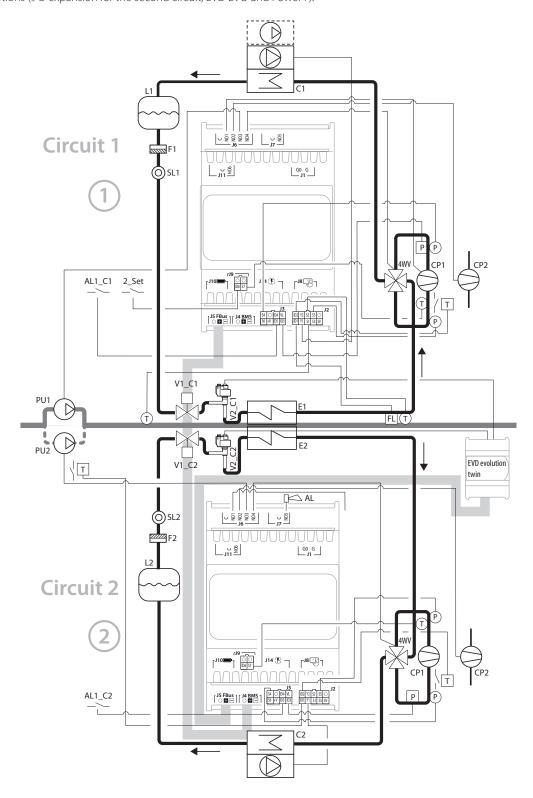


Fig. 2.y

Ref.	Description	
C1/C2	Condenser 1/2	
E1/E2	Evaporator 1/2	
V1_C1	Solenoid valve circuit 1	
V1_C2	Solenoid valve circuit 2	
V2_C1	Electronic expansion valve circuit 1	
V2 C2	Electronic expansion valve circuit 2	

Ref. Description		
SL1/2	Liquid sightglass 1/2	
F1/2	Filter-drier 1/2	
FL	Flow switch	
CP1/2	Compressor 1/2	
PU1/2	User pump 1/2	
2_Set	2nd set point	

Ref.	Description	
4WV	Reversing valve	
Р	Pressure transducer/pressure switch	
AL	Alarm	
Τ	Temperature probe/thermostat	
L1/2	Liquid receiver 1/2	
AL1_C1/2	Remote alarm circuit 1/2	

Tab. 2.ai



Ref.	Description	Туре	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.aj

Analogue inputs - Secondary circuit 2

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	-Hc42
S3	Not present	-	Hc43
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.ak



Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.al

Digital inputs - Secondary circuit 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not used	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not used	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not used	Hc11

Tab. 2.am

Digital outputs - Main circuit 1

Ref.	Description	Configuration param.	
C-NO1	Compressor 1	Hc51; C036	
C-NO2	Compressor 2	Hc52; C036	
C-NO3	User pump 1	Hc53; U063	
C-NO4	Reversing valve	Hc54; U066; S063; U065	
C5-NO5	Alarm	Hc55; U064	
C6-NO6	Not used	Hc56	
		Tab. 2.an	

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration param.
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve	Hc64; U066; S063; U065
C5-NO5	Alarm	Hc65
C6-NO6	Notused	Hc66

Tab. 2.ao

Notice: (*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

Analogue outputs - Main circuit 1

Ref.	Description	Type	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	
				T 1 2

Tab. 2.ap

Analogue outputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.aq





2.13.4 Chiller/water-to-water heat pump, On/Off compressors and bipolar ExV expansion valve

▲ Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

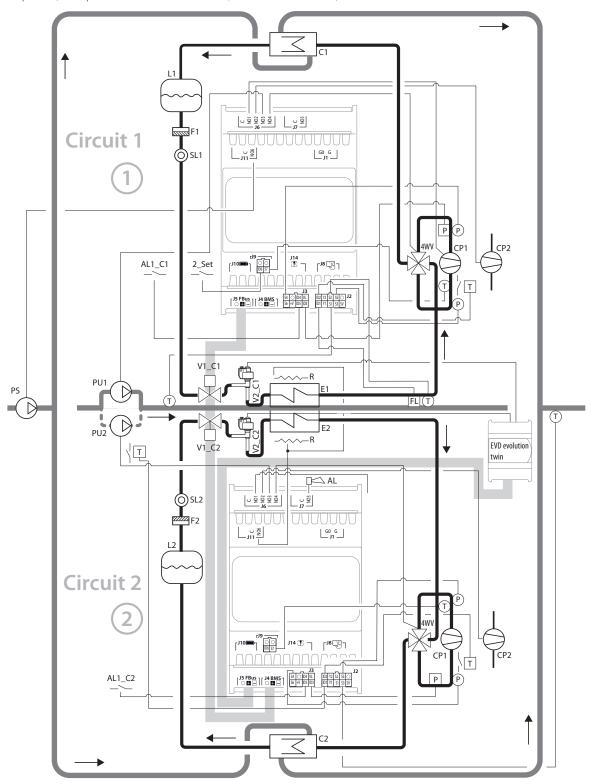


Fig. 2.z

Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Electronic expansion valve circuit 1
V2_C2	Electronic expansion valve circuit 2
R1/2	Frost protection heater

Ref.	Description	
SL1/2	Liquid sightglass 1/2	
F1/2	Filter-drier 1/2	
FL	Flow switch	
CP1/2	Compressor 1/2	
PU1/2	User pump 1/2	
PS	Source pump	
2_Set	2nd set point	

Ref.	Description	
4WV	Reversing valve	
Р	Pressure transducer/pressure switch	
AL	Alarm	
Т	Temperature probe/thermostat	
L1/2	Liquid receiver 1/2	
AL1_C1/2	Remote alarm circuit 1/2	
	T.I. 2	

Tab. 2.ar



Ref.	Description	Туре	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Source water delivery temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.as

Analogue inputs - Secondary circuit 2

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Source water delivery temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.at

Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.au

Digital inputs - Secondary circuit 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.av

Digital outputs - Main circuit 1

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Source water pump	Hc56;

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve	Hc64; U066;S063; U065
C5-NO5	Alarm	Hc65
C6-NO6	Frost protection heater	Hc66

Tab. 2.ax

Notice: (*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

Tab. 2.aw

Analogue outputs - Main circuit 1

Ref.	Description	Туре	Configuration parameters	Notes
Y1	On-Off source pump (panel model)	0-10V	Hc71	
Y2	Not used	0-10V	Hc72	

Tab. 2.ay

Analogue outputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Not used	0-10V	Hc81	
Y2	Not used	0-10V	Hc82	


Tab. 2.az





2.13.5 Chillers, On/Off compressors and unipolar ExV expansion valve

▲ Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

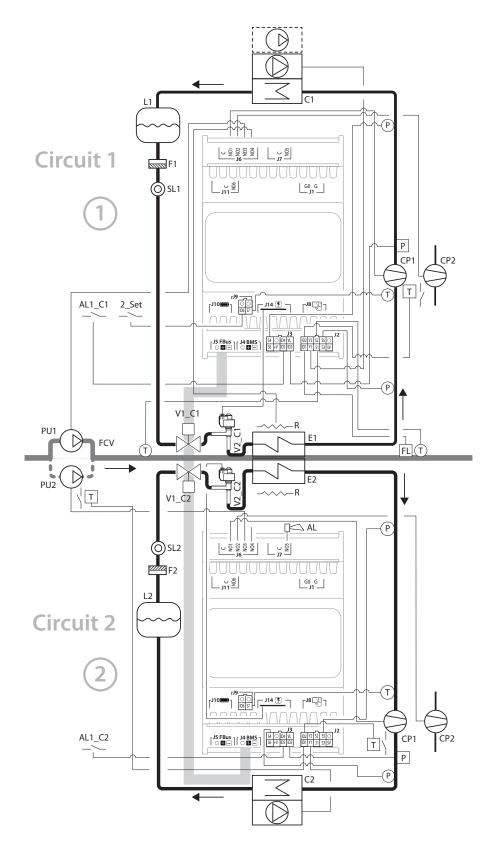

	1
Ref.	Description
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Electronic expansion
	valve circuit 1
V2_C2	Electronic expansion
	valve circuit 2
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
PU1/2	User pump 1/2
L1/2	Liquid receiver 1/2
2_Set	2nd set point
R1/2	Frost protection heater
Р	Pressure transducer/
	pressure switch
Т	Temperature probe/
	thermostat
CP1/2	Compressor 1/2
AL	Alarm
AL1_	Remote alarm circuit
C1/2	1/2

Fig. 2.aa Tab. 2.ba



Ref.	Description	Type	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2	Delivery temperature to user	NTC	Hc32
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.bb

Analogue inputs - Secondary circuit 2

Ref.	Description	Type	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Not present	-	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.bc

Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.bd

Digital inputs - Secondary circuit 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.be

Digital outputs - Main circuit 1

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2 Compressor 2 Hc52; C036		Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Frost protection heater (*)	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C5-NO6	Not used	Hc56
		Tab. 2.bf

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Frost protection heater (*)	Hc64; U066; S063; U065
C5-NO5	Alarm	Hc65; U064
C6-NO6	Not used	Hc66

Tab. 2.bg

Notice: (*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling (main only) => FC valve; otherwise => Frost protection heater.

Analogue outputs - Main circuit 1

- 1	Ref.	Description	Туре	Configuration parameters	Notes
,	Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
_	Y2	Not used	0-10V	Hc72	
_					

Tab. 2.bh

Analogue outputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.bi





2.13.6 Chillers/heat pumps, BLDC+On/Off compressors and bipolar ExV expansion valve

▲ Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

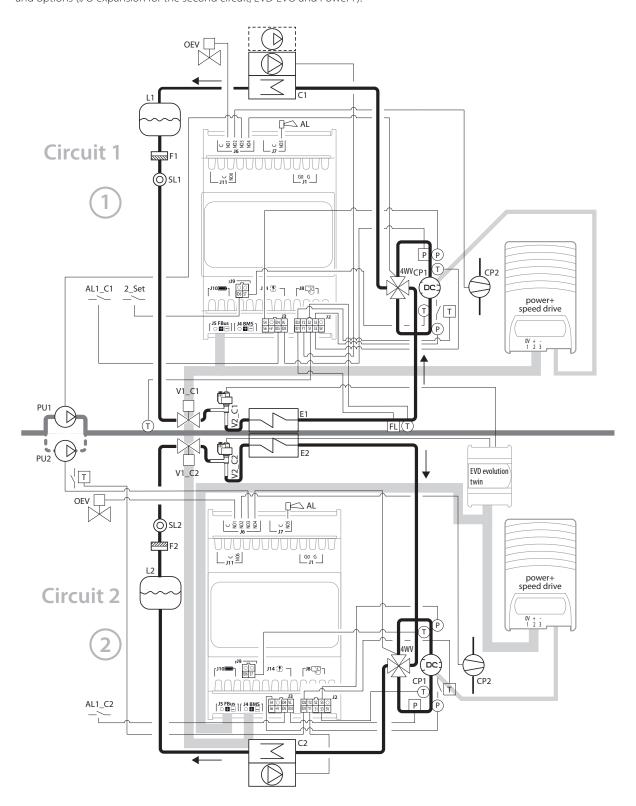


Fig. 2.ab

Ref.	Description
V1_C1	Solenoid valve circuit 1
V1_C2	Solenoid valve circuit 2
V2_C1	Electronic expansion valve circuit 1
V2_C2	Electronic expansion valve circuit 2
Р	Pressure transducer/pressure switch
Т	Temperature probe/thermostat
4WV	Reversing valve

Ref.	Description
PU1/2	User pump 1/2
AL1_C1/2	Remote alarm circuit 1/2
F1/2	Filter-drier 1/2
L1/2	Liquid receiver 1/2
C1/C2	Condenser 1/2
E1/E2	Evaporator 1/2

Ref.	Description
SL1/2	Liquid sightglass 1/2
CP1/2	Compressor 1/2
AL	Alarm
OEV	Oil equalis. valve
2_Set	2nd set point
FL	Flow switch

Tab. 2.bj



Ref.	Description	Type	Configuration parameters	
S1	Return temperature from user	NTC	Hc31	
S2	Delivery temperature to user	NTC	Hc32	
S3	Discharge temperature	-	Hc00	
S4	Condensing pressure	0-5V	Hc34; C040; 041; C042	
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039	
S6	Not present	-	Hc03; U025; U026; U027	
S7	Suction temperature	NTC	Hc04	

Tab. 2.bk

Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Analogue inputs - Secondary circuit 2

Ref.	Description	Type	Configuration parameters	
S1	Not present	NTC	Hc41	
S2	Not present	NTC	Hc42	
S3	Discharge temperature	-	Hc00	
S4	Condensing pressure	0-5V	Hc44; C040; 041; C042	
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039	
S6	Not present	-	Hc05; U025; U026; U027	
S7	Suction temperature	NTC	Hc47	

Tab. 2.bl

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.bm

Digital inputs - Secondary circuit 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.bn

Digital outputs - Main circuit 1

Ref.	Description	Configuration param.s
C-NO1	Oil equalisation valve Hc51; P017	
	(tandem compressors only)	
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve (*)	Hc54; U066; S063; U065
C-NO5	Alarm	Hc55; U064
C-NO6	Frost protection heater	Hc56;
		Tab. 2.bo

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration param.s
C-NO1	Oil equalisation valve	Hc61; P017
	(tandem compressors only)	
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve (*)	Hc64; U066; S063; U065
C-NO5	Alarm	Hc65
C-NO6	Frost protection heater	Hc66;

Tab. 2.bp

- BLDC compressor driven by Power+ speed drive.
- (*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling (main only) => FC valve; otherwise => Frost protection heater.

Analogue outputs - Main circuit 1

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.bq

Analogue outputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc81	FCS1*0
Y2	Not used	0-10V	Hc82	

Tab. 2.br





2.13.7 Unit with reversal on the hydronic circuit

▲ Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

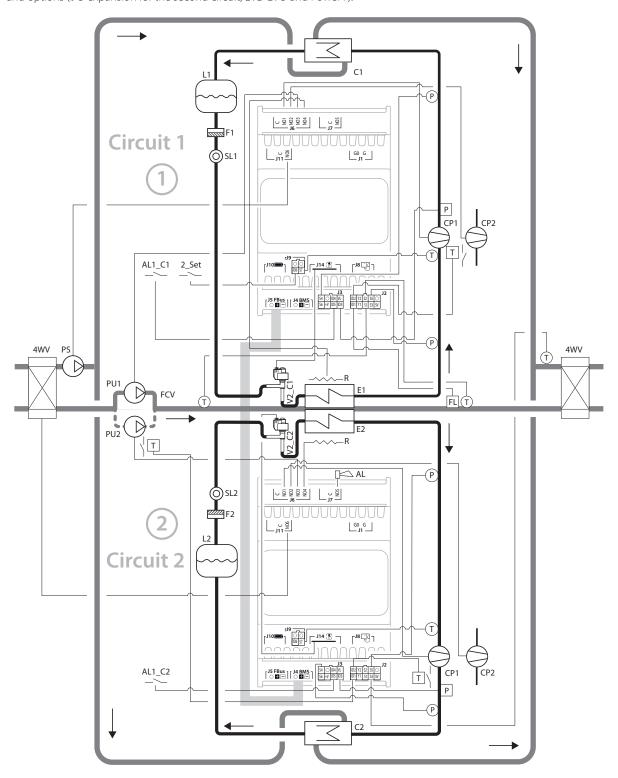


Fig. 10.a

	Ref.	Description
	C1/C2	Condenser 1/2
		Evaporator 1/2
		Solenoid valve circuit 1
	V1_C2	Solenoid valve circuit 2
V2_C1		Electronic expansion valve circuit 1
	V2 C2	Electronic expansion valve circuit 2

Ref.	Description
SL1/2	Liquid sightglass 1/2
F1/2	Filter-drier 1/2
FL	Flow switch
PU1/2	User pump 1/2
PS	Source pump
2_Set	2nd set point

Ref.	Description
4WV	Reversing valve
Р	Pressure transducer/pressure switch
AL	Alarm
Т	Temperature probe/thermostat
L1/2	Liquid receiver 1/2
AL1_C1/2	Remote alarm circuit 1/2

Tab. 2.bs



Ref.	Description	Туре	Configuration parameters
S1	Return temperature from user	NTC	Hc31
S2 Delivery temperature to user		NTC	Hc32
S3	Source water delivery temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc34; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc35; C037; C038; C039
S6	Not present	-	Hc03; U025; U026; U027
S7	Suction temperature	NTC	Hc04

Tab. 2.bt

Analogue inputs - Secondary circuit 2

Ref.	Description	Туре	Configuration parameters
S1	Not present	-	Hc41
S2	Not present	-	Hc42
S3	Source water temperature	NTC	Hc00
S4	Condensing pressure	0-5V	Hc44; C040; C041; C042
S5	Evaporation pressure	0-5V	Hc45; C037; C038; C039
S6	Not present	-	Hc05; U025; U026; U027
S7	Suction temperature	NTC	Hc47

Tab. 2.bu

Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs - Main circuit 1

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.bv

Digital inputs - Secondary circuit 2

Ref.	Description	Configuration parameters
ID1	Pump 2 overload	Hc16; U061
ID2	Compressor 1 overload	Hc17; C035
ID3	High pressure switch	C034
ID4	Not present	Hc09; C035; U059; U058; U062; U057; U061
ID5	Not present	Hc10; C035; U059; U058; U062; U057; U061
ID6	Not present	Hc11

Tab. 2.bw

Digital outputs - Main circuit 1

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc51; C036
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve	Hc54; U066; S063; U065
C5-NO5	Alarm	Hc55; U064
C6-NO6	Source water pump	Hc56; Hc12
		Tab. 2.bx

Digital outputs - Secondary circuit 2

Ref.	Description	Configuration param.s
C-NO1	Compressor 1	Hc61; C036
C-NO2	Compressor 2	Hc62; C036
C-NO3	User pump 2	Hc63; U063
C-NO4	Reversing valve	Hc64; U066;S063; U065
C5-NO5	Alarm	Hc65
C6-NO6	Reversing valve	Hc66

Tab. 2.by

Notice: (*) the configuration of the output depends on the type of unit: heat pump (reverse-cycle) => reversing valve; Chiller with free cooling => FC valve; otherwise => Frost protection heater.

Analogue outputs - Main circuit 1

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Not used	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.bz

Analogue outputs - Secondary circuit 2

	Ref.	Description	Туре	Configuration parameters	Notes
-	Y1	Not used	0-10V	Hc81	FCS1*0
-	Y2	Not used	0-10V	Hc82	

Tab. 2.ca





2.13.8 Chillers/heat pumps, BLDC+On/Off compressors and bipolar ExV expansion valve

▲ Important: The black lines refer to the electrical connections, the grey lines the serial connections between controller and options (I/O expansion for the second circuit, EVD EVO and Power+).

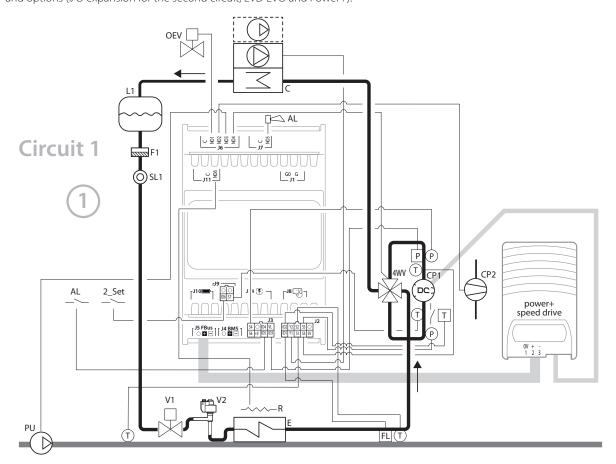


Fig. 2.ac

Ref.	Description
Е	Evaporator
4WV	4-way reversing valve
V1	Solenoid valve
V2	Electronic expansion valve
Т	Temperature probe/thermostat
OEV	Oil equalisation valve

Ref.	Description
Р	Pressure transducer/pressure switch
С	Condenser
PU	User pump
SL	Liquid sightglass
2_Set	2nd set point
F1	Filter-drier

Ref.	Description	
CP1/2	Compressor 1/2	
FL	Flow switch	
L	Liquid receiver	
AL	Alarm	
AL1	Remote alarm	

Tab. 2.cb

Analogue inputs

Description	Type	Configuration parameters	
Return temperature from user	NTC	Hc31	
Delivery temperature to user	NTC	-Hc32	
Discharge temperature	-	Hc00	
Condensing pressure	0-5V	Hc34; C040; 041; C042	
Evaporation pressure	0-5V	Hc35; C037; C038; C039	
Not present	-	Hc03; U025; U026; U027	
Suction temperature	NTC	Hc04	
	Return temperature from user Delivery temperature to user Discharge temperature Condensing pressure Evaporation pressure Not present	Return temperature from user NTC Delivery temperature to user NTC Discharge temperature Condensing pressure Evaporation pressure Not present O-5V Not present -	Return temperature from user NTC Hc31 Delivery temperature to user NTC -Hc32 Discharge temperature - Hc00 Condensing pressure 0-5V Hc34; C040; 041; C042 Evaporation pressure 0-5V Hc35; C037; C038; C039 Not present - Hc03; U025; U026; U027

Tab. 2.cc

Notice: the discharge temperature probe is automatically assigned type NTC-HT.

Digital inputs

Ref.	Description	Configuration parameters
ID1	User pump flow switch	Hc14; U060
ID2	Compressor 1 overload	Hc15; C035
ID3	High pressure switch	C034
ID4	Not present	Hc06; C035; U059; U058; U062; U057; U061
ID5	Remote alarm	Hc07; C035; U059; U058; U062; U057; U061
ID6	2nd set point	HC08; C035; U059; U058; U062; U057; U061

Tab. 2.cd



Digital outputs

Ref.	Description	Configuration parameters
C-NO1	Oil equalisation valve (tandem compressors only)	Hc51; P017
C-NO2	Compressor 2	Hc52; C036
C-NO3	User pump 1	Hc53; U063
C-NO4	Reversing valve (*)	Hc54; U066; S063; U065
C-NO5	Alarm	Hc55; U064
C-NO6	Frost protection heater	Hc56

Tab. 2.ce

Analogue outputs

Ref.	Description	Туре	Configuration parameters	Notes
Y1	Modulating/On-Off fan	0-10V	Hc71	FCS1*0
Y2	Not used	0-10V	Hc72	

Tab. 2.cf

3. INITIAL CONFIGURATION

The μ Chiller user terminal contains a subset of the available control and configuration parameters (see par 4.2). Consequently, the user terminal cannot be used to configure μ Chiller.

This is done using Applica, an application that is available in two formats:

- Applica mobile (see par 3.1 APPLICA app)
- Applica desktop (see par 3.4 Applica Desktop)

Applica can connect to µChiller and access the complete list of configuration parameters.

3.1 APPLICA app

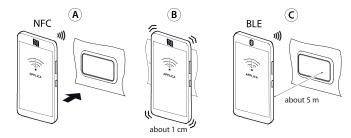


Fig. 3.a

The "Applica" app can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) and Bluetooth (BLE). Users can both configure the commissioning parameters and set groups of preset parameters according to specific needs (recipes).

Once the Carel "Applica" app has been installed and opened (see the paragraph "Mobile device", proceed as follows:

- 3. For NFC devices, move (A) the mobile device near to the µChiller user terminal (the position of the NFC antenna on the mobile device must be identified in order to place it over the display): wait for the signal that the device has been read (B).
- 4. For Bluetooth devices (C), select the "SCAN BLUETOOTH" option, then choose the device from the list.

Notice: NFC devices use a "retain" (persistent memory) counter, while Bluetooth devices use a RAM (volatile) memory counter. The former is updated every 5 hours, the second every hour.

uchiller +0300053EN rel. 2.5 - 03.10.2024 Initial configuration 37





3.2 Configuration procedure


3.2.1 Step 1 - Set the refrigerant

Standard, Enhanced and Legacy models

1. With Bluetooth devices, access the Service menu by clicking the icon at the bottom right (figure). With NFC devices, the Service menu is already displayed by default (figure below);



- 2. click "Set-up"--> "Configurations" --> "Defaults" (figure);
- 3. select the refrigerant used in the unit;

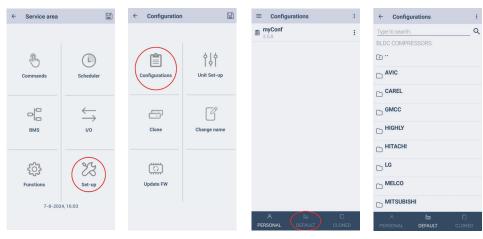

4. apply the selected configuration via NFC or Bluetooth. The refrigerant has now been correctly configured.


High Efficiency model

1. With Bluetooth devices, access the Service menu by clicking the icon at the bottom right (figure). With NFC devices, the Service menu is already displayed by default (figure below);



Fig. 3.b

- 2. click "Set-up"--> "Configurations" --> "Defaults" (figure);
- 3. select the "BLDC Compressors" folder and then the compressor used on the unit;

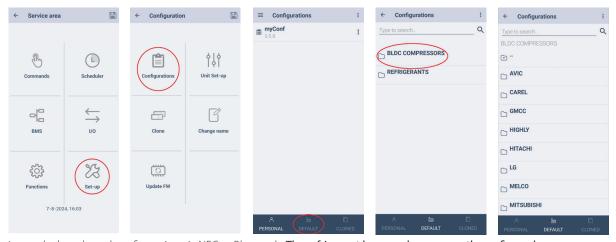

4. apply the selected configuration via NFC or Bluetooth. The refrigerant has now been correctly configured.

38 Initial configuration



3.2.2 Step 2 - Configure the unit

1. continue configuring the unit by clicking the "Set-up"--> "Unit setup"--> "Unit configuration". Complete the unit configuration by pressing the PREV / NEXT buttons to scroll through all of the configuration parameter pages;







2. apply the parameters configured via NFC / Bluetooth to the controller.

3.2.3 Step 3 - Configure the inputs/outputs

1. click "Set-up"--> "Unit setup" --> "IO configuration". Complete the unit configuration by pressing the PREV / NEXT buttons to scroll through all of the configuration parameter pages;.







2. apply the parameters configured via NFC / Bluetooth to the controller

uchiller +0300053EN rel. 2.5 - 03.10.2024 Initial configuration 39






3.2.4 Step 4 – Configure parameter compatibility with mCH2 (Legacy model only)

1. click "Service Area" \rightarrow "Configuration" \rightarrow " μ C2SE" and complete the configuration of the unit







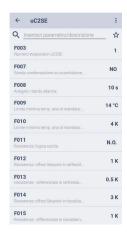

2. apply the parameters configured via NFC / Bluetooth to the controller.

3.2.5 Step 5 - Display probe values

The correct overall configuration of the inputs/outputs ca be checked by reading the values in real time, via a specific menu. The path is "Homepage" \rightarrow "Service Area" \rightarrow "In/Out value"









Navigate the pages using the PREV/NEXT buttons to view all the input and output values for both circuit 1 and circuit 2. This feature is only available via Applica Bluetooth.

3.2.6 Applica: date and time setting

Applica includes a feature for setting the date and time on μ Chiller in just one simple step, copying the values from the mobile device.









Procedure:

40 Initial configuration µchiller +0300053EN rel. 2.5 - 03.10.2024



- 1. open Applica on the mobile device;
- 2. access the controller via NFC or Bluetooth, entering your profile credentials;
- 3. access the menu on the command bar at the top left;
- 4. select "set date/time":
- 5. confirm;
- 6. with an NFC connection, move the device near to the user terminal to write the copied values.



3.2.7 Applica: copy configuration

Applica includes a "Clone" feature to acquire the configuration from one unit and replicate it "one-for-one" to other units.

Procedure:

- 1. open Applica on the mobile device;
- 2. access the controller via NFC or Bluetooth, using the "Service" or "Manufacturer" profile credentials;
- 3. follow the path "Configurations/Clone";
- 4. enter a name to describe the configuration being saved;
- 5. with an NFC connection: move the device bear to the display terminal on the μChiller that the configuration is being copied from; once the message shows the configuration has been acquired, this is saved to the smartphone's memory, available via icon 2 (see the following figure);
- 6. select the saved configuration; (with an NFC connection) move the device near to the display terminal on the μ Chiller that the same configuration is being applied to;
- 7. confirm and wait for the confirmation message.
- Notice: with a Bluetooth connection the configuration is saved/applied on confirmation.



With reference to the previous figure, tapping the icon:

- 1. accesses the configurations saved by the user;
- 2. accesses the configurations prepared by Carel;
- 3. accesses the saved clones.

Note: the parameters can be reset to the factory (default) values using parameter rStr.

3.3 Unit set-up parameter list

3.3.1 Unit parameters

Notice: follow the order shown in the table to configure the Unit set-up parameters.

Par.	Description	Def.	Min.	Max.	UOM
U077	Type of unit	0	0	6	-
	0=CH:				
	1=HP;				
	2=CH/HP:				
	3=Cooling-only condensing unit;				
	4=Reverse-cycle condensing unit;				
	5=Cooling-only air/air;				
	6=Reverse-cycle air/air;				
	7=Water/water CH/HP with reversal on the hydronic circuit				
S068	Source type (0=Air, 1=Water)	0	0	1	-
U076	Number of system pumps	1	1	2	-
C046	No. of unit circuits	1	1	2	-
C047	Type of compressors used (0=1 On/Off; 1=2 On/Off; 2=1 BLDC; 3= 1 BLDC+On/Off;	0	0	1/3/5	-
	4=AC Compressor; 5=AC Compressor + On/Off)				
S065	Type of source fan (0/1=Modulating/ON-OFF)	0	0	1	-
S064	Type of source air circuit (0=Independent; 1=Common)	0	0	1	-

µchiller +0300053EN rel. 2.5 - 03.10.2024 Initial configuration | 41





Par.	Description	Def.	Min.	Max.	UOM
S072	Source pump activation	0	0	1	-
	0=always on				
	1=On with compressors on			-	
	2=control on condensing temperature			-	
	3 1	2			
E047	ExV driver (0=Disabled; 1=Built-in; 2=EVD Evolution)	0	0	2	-
E046	EVD Evolution: valve (1=CAREL ExV,) (*)	Į l		24	-
	(*) see EVD Evolution manual for the complete list of selectable valves				
020	MOP in cooling: threshold	30.0	-60.0	200.0	°C
022	MOP in heating: threshold	20.0	-60.0	200.0	°C
2017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
2018	Min low pressure threshold (LP)	0.2	-99.9	99.9	bar
J068	Free cooling: enable (0/1=no/yes)	0	0	1	-
J074	Free cooling type (0=Air; 1=Remote coil; 2=Water)	0	0	2	-
J071	Design free cooling delta T	8.0	0.0	99.9	K
J061	System pump overload: input logic (0/1=NC/NO)	0	0	1	-
J065	Freecooling valve: output logic (0/1=NO/NC)	0	0	1	-
063	Reversing valve: output logic (0/1=NO/NC)	0	0	1	-
054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar
2049	Low pressure switch alarm delay on compressor activation	90	0	999	-
2050	Low pressure switch alarm delay with compressor on	15	0	999	-
2051	Low pressure switch input logic (0=NC; 1=NO)	0	0	1	-
2052	Compressor with capacity control: output logic (0=NC, 1=NO)	0	0	1	-
5053	Defrost synchronisation (0=Independent, 1=Separate, 2=Simultaneous)	0	0	2	-
J006	Cooling set point: minimum limit	5.0	-99.9	999.9	°C
J007	Cooling set point: maximum limit	20.0	-99.9	999.9	°C
J008	Heating set point: minimum limit	30.0	0.0	999.9	°C
J009	Heating set point: maximum limit	45.0	0.0	999.9	°C
lc13	Buzzer (0/1=No/Yes)	1	0	1	-
J081	High/low pressure and frost alarm reset configuration	7	0	7	-
	0= HP1-2/LP1-2/A1-2/Manual frost protection			_	
	1= HP1-2/LP1-2/A1-2/Automatic frost protection				
	2= HP1-2/A1-2 Manual frost protection LP1-2 automatic				
	3= HP1-2 manual LP1-2/A1-2 Automatic frost protection				
	4= HP1-2/LP1-2 manual A1-2/Automatic frost protection				
	5= HP1-2/LP1-2 (3 times in an hour) manual; A1-2/Automatic frost protection			_	
	6= HP1-2/LP1-2 (3 times in an hour) manual; A1-2/Manual frost protection				
	7=HP1-2 manual/LP1-2 (3 times in an hour)/Manual frost protection				

Tab. 3.a

3.3.2 I/O configurationFor the description of the following parameters, see chapter 3 of this document

Par.	Description	Def.	Min.	Max.	UOM
HC31	Analogue input 1 configuration Circuit 1	7	0	8	-
HC32	Analogue input 2 configuration Circuit 1	8	0	8	-
HC00	Analogue input 3 configuration Circuit 1	0	0	8	-
HC34	Analogue input 4 configuration Circuit 1	7	0	10	-
HC35	Analogue input 5 configuration Circuit 1	8	0	10	-
HC03	Analogue input 6 configuration Circuit 1	0	0	11	-
HC04	Analogue input 7 configuration Circuit 1	6	0	8	-
HC41	Analogue input 1 configuration Circuit 2	0	0	8	-
HC42	Analogue input 2 configuration Circuit 2	0	0	8	-
HC43	Analogue input 3 configuration Circuit 2	0	0	8	-
HC44	Analogue input 4 configuration Circuit 2	7	0	10	-
HC45	Analogue input 5 configuration Circuit 2	8	0	10	-
HC05	Analogue input 6 configuration Circuit 2	0	0	11	-
HC47	Analogue input 7 configuration Circuit 2	6	0	8	-
HC14	Digital input 1 configuration Circuit 1	1	0	12	-
HC15	Digital input 2 configuration Circuit 1	2	0	12	-
HC06	Digital input 4 configuration Circuit 1	0	0	12	-
HC07	Digital input 5 configuration Circuit 1	7	0	12	-
HC08	Digital input 6 configuration Circuit 1	6	0	12	-
HC16	Digital input 1 configuration Circuit 2	10	0	12	-
HC17	Digital input 2 configuration Circuit 2	2	0	12	-
HC09	Digital input 4 configuration Circuit 2	0	0	12	-
HC10	Digital input 5 configuration - Circuit 2	0	0	12	-
HC11	Digital input 6 configuration Circuit 2	0	0	12	-
HC71	Analogue output 1 configuration Circuit 1	1	0	4	-
HC72	Analogue output 2 configuration Circuit 1	3	0	4	-
HC81	Analogue output 1 configuration Circuit 2	1	0	3	-
HC82	Analogue output 2 configuration Circuit 2	0	0	3	-
HC51	Digital output 1 configuration Circuit 1	1	0	12	-
HC52	Digital output 2 configuration Circuit 1	2	0	12	-
HC53	Digital output 3 configuration Circuit 1	4	0	12	-
HC54	Digital output 4 configuration Circuit 1	7	0	12	-
HC55	Digital output 5 configuration Circuit 1	10	0	12	-
HC56	Digital output 6 configuration Circuit 1	0	0	12	-
HC61	Digital output 1 configuration Circuit 2	1	0	8	-
HC62	Digital output 2 configuration Circuit 2	2	0	8	-
HC63	Digital output 3 configuration Circuit 2	4	0	8	-
HC64	Digital output 4 configuration Circuit 2	7	0	8	-
HC65	Digital output 5 configuration Circuit 2	0	0	8	-

42 Initial configuration μ chiller +0300053EN rel. 2.5 - 03.10.2024

 $^{(\}mbox{\ensuremath{^{*}}})$ see EVD Evolution manual for the complete list of selectable valves



Par.	Description	Def.	Min.	Max.	UOM
HC66	Digital output 6 configuration - Circuit 2	0	0	8	-
C021	Capacity distribution in the circuit (0= Grouped, 1= Equalised)	0	0	1	-
C037	Evaporation pressure: probe type (0=0-5V; 1=4-20mA)	0	0	1	-
C038	Evaporation pressure transducer: min value	0.0	-1.0	99.9	bar
C039	Evaporation pressure transducer: max value	17.3	0.0	99.9	bar
C040	Condensing pressure: probe type (0=0-5V; 1=4-20mA)	0	0	1	-
C041	Condensing pressure transducer: min value	0.0	-1.0	99.9	bar
C042	Condensing pressure transducer: max value	45.0	0.0	99.9	bar
C043	Discharge temperature: probe type (0=NTC, 1=NTC-HT)	1	0	1	

Tab. 3.b

3.3.3 mCH2 parameters

Par.	Description	Def.	Min.	Max.	UOM
F003	Number of evaporators (0=1; 1=2)	0	0	1	-
F007	Sensor S4 installed on the source heat exchanger	0	0	1	-
	(0=No, 1=Yes: in CH measures condensing temp., in HP measures evap. temp.)				
F008	Frost protection alarm delay	10	0	999	-
F009	Supply air temperature limit threshold	14.0	0.0	99.9	°C
F010	Supply air temperature limit diff.	4.0	0.0	20.0	°K
F011	Heater dig. output logic (0=NO; 1=NC)	0	0	1	-
F012	Offset on set point in cooling operation for the heaters	1.0	0.0	99.9	°K
F013	Differential on set point in cooling mode for the heaters	0.5	0.2	99.9	°K
F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K
F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K
F016	Heaters active during defrost (0=No, 1=Yes)	0	0	1	-
F017	Supply fan operating mode (0=Always ON; 1=ON by temp. control)	0	0	1	-
F018	Hot-start set point	40.0	0.0	99.9	°C
F019	Hot-keep differential	5.0	0.0	99.9	°K
F020	Compressor request logic from digital input (0=NC; 1=NO)	1	0	1	-
F021	Mixed water outlet temperature probe calibration (S1 expansion)	0.0	-99.9	99.9	°K
F022	Evaporator 2 water outlet temperature probe calibration (S2 expansion)	0.0	-99.9	99.9	°K
F023	Direct relationship between digital inputs and digital outputs for condensing unit (0=No, 1=Yes)	0	0	1	-
F024	Manual heater 1 management (0=AUTO; 1= OFF; 2=ON)	0	0	2	-
F025	Manual heater 2 management (0=AUTO; 1= OFF; 2=ON)	0	0	2	-
F026	Compressors off at low outside temperature (air/air)	-40.0	-40.0	99.9	°C
F027	Enable compressor capacity control 0/1=No/Yes	0	0	1	-
F028	Air heating: probe for user heater temperature control: 0=ROOM, 1=SUPPLY	0	0	1	-

Tab. 3.c

3.4 Applica Desktop

Applica Desktop is a program intended for manufacturers and installers of units fitted with the μ Chiller controller. It can be downloaded from ksa.carel.com.

The Applica Desktop offers the possibility to:

- access the controller using the assigned profile;
- · create configurations;
- · apply configurations;
- clone a unit configuration, i.e. copy all of the unit's parameter values;
- · complete the commissioning procedure;
- troubleshoot any problems on the unit.

Notice:

- · Applica Desktop can be used as an alternative to the Applica app, and requires an internet connection;
- For the physical connection to the BMS port on µChiller, use the USB/RS485 converter P/N CVSTDUMOR0

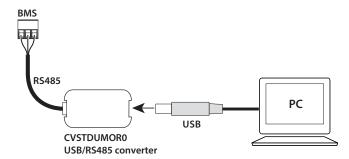


Fig. 3.c

µchiller +0300053EN rel. 2.5 - 03.10.2024 Initial configuration 43






3.4.1 Preparing for operation

- 1. Access KSA, "Software & Support"," µChiller" section.
- 2. Select the "Configurations" folder.
- 3. For μ Chiller Standard, Enhanced and Legacy models (with On/Off compressor), select the "Refrigerants" section and then the refrigerant charged on the unit.
- 4. Connect to the BMS port on the μ Chiller controller, as shown in Figure 5.b;
- 5. Open Applica Desktop; a window will be opened with the right part of the top bar as shown below:



- 6. Select "Add target" and assign it a meaningful name (e.g.
- 7. In the "COM Port" field, enter the COM port used for the USB connection to the USB/RS485 converter;
- 8. Configure the connection parameters (Baudrate=115200, Bits=8, Parity=None, Stop Bits=Two, Serial Node=1) as shown in the figure (the data are saved automatically);
- 9. Use "Connect" to connect to the μChiller (which must be powered on).

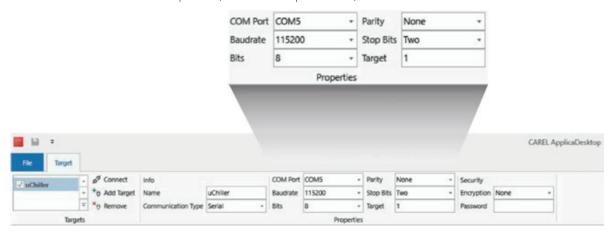


3.4.2 Updating the application software

- 1. Connect to the BMS port on the µChiller controller, as shown in Figure 3.d;
- 2. Open Applica Desktop;
- 3. Click "Add target" and enter an appropriate name;;



4. Specify the "COM Port", i.e the COM port used for the USB connection to the USB/RS485 converter and configure the connection parameters (Baudrate=115200, Bits=8, Parity=None, Stop Bits=Two, Serial Node=1);

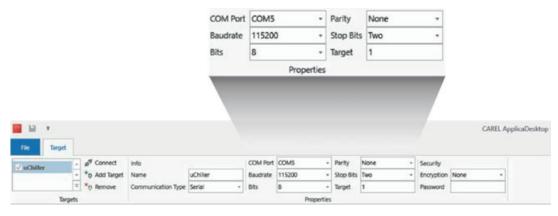


- 5. Power on the device
- 6. Click "Connect"

44 Initial configuration




7. Select "Configurations" in the top bar;

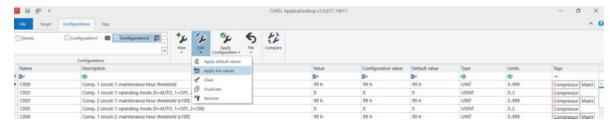

- 8. Make a backup of the current configuration, then click "File > Export";
- 9. Select "Target" in the top bar;
- 10. Click "Download" as shown in the figure and select the .pack file corresponding to the new version to install;



- 11. Applica Desktop will display a message that the update was successful
- 12. Select "Configurations" again in the top bar;
- 13. Click "File > Import and select the previously exported configuration.

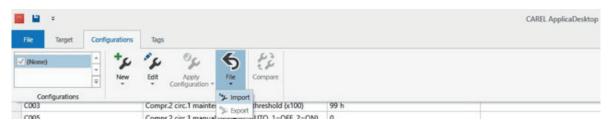


- 14. Then select "Apply configuration";
- 15. Applica Desktop will display a message when the parameters have been set, and if necessary indicating any values that have been applied that do not belong to the current user profile (some parameters may not be visible to the user).
- 16. Update completed successfully.

3.5 Configuration procedure with Applica Desktop - Legacy Model

3.5.1 Step 1 - Set the refrigerant

Once connected, select the "Configurations" label: the command bar will be displayed, as shown:

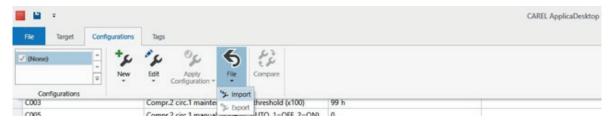

- 1. Select "File -> Import" to load the refrigerant configurations downloaded from KSA (path: KSA / SW&Support /Configuration & Updating software / ST Configuration / Refrigerant Gases);
- 2. Select the configuration to be applied to the μ Chiller, and then "Apply Configuration";



3. Applica Desktop will display a message when the parameters have been set, and if necessary indicating any values that have been applied that do not belong to the current user profile (some parameters may not be visible to the user).


µchiller +0300053EN rel. 2.5 - 03.10.2024 Initial configuration 45





3.5.2 Step 2 - Configure μChiller

 Select the "Configurations" label, select "New -> New configuration" and assign a name to the new configuration being created.

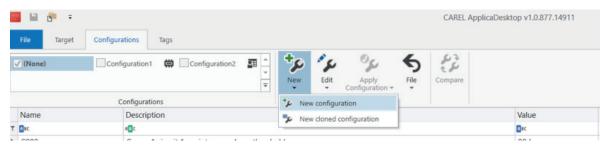

- 2. Select the newly created configuration
- Select "Edit -> Apply Live Values". This operation copies the values of the parameters currently saved on the connected μChiller to the newly created configuration.




- 4. Select the "Tags" label and then the "Unit_Cfg" command
- 5. Change the parameters listed in the "Configuration value" column to configure the unit



- 6. Repeat the same steps for the "IO_CFG" and "uCH2SE" tags.
- 7. The unit has now been configured. If desired, the control parameters can be modified using the other tags available as search filters.
- 8. Once all of the desired parameters have been changed, to apply the changes select the "Configuration" label and select "Apply Configuration"



Finally, to save the newly-created configuration for future use, from the "Configurations" label select "File -> Export" and assign a name to the configuration being saved.

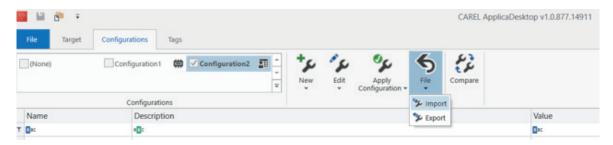

46 Initial configuration

µchiller +0300053EN rel. 2.5 - 03.10.2024



3.5.3 Applica Desktop: date and time setting

Applica Desktop can set the date and time on µChiller in just one simple step, copying the values from the PC to the controller.



Procedure:

- 1. Once connected, select "Set date&time";
- 2. In the pop-up window, confirm synchronisation of the time and date on µChiller with the PC



4. USER INTERFACE

4.1 Introduction

μChiller uses the user terminal to display the alarms, the main variables and to set the unit set points (User level) and manual functions (Service level). The terminal has a 7- segment LED display with two rows: the top row is 3-digit plus sign and decimal point; the bottom row is 4-digit plus sign (this can also display the hour format -hh:mm and date - MM:DD). There is a buzzer, 14 operating icons and 4 buttons for scrolling and setting the parameters. The terminal has NFC (Near Field Communication) and Bluetooth (depending on the model) connectivity for interaction with mobile devices (on which the Carel "Applica" app has been installed, available on Google Play for the Android operating system).

Note: access levels: U=User; S=Service; M=Manufacturer. See the parameter table.

The unit of measure on the display can be changed via parameter UoM, accessed at a Service level, including in the direct access functions menu.

Code	Description	Def.	UoM	Min	Max	Lev.
UoM	Unit of measure 0=°C/barg - 1=°F/psig	0	-	0	1	S
						Tah 4 a

The information and parameters accessible from the terminal and from the Applica app depend on the access level and the unit configuration parameters.

4.2 User terminal



Key:	
1	Keypad
2	Main field
3	Device status and operating mode icons

Fig. 4.a

Note: the user terminal only allows access to certain parameters at the User and Service levels: to access all of the Service and Manufacturer parameters, use the Carel Applica app or the configuration and commissioning tool.

uchiller +0300053EN rel. 2.5 - 03.10.2024



4.2.1 Keypad

Button	Description	Function
A	UP	When scrolling: go to the previous parameter
		In programming mode: increase the value
		On the main screen: press and hold (3s): Switch unit on/off
	DOWN	When scrolling: go to the next parameter
		In programming mode: decrease in value
		Main menu:
		pressed briefly: unit dashboard display
		 pressed and held (3 s): access User parameters (set point, unit on-off,)
A	Alarm	Pressed briefly: display active alarms and mute buzzer
		Pressed and held (3 s): reset alarms.
0	PRG	When scrolling: access parameter programming mode
		In programming mode:
		pressed briefly: confirm value
		pressed and held (3 s): return to the main menu

Tab. 4.b

4.2.2 **Icons**

The icons indicate the device operating status and operating modes, as shown in the following table.

lcon	Function	On	Flashing
	System pump	Active	In manual operation
88	Source device status (pump/fan)	Active	In manual operation
88	Compressor status	Active	In manual operation (with ExV)
- W-	Frost protection heater	Active	In manual operation
; ф ;	Operating mode	Heating	-
**		Cooling	High water temperature
<u>⊹</u>		Defrost	Dripping after defrosting
		Free cooling	-
8	Service	Service request on exceeding operating hours	Serious alarm, action required by qualified personnel

Tab. 4.c

Standard display 4.3

At start- up, the user terminal briefly shows "NFC", indicating that the NFC interface is available on the user terminal for communication with mobile devices, and then the standard display is shown. The main screen is then displayed. The values displayed in the two rows of the main page can be selected by the user using parameters Hc90 and Hc91. The following tables show the configuration values for the main page.

Code Description		Limits
Hc90	Information on top row	19
Hc91	Information on bottom row	110

Hc90/91	Type of information	Hc90/91	Type of information
1	Not present	6	Inlet temperature
2	Control temperature *	7	Manifold outlet temperature
3	Control set point	8	Evaporation temperature **
4	Secondary temperature *	9	Capacity request
5	Outlet temperature	10	Compressor status (Hc91 only)
*The contro	ol probe in steady state is always	considered	

When the unit is off, "OFF" is displayed on the bottom row to indicate the unit's status.

Note: "bLE" flashes on the display during "Bluetooth" communication.

48 User interface μ chiller +0300053EN rel. 2.5 - 03.10.2024



4.3.1 Dashboard

From the main menu, press DOWN to access information on the status of the devices and the temperatures, superheat values, etc. for the two circuits:

- unit "OFF" and the reason for shutdown:
 - "diSP" from keypad;
 - "dl" from remote contact (via digital input);
 - "Schd" from time band (scheduler);
 - "bMS" from BMS;
 - "ChnG" from operating mode changeover (heating/cooling);
 - "AlrM" from alarm.
- · "CMP" compressors;
- "AFE1" Circuit 1 user delivery water temperature;
- "AFC1" Circuit 1 source delivery water temperature;
- "AFE2" Circuit 2 user delivery water temperature;
- "AFC2" Circuit 2 source delivery water temperature;
- "EuP1" evaporation temperature circuit 1;
- "ScP1" Circuit 1 evaporation pressure;
- "Sct1" Circuit 1 suction temperature;
- "SSH1" superheat circuit 1;
- "Cnd1" condensing temperature circuit 1;
- "dSP1" Circuit 1 condensing pressure;
- "dSt1" BLDC compressor discharge temperature circuit 1;
- "EuP2" evaporation temperature circuit 2;
- "ScP2" Circuit 2 evaporation pressure;
- "Sct2" Circuit 2 suction temperature;
- "SSH2" superheat circuit 2;
- "Cnd2" condensing temperature circuit 2;
- "dSP2" Circuit 2 condensing pressure;
- "dSt2" BLDC compressor discharge temperature circuit 2;
- "SPrb" Source return temperature (outside);
- "Opn1" ExV circuit 1 position;
- "Opn2" ExV circuit 2 position;
- "ESC" to exit the dashboard.

and if the access level is "Service":

- "Hd01" BMS baud rate;
- "Hd02" BMS communication parameters;
- "ESC" to exit the dashboard.

Example



Go to the standard display.



Press DOWN: CMP indicates that compressor 1 is on (o) and compressor 2 is off (_).



Press DOWN: EuP1 indicates the evaporation temperature in circuit 1 (3.8°C).



Press DOWN: Cnd1 indicates the condensing temperature in circuit 1 (40.8°C).



To return to the standard display, press PRG (corresponding to ESC).





4.3.2 Direct access functions

The user terminal only provides access to the basic configuration parameters, such as direct functions and active alarms without password protection, or, with password protection, to the parameters used to configure and optimise the unit. Press DOWN for 3 s to access the direct access functions:

- · set point;
- · switching unit on and off;
- change operating mode (cooling/heating, only on reverse-cycle units);
- · select unit of measure.

In programming mode, the bottom row shows the parameter code, and the top row shows the value.

In addition, the unit quick on/off function is available on the user terminal.

On the main screen, pressing and holding UP switches the unit on/off. On all the other screens, the UP button retains its original function of navigating the pages and/or setting the parameters.

Procedure

Press:

- DOWN for 3 s to access the parameters (User level, no password required);
- UP and DOWN to scroll and set the parameters;
- PRG to change the parameter value and save the changes;
- PRG (3 s) or ESC to return to the standard display.



3. Go to the standard display



 Press DOWN for 3 s: the current set point (SEtA) is shown - read-only



5. Press DOWN: the cooling set point (SEtC) is shown



 Press PRG: the value flashes; press UP/DOWN to change the value; PRG to confirm.



7. Press DOWN: the heating set point (SEtH) is shown - for heat pump units only.



8. Press DOWN: the unit ON/OFF function (UnSt) is shown.



9. Press DOWN: the function for switching from cooling (C) to heating (H) mode (ModE) is shown - for heat pump units only.



10. Press DOWN: the manual defrost function (dFr) is shown - Service level and reverse-cycle A/W units only.



11. Press DOWN: the function to delete the alarm log (CIrH) is shownService level only.



12. Press DOWN: the unit of measure selection (UoM) is shown



- 13. After having completed the settings, to exit either:
 - from the categories press ESC and then PRG;
 - press PRG for 3 s

50 User interface μchiller +0300053EN rel. 2.5 - 03.10.2024



4.3.3 Programming mode

Go to the standard display and press PRG to enter programming mode.

Procedure

Press:

- PRG to access the parameters with password protection;
- UP and DOWN to scroll and set the parameters;
- PRG to change the parameter value and save the changes;
- PRG (3 s) or ESC to return to the standard display.



1. Go to the standard display



2. Press PRG: the password prompt (PSd) is shown



3. Press PRG: the first digit of the password flashes; set the value, press PRG. The second digit now flashes; enter the other digits to complete the password.



4. Press PRG: if the password is correct, the first parameter category is shown: PLt (= system)



7. Press UP/DOWN to display the other parameters.



5. Press PRG: the first parameter is shown: U002 (Pump 1 manual control)





6. Press PRG: the value flashes; press UP/DOWN to change the value; PRG to confirm.

Note: User password: 1000; Service password: 2000; Manufacturer password: 1234. See the parameter table.

4.3.4 **Programming menu**



Category PLt (system): identified by code Uxxx, these parameters relate to control and management of the system units.



Category Src (source): identified by code Sxx, these parameters relate to control and management of the condenser / source.



Category EEV (ExV valve): identified by code Exxx, these parameters all relate to control and management of the electronic expansion valve(s).



Category Clc (Clock): identified by code Haxx, these are the parameters for setting the date/time.



Category CMP (compressors): identified by code Cxxx, these parameters relate to control and management of the compressors and refrigerant circuits.



Category Hst (Alarm log): access the alarm log. Each event is described with the date (in the format DD MM) and time (in the format hh:mm) alternating.









Use Log- Out to exit the category.

Use ESC to return to the standard display.



- the Service password also accesses the User parameters;
- if no button is pressed, after around 3 minutes the terminal will automatically return to the standard display.

5. FUNCTIONS

5.1 Temperature control

μChiller can control either the unit's return or delivery water temperature. The return (from user) and delivery (to user) water temperature probes can be installed on any of the channels. See the Installation chapter.

5.1.1 PID control

Two types of PID control are available:

- · PID control at start-up;
- · PID control in operation.

For each type of PID control, the following parameters can be set:

- Control probe (return or delivery);
- Proportional gain (Kp);
- Integral time (action disabled when time set to 0);
- Derivative time (action disabled when time set to 0).

The control set point and the operating mode (heating / cooling) are the same for both control types:

- control at start-up is aimed at preventing excess capacity being called. Indeed, as when starting the exact status of the units (loads) is not known, but rather only the temperature, capacity needs to be delivered gradually, awaiting the reaction from the system. Control can be applied to the water return temperature, using a low gain and a sufficiently high integral time, greater than the system time constant (120- 180 s, considering a system time constant of at least 60 s, corresponding to a minimum water content of 2.5 l/kW).
- control in operation needs to be more reactive, so as to respond quickly to any variations in load and keep the delivery water temperature as close as possible to the set point. In this case, the time constant depends on the response of the compressor-evaporator system, and is in the order of a few tens of seconds (slower with tube bundle evaporators, faster with plate evaporators).

The following table shows the recommended values (to be calibrated if necessary during system commissioning), according to the type of evaporator used

C	Description	E	Evaporator		
Code	Description	Tube bundle	Plate		
U036	Control probe at start-up - 0=Return 1=Delivery	Return	Return		
U039	PID at start-up: Kp	6.0	6.0		
U040	PID at start-up: Ti - 0: integral action disabled	180 s	180 s		
J041	PID at start-up: Td - 0: derivative action disabled	0 s	0 s		
U038	Control probe in operation - 0=Return 1=Delivery	Delivery	Delivery		
J042	PID in operation: Kp	10.0	10.0		
J043	PID in operation: Ti - 0: integral action disabled	120 s	120 s		
U044	PID in operation: Td - 0: derivative action disabled	3 s	3 s		

Tab. 5.a

The control sequence is as follows:

- 1. when the unit is Off, both PID controls are disabled;
- 2. when the unit starts, following the set user pump compressor delay, the PID at start-up is enabled and generates a capacity request (percentage) that is then processed so as to activate the compressors;
- 3. if this request is sufficient, one compressor will be started;
- 4. once the compressor has started, after a set time, control switches from PID at start- up to PID in operation;

52 **Functions** μchiller +0300053EN rel. 2.5 - 03.10.2024



- 5. when the controller requests deactivation of the compressors, these are enabled to stop;
- 6. after the last compressor has been stopped, restart is managed using the PID at start-up.

If the delay between PID at start-up/in operation is set to 0, PID control in operation will always be active.

User	Code	Description	Def	Min	Max	UOM
S	U047	Compressor activation delay after user pump	30	0	999	S
S	U037	PID control delay at start-up/operation	180	0	999	S

Tab. 5.b

5.1.2 Proportional control

If the desired control is only proportional to the water outlet or return temperature, consider the relationship:

$$K_p = 100/BP$$

For example, to have a proportional band of 2K, set the value of Kp to 50.

The following are the parameter settings required to control the return temperature:

User	Cod.	Description	Setting	UOM	Note
S	U036	Control probe at start-up - 0=Return 1=Delivery	0	-	-
S	U037	PID control delay at start-up/operation	180	S	Not significant
S	U038	Control probe in operation - 0=Return 1=Delivery	0	-	
S	U039	PID at start-up: Kp	50.0	-	=> Proportional band = 2K
			34.0		=> Proportional band = 3K
			25.0		=> Proportional band = 4K
			20.0		=> Proportional band = 5K
S	U040	PID at start-up: Ti - 0: integral action disabled	0	S	
5	U041	PID at start-up: Td - 0: derivative action disabled	0	S	
Ŝ	U042	PID in operation: Kp	=U039	S	Same as Kp at start-up
S	U043	PID in operation: Ti - 0: integral action disabled	0	S	
S	U044	PID in operation: Td - 0: derivative action disabled	0	S	

Tab. 5.c

5.1.3 Anti-bump

The PID control features a special anti-bump filter that serves to smooth the output following changes to the set point and/or parameter Kp. The anti-bump filter is disabled if the PID is set in pure proportional mode (Ti = Td = 0).

5.1.4 Capacity request from analogue input

The capacity request can only be configured on input S6 (group 3), both on the main board and on the expansion board. The type of signal is set using U089 (0=0-5V, 1=0-10V, 2=4-20mA) for both boards. The setting of U089 will be applied to the analogue input enabled for the request both on the main board and on the expansion board. If the capacity request from analogue input is enabled, the request will be taken into consideration for the main control, and the PID will be disabled.

The following parameters are used to configure S6 as a capacity request input:

U089 Analogue capacity request input type	Def	MinMax	Supervisor
	pe 0	0 to 2	HR 817
U090 Analogue capacity request offset	0	-999.9 to 999.9	HR 818
U091 Analogue capacity request min valu	ue 0	-999.9 to 999.9	HR 820
U092 Analogue capacity request max valu	ue 100	-999.9 to 999.9	HR 822

Tab. 5.d

The unit capacity request is managed according to the following decreasing priority:

1. Request from BMS

The capacity request from BMS is activated with

 $\mbox{Hd}\mbox{06}$ - Enable capacity request from BMS (0=Disabled, 1=Enabled)

Hd05 - Enable unit ON/OFF command by_ BMS net (0=Disabled, 1=Enabled)

2. Request from S6 - main or expansion board

The capacity request from AIN is activated by configuring S6 with Hc03 = 12 or S6 with Hc05 = 12 (Exp)

3. Request calculated by PID

Notice: if S6 is configured as capacity request on both the MAIN and EXP boards, then the request is read from the MAIN board while input S6 on the EXP board is ignored.

µchiller +0300053EN rel. 2.5 - 03.10.2024





5.1.5 Set point compensation

 μ Chiller adjusts the set point based on the outside temperature.


O Notice: this function can only be enabled if the outside temperature probe is fitted.

The compensation (positive or negative) is determined by:

- 1. start compensation start (in cooling/heating);
- 2. end compensation threshold (in cooling/heating);
- 3. maximum compensation value (in cooling/heating).

User	Code	Description	Def	Min	Max	UOM
S	U010	Enable set point compensation: 0/1=no/yes	0	0	1	-
U	SEtC	Cooling set point	7.0	U006	U007	°C/°F
S	U011	Cooling compensation: start	25.0	-99.9	999.9	°C
S	U012	Cooling compensation: end	35.0	-99.9	999.9	°C
S	U013	Cooling compensation: maximum value	5.0	-99.9	999.9	K
U	SEtH	Heating set point	40.0	U008	U009	°C/°F
S	U014	Heating compensation: start	5.0	-99.9	999.9	°C
S	U015	Heating compensation: end	-10	-99.9	999.9	°C
S	U016	Heating compensation: maximum value	5.0	-99.9	999.9	K


Compensation in cooling:

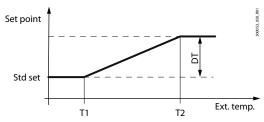

Key	
Ext. Temp.	Outside temperature
Std set	Control set point
T1	Outside temperature to start compensation in cooling mode
T2	Outside temperature to end compensation in cooling mode
DT	Maximum compensation value in cooling mode

Fig. 5.a

Compensation in heating:

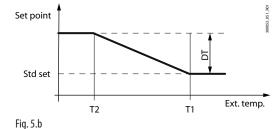

Key	
Ext. Temp.	Outside temperature
Std set	Control set point
T1	Outside temperature to start compensation in heating mode
T2	Outside temperature to end compensation in heating mode
DT	Maximum compensation value in heating mode

5.1.6 Request from BMS

The request can be managed directly from a BMS, bypassing normal temperature control and enabling the external request signal (0-100.0%) via the specific Modbus serial variable (BMS_PwrReq, HR 331). This operation is enabled via another serial variable (En_BMS_PwrReq, CS 22).

Note: if the supervisor is offline, the unit continues to operated in stand-alone mode, regardless of the request from the BMS.

5.1.7 High evaporator outlet temperature alarm

 μ Chiller activates an alarm when the evaporator outlet temperature exceeds the threshold set by the user (via the offset relative to the control set point). When the outlet temperature exceeds the threshold, a counter starts and after a delay (settable), the alarm is activated. An initial delay disables the alarm in the transient period when the unit is starting.




- the alarm is only available on chiller units.
- the high temperature alarm can be used to activate a backup unit in critical applications.

User	Code	Description	Def	Min	Max	UOM
U	SetA	Current set point	-	-999.9	999.9	°C
S	U031	High water temperature alarm: offset	10.0	0.0	99.9	K
S	U032	High water temperature alarm: delay at start-up	15	0	99	min
S	U033	High water temperature alarm: delay in operation	180	0	999	S

54 | Functions μchiller +0300053EN rel. 2.5 - 03.10.2024



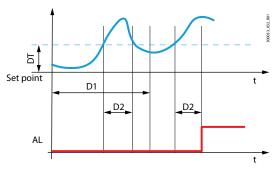

D1	Delay at start-up
D2	Delay in steady operation
AL	Alarm

Current set point

Fig. 5.c

5.1.8 High superheat alarm

The high superheat alarm, if the unit is correctly sized, is an initial indication of a discharged circuit.

The alarm can be enabled by entering an appropriate delay for parameter E073. A typical example would be 30 minutes. The alarm is disabled by entering a delay of 0 minutes (default).

Key Set point

The conditions for activating the timer are as follows:

- High superheat threshold exceeded (parameter E072)
- Valve opening > 97%
- E073 > 0

Otherwise the timer is reset.

The activation threshold is the same for cooling and heating modes.

The high superheat alarms on uChiller are:

- A091 High superheat alarm circuit 1
- · A092 High superheat alarm circuit 2

These alarms

- · do not stop the unit
- · do not stop the circuit
- are manually reset
- start the red spanner LED (service) flashing on the display

User	Code	Description	Def	Min	Max	UOM
M,S,U	E072	High superheat alarm activation threshold	20	0	99.9	K
M,S,U	E073	High superheat alarm delay time	0	0	99	min


Tab. 5.e

5.2 User pumps

μChiller can manage up to two user-side pumps (depending on the hardware used and the required configuration). A delay can be set between pump and compressor activation (= temperature control enabled). A delay can also be set between the deactivation of the last compressor and the pump. If when the unit shuts down the compressors have been shutdown for at least the "user pump shutdown delay after compressor", then the pump is stopped immediately.

User	Code	Description	Def	Min	Max	UOM
S	U047	Compressor activation delay after user pump	30	0	999	S
S	U048	User pump shutdown delay after compressor	180	0	999	S

Tab. 5.f

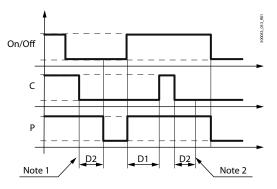

Fi	n	5	d
	y.	J	٠u

Key	
Unit	Unit On-Off (local or remote control)
С	Compressor
Р	User pump
D1	Compressor activation delay after user pump
D2	User pump shutdown delay after compressor
Note 1	Control is not active: the compressors are stopped based on
	their own safety times
Note 2	In this case, the pump can stop immediately

μchiller +0300053EN rel. 2.5 - 03.10.2024





Below is a diagram that represents operation for the configuration with one pump only:

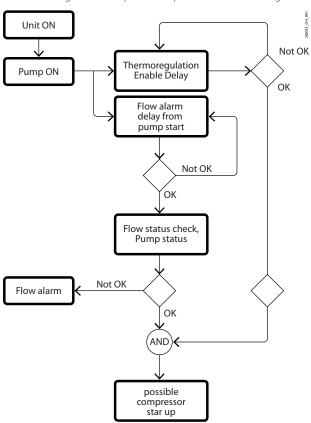


Fig. 5.e

Temperature control is enabled only after the flow alarm delay from pump on, so as to prevent the compressors from starting if there is no fluid flow.

Depending on the configuration, up to two user pumps can be enabled. µChiller includes the following functions:

- with two pumps, automatic rotation to ensure fluid circulation and equalisation of operating hours. Rotation is performed:
 - at the end of a period that can be set, in hours;
 - when there is an overload alarm on the active pump
- management of the pump overload alarm (if available, depending on the controller and the configuration) fault signal and immediate pump deactivation
- management of the flow switch that controls the circulation of fluid in the system: parameter U093, see §5.2.1 below
- frost protection control with unit off and/or on: this function is described in detail in §5.3
- management of the flow switch that monitors fluid circulation in the system.
- frost protection with unit off: the pump is started so as to activate fluid circulation (when the unit is on, the function is disabled).
- pump anti-blocking: if the pump is off for more than a week, it is activated for 3 seconds.

User	Code	Description	Def	Min	Max	UOM
S	U049	User pump rotation time	12	0	999	h

5.2.1 No-flow alarm management

Parameter U093 sets the behaviour of the user pump following a no-flow alarm from flow switch.

User	Code	Description	Def	Min	Max	UOM
S	U093	Management of no-flow alarm from flow switch	FALSE	0	1	-
		FALSE: The flow switch alarm is serious with manual reset. No attempt is made to restore flow. If the second pump is available in the system, the switchover is performed: if flow resumes, then the unit starts operating normally (with the no-flow signal in the alarm log), otherwise the alarm stops the unit and needs to be reset manually.				
		TRUE: The flow switch alarm has semi-automatic reset. Three attempts are made to restore flow. If the second pump is available, the pumps are switched over. After the three attempts, if flow has not been restored, the alarm shuts down the unit and manual reset is required.				

56 Functions μchiller +0300053EN rel. 2.5 - 03.10.2024



5.2.2 Cyclical pump activation during standby

When the chiller serves a chilled water tank (for example, in winemaking applications), the pump does not need to keep running, consequently energy can be saved by stopping the pump when the cooling demand is met. Control is only calculated when the pump is on. A function can be activated to:

- switch the pump off after the compressors are stopped by the temperature controller;
- · activate the pump periodically, in order to reactivate the compressors and satisfy demand from the user.

Parameter U078 enables/disables the function. When the pump is in the OFF phase, reading of the inputs and control are disabled: the unit remains temporarily off. Control can only resume in the pump ON phase, when the reading of the inputs is restored and the capacity request is recalculated. Furthermore, cyclical activation of the pump is automatically deactivated when the water temperature (measured with the pump on) is such as to generate a sufficient request to keep at least one compressor on.

On air-water heat pump units, after defrosting, if the cyclical activation function is active, the unit pump will always start in ON status. Subsequently, if there is no heating request, it will switch off and on cyclically, according to the set parameters.



User	Code	Description	Def	Min	Max	UOM
S	U078	Unit pump in standby: enable On-Off cycles	0	0	1	-
S	U079	Unit pump in standby: On time	3	1	15	min
S	U080	Unit pump in standby: Off time	15	3	99	min

Fig. 5.f

Tab. 5.g

5.3 Frost protection control

Two frost protection control modes are available:

- 1. using the evaporation pressure transducer, which directly monitors the conditions of the evaporator
- 2. using the water temperature probe to monitor the delivery water temperature or the source water temperature on water/ water units in heating mode).

Notice: on the "legacy" units, frost protection control is performed exclusively on the water temperature sensor reading, with no selection. On the legacy model, parameter U082 = 1 (TRUE) cannot be changed.


User	Code	Description	Def	Min	Max	UOM
S	U082	Frost protection control type 0=Evaporation temperature 1=Water temperature	0	0	1	-

5.3.1 Frost protection alarm

When there is a frost alarm on the evaporator, the corresponding circuit is shut down. Each circuit manages its own evaporation pressure transducer, and consequently also the frost protection alarm. The evaporation temperature value is filtered based on an exponential distribution formula that takes into consideration the thermal mass of the evaporator so as to avoid false alarms at start- up. A specific algorithm uses this filtered value and activates the alarm if the frost protection threshold is exceeded. The frost protection alarm reset is set using parameter U081 (see par. 8.1 for further details). If desired, the frost protection alarm can be set as automatic reset: this means the alarm signal will be cancelled automatically if the alarm condition is no longer present. If an evaporation temperature probe is configured, frost protection control will automatically using this probe reading, even if a suction pressure probe is available. If only the suction pressure probe is available, then frost protection control will use the temperature converted from the pressure reading.

User	Code	Description	Def	Min	Max	UOM
S	U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C
S	U051	User side frost protection: differential	30.0	0.0	999.9	K
S	U052	User-side frost protection: delay time at 1K	30	0	999	S

The figure shows the action of the filter on the evaporation temperature, according to the exponential distribution formula.

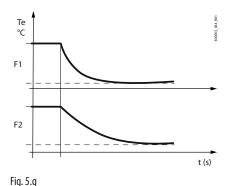


Key	
Te	Filtered evaporation temperature
F1	Filter with low delay
F2	Filter with high delay

μchiller +0300053EN rel. 2.5 - 03.10.2024





When the filtered evaporation temperature falls below the alarm threshold, a counter is activated, and the counter time- out is either increased or decreased based on the deviation of the evaporation temperature from the frost protection threshold, until reaching zero when the deviation from the threshold it is greater than the differential, following a hyperbolic trend. This trend imitates the actual behaviour of ice formation and ensures better protection. The following diagram shows the trend in the alarm delay time according to the deviation from the alarm threshold, using the following values: delay time at 1K=60s; differential=30K. At the threshold the delay is equal to 10 times the set value (600s in the example).

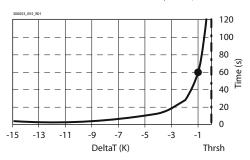

 Key


 Time [s]
 Frost protection alarm delay

 Thrsh
 Frost protection alarm threshold

 DeltaT [K]
 Deviation from the frost protection alarm threshold

Fig. 5.h

Frost protection alarm operation:

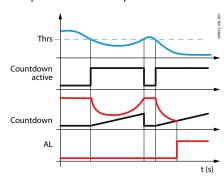

Key	
t [s]	Time [s]
Thrsh	Frost protection alarm threshold
AL	Frost protection alarm

Fig. 5.i

The value of the delay (at 1K) in the previous example refers to a plate evaporator; if a tube bundle evaporator is used, which has greater thermal inertia, the delay time (at 1K) can be increased to a suitable value. The following table shows the recommended values for the alarm threshold (with pure water), differential and delay, according to the type of evaporator used.

Code	Description	Recommended values based on the heat exchanger			
Code	Description	Tube bundle	Plate		
U050	User side frost protection: alarm threshold	-0.3 °C	-1.2 ℃		
U051	User side frost protection: differential	30 ℃	30 ℃		
U052	User-side frost protection: delay time at 1K	90 s	60 s		


Tab. 5.h

With pure water, the frost protection threshold must be set just below zero (from -0.8° C to -1.5° C) to account for the heat transfer temperature gradient across the metal between the refrigerant and the water. For tube bundle heat exchangers, values close to zero (above -0.5° C) should be considered, to guarantee better protection due to their specific mechanical construction.

5.3.2 Frost protection threshold with glide (R407C)

A correct frost protection threshold also needs to consider the minimum temperature reached inside the evaporator. When using refrigerants without glide or with minimum glide (e.g. R410A, R134a), the value coincides with the pressure-temperature conversion (dew) of the transducer fitted on the suction pipe, while for refrigerants with glide (e.g. R407C), the value to be used is lower than the pressure-temperature conversion (in the case of R407C it is 5-6°C). The following diagram clearly shows the difference between the two temperature values (Tin and Tout) at the evaporation pressure (Pevap) due to the "glide" effect of the refrigerant.

P-H Diagram - Zeotropic Blend

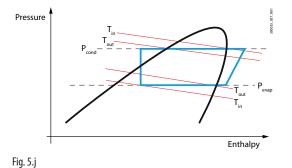

Key	
Tin (Pevap)	Evaporator refrigerant inlet temperature
Tout (Pevap)	Saturated evaporation temperature "dew"
Pcond	Condensing pressure
Pevap	Evaporation pressure

Note: as a consequence of the above, the suggested frost protection set point with pure water and R407C refrigerant is 4-4.5°C.

58 Functions μchiller +0300053EN rel. 2.5 - 03.10.2024



5.3.3 Frost protection alarm with water temperature

The frost protection alarm uses the water delivery probe (user) in cooling mode, while in heating mode, on water/water units, it uses the water temperature. When there is a frost alarm, the corresponding circuits are shut down. When the temperature is below the alarm threshold, the alarm is activated, and it is reset when it rises back above the threshold plus a differential.

User	Code	Description	Def	Min	Max	UOM
S	U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C
S	U051	User side frost protection: differential	30.0	0.0	999.9	K

5.3.4 Frost prevention

The frost protection threshold on the evaporation temperature is used as the minimum evaporation temperature threshold for frost prevention. Prevention is applied by limiting circuit capacity when the threshold is exceeded and activating on the frost protection heater, if configured. For details on configuring the frost protection heater, see the next paragraph, par 5.3.5

Notice: to ensure correct user-side frost protection, at least one probe - evaporation pressure/temperature or delivery water temperature - must be configured. For further details, see par 2.12.5 Disabling frost protection and/or free cooling when no probe is configured.

5.3.5 Frost protection management with two circuits

Frost protection management on Legacy models

The "Legacy" model for backward compatibility allows frost protection control only on the water temperature. For units with a common evaporator (F003 = 0), frost protection control uses the common delivery temperature and the frost protection alarm shuts the unit down. If the common delivery temperature probe is not configured, frost protection control is disabled. For units with two independent evaporators (F003 = 1), frost protection control is managed independently on each circuit. In this case, the frost protection alarm only stops the corresponding circuit. It can be normal for one circuit to stop due to a frost protection alarm while the other continues operating, when there are no additional alarm conditions. Frost protection control uses the water outlet temperature probe on each evaporator. If no outlet temperature probe is configured, frost protection control is disabled

Frost protection management on the standard model

The standard model does not manage independent evaporators (F003 = 0, not modifiable). Frost protection control can be selected to use the evaporation pressure/temperature or water temperature.

Frost protection control on evaporation pressure/temperature is managed independently on each circuit. The frost protection alarm only stops the corresponding circuit. Frost protection control uses the evaporation temperature (see par 5.3.1 for further details). If frost protection control is set on the water temperature, the frost protection alarm shuts the unit down.

If no frost protection control probe is configured, frost protection control is disabled

The following table illustrates frost protection management on a case-by-case basis for units with two circuits. For single-circuit units, management is practically the same, with only the difference that the frost protection alarm always shuts the unit down.

μChiller	Frost protection (U082)	Device	Unit status	Management
Standard	On water and/or on evaporation probe	Source User	OFF	Frost protection control is only performed on circuit 1, using the outlet temperature probe. When the frost protection threshold is reached, alarm signal A28 is activated. The heater is activated, where configured.
Standard	On water	User (CH) Source (HP WW)	ON	The standard μ Chiller does not manage two independent evaporators, each with its own outlet probe, but rather manages frost protection control using the common delivery temperature probe, which can only be configured on circuit 1. Frost protection control only uses this probe. The frost protection alarm shuts the unit down. The frost protection heater is activated if configured.
Standard	On evaporator probe	User (CH) Source (HP WW)	ON	Frost protection control is performed on both circuits independently, each with its own evaporation pressure/temperature probe. The frost protection alarm only stops the corresponding circuit. The heater in the circuit with the frost protection alarm is activated. If there are no additional alarm conditions, the other circuit continues operating normally.
Legacy	On water	User (CH) Source (HP WW)	OFF	Frost protection control is only performed on circuit 1. The common delivery temperature probe is used. The frost protection heater is activated on both circuits. The frost protection heater and auxiliary heater are activated if configured.
Legacy	On water	User (CH) Source (HP WW)	ON	1 - Evaporators with common water circuit (F003 = 0) Frost protection control uses the common delivery temperature probe. The frost protection heater and auxiliary heater are activated if configured. 2 - Independent evaporators (F003 = 1) Frost protection control is managed independently using the delivery temperature in each circuit. If there are no additional alarm conditions, the other circuit continues operating normally. The frost protection heater and auxiliary heater are activated if configured.

Tab. 5.i

μchiller +0300053EN rel. 2.5 - 03.10.2024 Functions | 59





Notice:

- The frost protection heater is always controlled based on its position and the unit operating mode, heating or cooling. See par. 5.6.7
- The second frost protection heater will only be linked to the frost protection control function on the second circuit and will never be used as the second frost protection stage.

5.3.6 Frost protection with the unit OFF

When the unit switched off, μ Chiller provides frost protection: the water is prevented form freezing by activating a pump and/or frost protection heater. When the water temperature in the heat exchangers reaches the frost protection set point, the selected device is activated. The probe used is the one located on the user heat exchanger outlet and source heat exchanger inlet. The following devices can be activated:

- · heater;
- · pump;
- · heater and pump.

The frost protection alarm signal is shown even if the unit is off.

Considering that there is only one digital output per circuit for the heaters, the installation position of the frost protection heater needs to be selected using parameter U088, between:

- user
- source
- user and source (one digital output for both heaters)

5.3.7 Frost protection heater configuration

To correctly configure the frost protection heater, in addition to setting parameter U088, the digital output also needs to be set as "frost protection heater". Only one heater can be configured per circuit. For further details also see par. 6.6

User	Code	Description		Min	Max	UOM
S	U053	nit OFF: frost protection set point		-99.9	999.9	°C
S	U054	nit OFF: frost protection differential		0.0	99.9	K
S	U075	ost protection type - 0=Heater 1=Pump 2=Heater/pump		0	2	-
S	U088	Frost protection heater position - 0 = User 1 = Source 2 = User/Source	0	0	2	-

The frost protection heater is also activated in the event of an frost protection alarm when the unit is ON, after the unit and/or circuit is stopped.

5.4 Compressor rotation

If there is just one compressor, the temperature control request will be exactly the same as the request that the compressor needs to satisfy. On units with two compressors, μ Chiller manages rotation in order to balance compressor operating hours and starts, so as to best deliver the required capacity.

5.4.1 Type of rotation

 $\mu\text{Chiller}$ starts and $\ \text{stops}$ the compressors based on:

- FIFO rotation (First In First Out), meaning the first compressor to start will also be the first to stop;
- activation time: the first compressor to start will be the one with the lowest number of operating hours. If the circuit is equipped with a variable-speed (BLDC) compressor, this will always be the first to start and the last to stop.

	1 .		1 .	1	ı	I.
User	Code	Description	Def	Min	Max	UOM
M	C0/18	Compressor rotation type - 1-FIFO 2-Time	1	1	2	1_

60 Functions μchiller +0300053EN rel. 2.5 - 03.10.2024



5.4.2 Capacity distribution


 μ Chiller manages the most suitable capacity distribution between the circuits so as to increase overall unit efficiency. The behaviour of capacity distribution varies based on:

- whether there are 1 or 2 circuits;
- the type of compressor(s) used: modulating (BLDC) or fixed speed;
- the ratio between compressor capacities.

To avoid simultaneous starts or stops of several compressors, there are two fixed minimum delays: one between starts (C015) and the other (C016) between stops.

Compressor capacity distribution in steps

Below is an example of capacity distribution with two circuits in the tandem configuration with two fixed-speed compressors (scroll), each with the same capacity, and FIFO rotation.

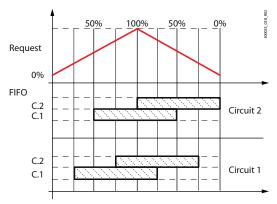

Key	
Request	Capacity request (temperature control)
C.1	Compressor 1
C.2	Compressor 2

Fig. 5.k

Capacity distribution with BLDC compressors

If the circuit is equipped with a BLDC compressor, this will always be the first to start and the last to stop. Circuit operation is modulated so as to meet the capacity request, adjusting BLDC compressor speed and controlling the activation of ON-OFF compressors.

Note: the configuration envisaged requires the capacity of the ON/OFF compressor to be equal to 60% of the capacity of the BLDC compressor (at maximum speed).

User	Code	Description	Def	Min	Max	UOM
М	C015	Compressor load up time	30	5	999	S
M	C016	Compressor load down time	10	5	999	S

5.4.3 Rotation due to alarm

In the event of a compressor alarm, the next compressor available will be switched on as a replacement if the temperature control request is sufficiently high as to warrant starting another compressor.

5.4.4 Force rotation (destabilisation)

Some compressor manufacturers specify that on units with multiple compressors, the compressors need to be rotated after a certain period of inactivity, even if control is stable.

The destabilisation function, which meets this requirement:

- can be enabled by parameter;
- avoids refrigerant migration during long periods of inactivity;
- can also be used to keep all the compressors at operating temperature.

User	Code	Description	Def	Min	Max	UOM
M	C020	Maximum circuit destabilisation time	240	5	999	min
M	C044	Enable destabilisation - 0/1=No/Yes	1	0	1	-

µchiller +0300053EN rel. 2.5 - 03.10.2024





5.5 Compressor management

μChiller manages scroll compressors with direct starting or modulating BLDC compressors (scroll and rotary).

A maximum of 4 scroll compressors are available in tandem configuration on two circuits; in the High Efficiency models, with BLDC compressors, the maximum is 1BLDC+1On-Off per circuit.

The flow chart below shows the process for calculating the request to the compressors:

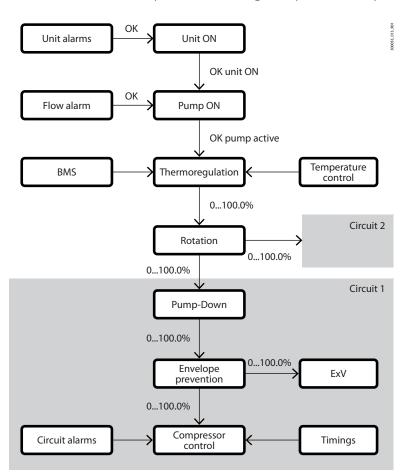


Fig. 5.1

Note: for the sake of simplicity, the parameters are shown for just one compressor and one circuit, therefore all the compressors and circuits on the unit will have the same settings.

5.5.1 Predefined BLDC compressors

The type of BLDC compressor can be chosen from the list of compressors available on KSA (ksa.carel.com), under:

KSA / SW&Support /Configuration & Updating software / ST Configuration / BLDC Compressors

When selecting a specific type of compressor, the following parameters are set based on the compressor manufacturer's technical specifications:

- 1. compressor motor:
 - all the characteristic electrical parameters of the compressor motor;
 - minimum and maximum frequency settings, acceleration and deceleration ramps.
- 2. compressor envelope:
 - all the characteristic points that define the shape of the compressor envelope;
 - maximum discharge temperature (compressor outlet).
- 3. compressor envelope management:
 - MOP and pressure difference (DeltaP), minimum ExV opening parameters;
 - working point control parameters;
 - prevention parameters.

62 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



5.5.2 Safety times

μChiller guarantees compliance with compressor safety times, such as:

- · minimum on time;
- · minimum off time after deactivation request from controller;
- · minimum time between consecutive starts.

User	Code	Description D		Min	Max	UOM
М	C012	Min compressor on time	180	30	999	S
M	C013	n compressor off time 6		30	999	S
M	C014	Min time between consecutive compressor starts	360	0	999	S

5.5.3 BLDC compressor start-up

µChiller manages the start-up of BLDC compressors in accordance with the manufacturer's specifications: on starting, the compressor is brought to start- up speed and kept at that speed, irrespective of the control request, for the entire minimum on time. At the end of this period, the speed is modulated by the controller, based on:

- request
- · position of the working point in relation to the compressor envelope (see par. "Prevention actions").

Note: if at start-up the differential pressure is greater than the maximum allowed start-up threshold, the compressor remains on call awaiting the pressure to drop below the threshold. If after 5 minutes the compressor has not yet started, a specific alarm will be activated (A43/A76). However, this alarm still allows the other compressors to start.

User	Code	Description	Def	Min	Max	UOM
M	P021	Max. deltaP at start-up	900.0	0.0	2000.0	kPa

5.5.4 BLDC oil recovery

When the refrigerant gas speed in the circuit is below the value required to entrain the oil, operation periodically needs to be set to a sufficient value to guarantee oil return to the compressor crankcase.

The function forces an increase in BLDC compressor capacity for a specific time, when the circuit has remained at low load (par. P007) for a minimum time (par. P008).

User	Code	Description		Min	Max	UOM
М	P018	Enable oil recovery - 0/1=No/Yes 0		0	1	-
М	P007	il recovery: min speed for activation		0.0	999.9	rps
M	P008	Oil recovery: comp. operating time at low speed	15	0	999	min
М	P009	il recovery: force comp. speed time		0	999	min
М	P010	Oil recovery: force comp. speed value	50.0	0.0	999.9	rps

5.5.5 Tandem BLDC oil equalisation

A solenoid valve is activated to take the oil from the crankcase overflow on each compressor and put it back in circulation (for example, at the inlet to the common manifold). If the function is enabled, when the fixed speed compressor starts, the solenoid valve is activated for an initial time (par. P011), and then cyclically for a time (par. P012), with a pause that increases over time from the minimum value (par. P013) to the maximum value (par. P014) in the specified time (par. P015).

User	Code	Description	Def	Min	Max	UOM
М	P017	Enable oil recovery - 0/1=No/Yes	0	0	1	-
М	P011	Oil recovery: min speed for activation	30	0	999	S
M	P012	Oil recovery: comp. operating time at low speed	3	0	999	S
М	P013	Oil recovery: force comp. speed time	1	0	999	min
M	P014	Oil recovery: force comp. speed value	15	0	999	min
М	P015	Equalizzazione olio: tempo incremento elettrovalvola chiusa	20	0	999	min

5.5.6 Compressors with capacity control

Compressors with capacity control can be set in the compressor plus valve configuration, on a maximum of two circuits. For compressors with capacity control, the FIFO or timed rotation logic will refer to the circuit and not to the compressor valves. By setting compressor capacity control with parameter F027, two compressors per circuit are automatically configured (C047=1). C047 cannot be modified.

The second compressor digital output is managed as a capacity control valve.

The logic of the digital output relating to the capacity control element is managed by parameter C052.

Case C052 = FALSE

The logic is identical to that of compressors as set by parameter C036. It may be necessary to add an external device to reverse the operating logic of the capacity control valve.

Case C052 = TRUE

Standard behaviour (see the following tables)

Tables of digital output operation for compressor 1 + capacity control device

μchiller +0300053EN rel. 2.5 - 03.10.2024 Functions 63





• 1 circuit, C052=TRUE, F027=TRUE

Request	Unit OFF	0%	50%	100%
Comp. 1 out	OFF	OFF	ON	ON
Comp. 2 out (capacity control)	OFF	ON	ON	OFF
				Tab. 5.j

• 2 circuits, C052=TRUE, F027=FALSE

REQUEST	OFF	0%	25%	50%	75%	100%
Comp1 Circ1	OFF	OFF	ON	ON	ON	ON
Cap. control Circ 1	OFF	ON	ON	ON	OFF	OFF
Comp1 Circ2	OFF	OFF	OFF	ON	ON	ON
Cap. control Circ 2	OFF	ON	ON	ON	ON	OFF

Tab. 5.I

1 circuit, C052=FALSE, F027=TRUE

Request	Unit OFF	0%	50%	100%
Comp. 1 out	OFF	OFF	ON	ON
Comp. 2 out (capacity control)	OFF	ON	ON	OFF
				Tab. 5.k

• 2 circuits, C052=FALSE, F027=FALSE

REQUEST	OFF	0%	25%	50%	75%	100%
Comp1 Circ1	OFF	OFF	ON	ON	ON	ON
Cap. control Circ 1	OFF	OFF	OFF	OFF	ON	ON
Comp1 Circ2	OFF	OFF	OFF	ON	ON	ON
Cap. control Circ 2	OFF	OFF	OFF	OFF	OFF	ON

Tab. 5.m

Notice:

- The above tables refer to the load/unload sequence on first activation. Subsequently, the sequence may change due to compressor rotation.
- If the output of the 2nd compressor is managed as a capacity control element (PartialisedComp=TRUE), the safety times referring to compressor 2 (on each circuit) are ignored.
- Vice versa, the load up/down times managed by rotation are maintained, to avoid unnecessary on/off cycles.

Example (case C052 = FALSE)

if circuit 1 starts when power returns, compressor 1 starts at part capacity, then the valve is managed as the second step, so that the compressor works at the highest efficiency. If less capacity is needed, first the valve that manages compressor capacity will be deactivated and then the compressor itself. There is no rotation between compressor and valve. When capacity is needed again, the second circuit with compressor 2 will be activated and, subsequently, if required, the corresponding valve. On deactivation, the valve will be managed first, and only then the compressor.

		I	DIGITAL OUTPUTS	
REQUEST	Comp 1 Circ 1	Valve 1 Circ 1	Comp 1 Circ 2	Valve 1 Circ 2
0% to 25%	OFF	OFF	OFF	OFF
25% to 50%	ON	OFF	OFF	OFF
50% to 75%	ON	OFF	ON	OFF
75% to 100%	ON	ON	ON	OFF
100%	ON	ON	ON	ON

Tab. 5.n

User	Code	Description	Def	Min	Max	UOM
M	F027	Enable compressor capacity control 0/1=No/Yes	0	0	1	-
M,S,U	C052	Compressor with capacity control: output logic (0=NC, 1=NO) 0 0 1		1	-	

5.5.7 Prevent on condensing temperature with OnOff compressors

If more than one OnOff compressor is available on the unit, a check and consequent preventive action is carried out on the condensing pressure. Control is always active (it cannot be disabled by parameter). The activation threshold is set by parameter C017 minus 1° C; i.e. the prevent action starts 1° C below the condensing temperature value set for C017. The differential to reset the prevent action is 5° C (not modifiable). If the circuit has both compressors on and the pressure exceeds the value C017 - 1° C, then one of the two compressors is switched off (according to the compressor rotation). The prevent action ends when the condensing temperature falls below the 5° C differential. If the prevent function is not sufficient to guarantee correct operation of the unit and the condensing temperature exceeds C017, then the high condensing pressure alarm management is activated.

User	Code	Description	Def	Min	Max	UOM
M	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C

5.5.8 Modulating AC compressor management

uChiller manages a modulating AC compressor, also in the tandem configuration. The control software requires the compressor to have its own inverter (not necessarily a Carel device) which is driven by a 0-10 V signal provided by the controller via the analogue output. There are no alarms or feedback to the controller from the inverter, other than a thermal overload alarm and/or a generic alarm to be connected to one or more available digital inputs. Management of modulating AC compressors is available in all part numbers, including the panel model, although the latter does not manage BLDC compressors and does not include built-in valve control.

AC compressor speed management

The capacity request to the modulating AC compressor is managed as a percentage value (%); this value is then limited between the minimum set for C082 (default 30%) and the maximum set for C081 (default 100%); finally, the value is converted into a 0-10 V analogue signal and sent to the output, to be read by the inverter that drives the compressor. The rps are not managed.

Cut-off

54 Functions μchiller +0300053EN rel. 2.5 - 03.10.2024



The AC compressor control cut-off is automatically calculated in relation to the minimum operating speed, with reference to the total unit cooling capacity.

Envelope

Carel inverter management is disabled. Consequently, envelope management is also disabled, together with the related protection and control logic. Out-of-envelope prevention actions are not available. Finally, the management of envelopes with different shapes depending on compressor rotation speed is also disabled.

Protection

The active prevention actions are the same as for management of On/Off compressors, based on pressure thresholds (high and low) and frost protection. In addition, a specific protection functions is available for AC compressors, with high and low pressure thresholds, as follows.

· Low pressure

When reaching 1 bar (fixed, non-modifiable value) from the low suction pressure threshold set for parameter C018, the compressor speed is gradually reduced, until the compressor switches off when the pressure threshold is reached.

High pressure

When reaching 1°C (fixed, non-modifiable value) from the condensing temperature threshold set for parameter C017, the compressor speed is gradually reduced, until the compressor switches off when the temperature threshold is reached.

In the tandem configuration, when the pressure enters the prevention zone, the On/Off compressor, if on, is switched off. The following diagram schematically illustrates the HP/LP protection action for AC compressors.

The nominal request "PwrReqAC" sent to the compressor is gradually reduced to the value "PwrReqPrev" when the suction pressure and/or the condensing temperature enter the prevention zone.

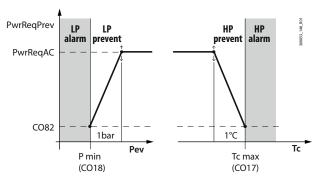


Fig. 5.m

Alarms

There are no specific alarms for the AC inverter. No feedback from the inverter is considered.

2nd circuit

The load/unload sequence for the 2nd circuit works in the same way as for OnOff compressors, with the difference that the capacity distribution is that relating to the variable-speed compressor.

Digital output

A digital output can be optionally enabled for compressor control. To do this, simply set the output as "compressor 1" in the circuit, using the relevant configuration parameter.

Expansion valve

With AC compressors, both ExV and thermostatic valves can be used. It is strongly recommended to use Carel electronic expansion valves.

Cycle reversal via the 4-way valve (on reverse-cycle units)

Reversal of the refrigerant circuit and/or the fluid circuit on reverse-cycle units is the same as for On/Off compressors

Parameters

AC compressor management is enabled by the following parameters:

- C047 = 4: enables a single AC compressor
- C047 = 5: enables an AC compressor in tandem with an On/Off compressor

The parameters shown in the following table, however, limit the request sent to the compressor.

User	Code	Description	Def	Min	Max	UOM
U,M,S	C081	Maximum limit on request sent to AC compressor	100%	0.0	100	%
U,M,S	C082	Minimum limit on request sent to AC compressor 30% 0.0			100	%

μchiller +0300053EN rel. 2.5 - 03.10.2024 **Functions**





5.6 BLDC compressor protectors

To prevent the compressor from working outside the safety limits specified by the manufacturer, µChiller provides controls the operating limits (defined as the envelope) of BLDC compressors. In addition to the operating limits specified by the manufacturer, the maximum condensing temperature (par. P001) and minimum evaporation thresholds (par. P000) can be customised; these custom thresholds are considered only if they are more restrictive than the manufacturer's limits. On-Off compressors have no envelope data: the operating limits can be set using the parameters for the maximum high pressure threshold equivalent temperature (par. C017), frost protection alarm thresholds (par. U050 and S057) and MOP threshold (to control the maximum evaporation temperature, par. E020 and E022).

Utente	Cod.	Descrizione	Def	Min	Max	U.M.
S	P000	Min evaporation temp.: custom limit	-25.0	-99.9	999.9	°C/°F
S	P001	Max condensing temp.: custom limit	70.0	-99.9	999.9	°C/°F
М	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
М	C018	Min low pressure threshold (LP)	0.2	-99.9	99.9	bar
S	U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C
S	S057	Source frost protection: alarm threshold	-0.8	-999.9	999.9	K
М	E020	MOP in cooling: threshold	30.0	-60.0	200.0	°C
M	E022	MOP in heating: threshold	20.0	-60.0	200.0	°C

Di seguito la descrizione delle zone di lavoro di un inviluppo generico di un compressore BLDC:

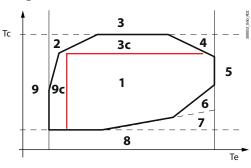


Fig. 5.n

Zone	Par.	Description
1		Zone inside the operating limits (the prevention function is still active to prevent operation outside of the limits)
2		High compression ratio
3		High condensing pressure
3с	P001	Custom maximum condensing pressure threshold
4		Maximum motor current
5		High evaporating pressure
6		Minimum compression ratio
7		Minimum differential pressure
8		Low condensing pressure
9		Low evaporating pressure
9с	P000	Custom minimum evaporation pressure threshold

Tab. 5.0

When the compressor working point is outside of the envelope, an alarm delay starts counting: if the working point remains outside of the envelope, when the delay expires, a specific alarm is activated that stops the compressor; if, on the other hand, the working point returns back inside the envelope limits, the alarm delay is reset.

The high condensing pressure limit is determined by the minimum between:

- the nominal compressor threshold;
- the threshold modifiable by Service (par. P001).

The high evaporation pressure limit is determined by the minimum between:

- · the nominal compressor threshold;
- the set MOP threshold (par. E020: chiller and E022: heat pump);

The low evaporation pressure limit for the prevention action is determined by maximum between:

- · the nominal compressor threshold;
- the threshold modifiable by Service (par. P000);
- the frost protection limit, depending on the mode (par. U050 in cooling and par. S057 in heating with water/water units).

In addition to the operating limits defined by the shape of the envelope, there is also (heat pump versions only) a "Maximum discharge temperature" limit (specified by the compressor manufacturer), at which the compressor is shut down.

66 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024




BLDC comp. alarm prevention

The evaporation and condensation pressures determine a working point in a zone of the envelope, and depending on the zone, the controller applies corrective actions to maintain or return BLDC compressor operation within the limits.

Prevention actions for BLDC compressors

Below is the description of the working zones in a generic envelope for BLDC compressors:

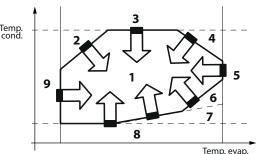

Zone	Description	
1	Zone inside the operating limits	
2	Prevention due to high compression ratio	
3	Prevention due to high condensing pressure	
4	Prevention due to high motor current	
5	Prevention due to high evaporation pressure	
6	Prevention due to low compression ratio	
7	Prevention due to low differential pressure	
8	Prevention due to low condensing pressure	
9	Prevention due to low evaporation pressure	
		Tab. 10.a

To allow the compressor to work inside the envelope, specific prevention actions are adopted that adjust circuit capacity, the source fan set point and the opening of the ExV valve.

In particular, the actions involving circuit capacity are: · decrease the rate at which the capacity request from the temperature controller increases/decreases when approaching the limit of the envelope;

· limit/increase circuit capacity.

Fig. 10.b

The action on the ExV valve is applied by varying the MOP threshold (maximum evaporation temperature): the algorithm follows the set point, decreasing valve opening, and therefore reducing the mass flow of refrigerant, which in turn lowers the evaporation temperature. This action is applied with both BLDC compressors and fixed-speed compressors.

The actions involving the rate of capacity variation start when the working point is a set distance from the compressor operating limits. These actions are only possible with BLDC compressors.

In the event of fixed-speed compressors, the only actions possible on the circuit are to limit capacity via the number of the compressors on: this is implemented as soon as the working point exceeds the maximum condensing temperature (par. C017) or minimum evaporation temperature (par. U050/S057) or minimum evaporation threshold (par. C018) - or the minimum of the two.

Below are details of the various actions to prevent the operating limits from being exceeded; action 1 refers to the control action (before exiting the envelope); action 2 to the limiting action (working point already outside of the envelope).

Low evaporation pressure prevention (zone 9)

The low evaporation pressure limit for the prevention action is determined by maximum between:

- the nominal compressor threshold (BLDC only);
- the threshold set by the "Manufacturer": par. C018/P000 for On-Off/BLDC compressor;
- the frost protection limit, depending on the operating mode: par. U050 in cooling mode and S057 in heating mode with water/water units.

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase.
	2. Limit capacity
Tandem on-off compressors	1
	2. Shutdown a compressor
ExV	-
Fan	-


μchiller +0300053EN rel. 2.5 - 03.10.2024 **Functions**





High compression ratio prevention (zone 2)

A high compression ratio is a thermal limit of compressor operation: normally control is activated at the limit of the envelope, reducing capacity when the limit is exceeded; if a probe is fitted to measure discharge temperature (HP version only) and if the temperature approaches the limits, compressor capacity will be modulated so as to managed the critical condition. A specific algorithm initially slows down the increase in capacity, until stopping it completely when at the set point (5°C below the maximum limit); if the temperature increases further, the algorithm gradually and slowly reduces capacity, taking into account compressor thermal inertia.

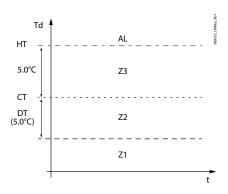

Key	
Td	Discharge temperature
HT	Low discharge temperature alarm threshold
CT	High discharge temperature control threshold
DT	Control action deviation
AL	High discharge temperature alarm zone
Z3	Capacity reduction zone
Z2	Acceleration control zone
Z1	Normal operating zone

Fig. 5.0

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase.
	2. Limit capacity
Tandem on-off compressors	-
ExV valve	-
Fan	-

High condensing pressure prevention (zone 3)

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase.
	2. Limit capacity
Tandem on-off compressors	1
	2. Shutdown a compressor
ExV valve	-
Fan	-

High motor current prevention (zone 4)

Device	Description
BLDC compressor	1. Decrease the rate of capacity increase.
	2. Limit capacity
Tandem on-off compressors	1
	2. Shutdown a compressor
ExV valve	MOP with specific algorithm
Fan	-

High evaporation pressure prevention (zone 5)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction.
	2.
Tandem on-off compressors	-
ExV valve	MOP
Fan	-

Low compression ratio prevention (zone 6)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction.
	2. Increase capacity
Tandem on-off compressors	-
ExV valve	Variable MOP
Fan	Increase condensing pressure set point/decrease evaporation pressure setpoint

Low differential pressure prevention (zone 7)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction.
	2. Increase capacity
Tandem on-off compressors	-
ExV valve	Variable MOP
Fan	Increase condensing pressure set point/decrease evaporation pressure setpoint

68 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



Low condensing pressure prevention (zone 8)

Device	Description
BLDC compressor	1. Decrease the rate of capacity reduction.
	2. Increase capacity
Tandem on-off compressors	-
ExV valve	-
Fan	-

5.8 Compressor alarms

If abnormal conditions occur and the prevention actions are not effective, the compressor will be shut down so as to avoid damage to the compressor itself or other unit components, i.e. the control algorithm stops the compressors and closes the expansion valve.

Compressor shutdown

The compressors will be available again after the:

- minimum compressor off time (par. C013);
- minimum time between consecutive compressor starts (par. C014).

User	Code	Description	Def	Min	Max	UOM
M	C013	Min compressor off time	60	30	999	S
M	C014	Min time between consecutive compressor starts	360	0	999	S

Compressor delay at start-up/in operatio

Compressor start-up is a critical phase. µChiller thus manages certain alarms differently, in order to switch smoothly from startup to normal, steady operation. These alarms are:


- low differential pressure;
- out of envelope alarm.

There are thus two delays for these alarms:

- · delay at start-up;
- · delay in operation.

The alarm condition is ignored when the compressor is off and during the start-up phase. When the unit reaches steady operation, the condition causes the corresponding alarm once the delay has elapsed.

Behaviour will thus be as follows

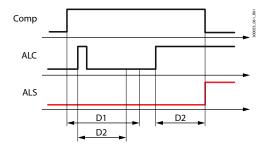

Key	
Comp	Compressor status
ALC	Status of the alarm condition
ALS	Alarm signal
D1	Alarm disabling from compressor start-up
D2	Alarm delay in operation
t	Time

Fig. 5.p

Power+ Speed drive 5.9

When the unit is fitted with a BLDC compressor, this is controlled by the Power+ speed drive, connected to the FBus serial port on µChiller via the Modbus circuit 1 protocol with a baud rate of 19200 bps. Use a specific cable for RS485 (AWG20-22 with 1½ twisted pair plus shield). See the Power+ instruction manual +0300048EN.

5.10 Expansion valve driver

The driver to manage the electronic expansion valve is a fundamental device for the µChiller controller. This is used to safely manage the compressor and thus the circuit, constantly controlling the discharge temperature and the position of the working point inside the compressor envelope. The solution provided manages unipolar valves up to a certain cooling capacity (Carel E3V - cooling capacity up to 90-100 kW) with the built- in driver (DIN model only) and bipolar valves with higher capacities, using the external EVD Evolution driver. This must be connected to the FBus serial port on µChiller via the Modbus circuit 1 protocol with a baud rate of 19200 bps. Use a specific cable for RS485 (AWG20- 22 with 11/2 twisted pair plus shield). See the chapter "Installation".

μchiller +0300053EN rel. 2.5 - 03.10.2024 Functions





Note

- EVD Evolution is only used as an expansion valve positioner;
- if the ExV electronic expansion valve is used, the suction temperature probe is connected to input S3 (panel model) or S7 (DIN rail model). See the functional diagrams. For the installation guidelines, see document +040010025, available at www. carel.com.

5.11 Control of the expansion valve

The control logic manages various functions:

- · communication with the EVD Evolution driver, if used (read/write parameters via FBus serial port);
- control of suction superheat (SSH);
- low superheat control and alarm (Low SH);
- minimum evaporation temperature control and alarm (LOP);
- maximum evaporation temperature control and alarm (MOP);
- · control of cooling capacity, so as to position the valve correctly in the transient stages according to circuit control status;
- control algorithm that calculates the valve opening steps;
- · valve opening value sent to the valve driver.

If the EVD Evolution driver is offline, all the compressors are stopped immediately.

Dedicated electronic expansion valve parameters

Certain parameters relating to the electronic expansion valve vary according to the operating mode:

- · chiller;
- heat pump. These are:
- superheat parameters (set point and PID);
- alarm thresholds and integral actions for protection functions: LOP, MOP and Low SH

5.12 Ultracap module and blackout management (DIN only)

In the event of a blackout and if the Ultracap module is connected to uChiller, the following actions are performed:

- 1. Serious alarm "A90 Power failure alarm": the alarm will be saved in the alarm log
- 2. Unit safety shutdown with the connected devices switched off (compressor, fan ...)
- 3. Forced closing of the unipolar ExV valve.
- 4. The display is switched off to save energy and extend the operating autonomy of the Ultracap module as much as possible

In the event where power returns before the Ultracap module has run out of power, the alarms are automatically reset and the unit resumes normal operation. In any case, the blackout signal is always available in the alarm log as alarm A90.

5.13 Source pump

 μ Chiller manages one source-side pump (water/water units only). In the same way as for the user pumps, the source pump is activated when the unit is switched on, and a shutdown delay after the last compressor stops can be set.

The source pump can be activated:

- · when the unit is switched on, and after a set delay for switching off after the unit has been switched off;
- · when the first compressor starts, and after a set delay for switching off after the last compressor stops;
- · via temperature control. Below is a table summarising the probes used for controlling the pump in each configuration:

Circuit	Probes used for control			
	Chiller	Heat pump		
1	Condensing press./temp. circuit 1	Evaporation press./temp. circuit 1		
2	Condensing press./temp. circuit 2	Evaporation press./temp. circuit 2		
		·	T. I. C	

Tab. 5.p

µChiller manages:

- frost protection with the unit off: the pump is started so as to activate fluid circulation (when the unit is on the function is disabled).
- pump anti-blocking: if the pump is off for more than a week, it is activated for 3 seconds

User	Code	Description	Def	Min	Max	UOM
S	S072	Source pump activation 0=Always on	0	0	2	-
		1= On with compressor on				
		2= Control on condensing press/temp.				
S	S028	Source pump in cooling: set point	30.0	-999.9	999.9	°C
S	S029	Source pump in heating: set point	10.0	0.0	99.9	°C
S	S034	Source pump: differential in cooling	15.0	0.0	99.9	K
S	S035	Source pump: differential in heating	5.0	0.0	99.9	K

70 **Functions** μchiller +0300053EN rel. 2.5 - 03.10.2024



5.13.1 Source pump and/or fan alarm

uChiller provides the possibility to configure a digital input, for each circuit, to signal a problem on the source side, such as a fan or pump overload. Alarms A88 and A89 are generated respectively. Each digital input affects its own circuit. For units with two circuits, with alarms on both inputs, the unit will be switched off; otherwise each alarm only stops its own circuit. For single-circuit units, the alarm (A88) shuts down the unit. For two-circuit units with S064 = 1 (common water/air circuit), the "Source fan/ pump 2 alarm" will be ignored. Both A88 and A89 have manual reset without delay.

Also see:

• 2.12.2 Digital input configuration

• 8.2 Alarm list

5.14 Logs

uChiller manages two logs that record the recent operation of the unit.

The two logs have different sampling and variable settings. The features of each are shown below.

LOG 1: Troubleshooting
Type: periodical

No. of samples per variable: 720

Sampling time: 5 s **Total storage time:** 1h

#	Description	Type	UOM
1	Water temperature currently used for control	REAL	С
2	Actual main control set point	REAL	С
3	User delivery water temperature	REAL	С
1	Unit status (0=OFF from remote DI, 1=OFF from keypad, 2=OFF from scheduler, 3=OFF from BMS, 4=OFF from CH/HP changeover mode, 5=OFF from alarm, 6=Unit defrosting, 7=Unit ON, 8=Manual mode)	USINT	-
	Suction pressure - circuit 1	REAL	bars
	Suction pressure - circuit 2	REAL	bars
	Discharge pressure - circuit 1	REAL	bars
	Discharge pressure - circuit 2	REAL	bars
	Discharge temperature - circuit 1	REAL	С
0	Discharge temperature - circuit 2	REAL	С
1	Suction temperature - circuit 1	REAL	С
2	Suction temperature - circuit 2	REAL	С
3	EEV position - circuit 1	UINT	%
4	EEV position - circuit 2	UINT	%
5	Compressor 1 status - circuit 1	BOOL	-
5	Compressor 2 status - circuit 1	BOOL	-
7	Compressor 1 status - circuit 2	BOOL	-
3	Compressor 2 status - circuit 2	BOOL	-
9	BLDC: current rotor speed - circuit 1	REAL	rps
0	BLDC: current rotor speed - circuit 2	REAL	rps
1	Capacity request	REAL	%
2	User pump 1 status	BOOL	-
3	User pump 2 status	BOOL	-
4	Source fan inverter request - circuit 1	REAL	%
5	Source fan inverter request - circuit 2	REAL	%
5	Source fan 1 status - circuit 1	BOOL	-
7	Source fan 2 status - circuit 1	BOOL	-
3	Free cooling control ramp	REAL	%
9	User heater 1 status	BOOL	-
0	User heater 2 status	BOOL	-
1	User heater status	BOOL	-
2	Source outside air temperature;	REAL	С
3	User fan status	BOOL	-
	Operating mode (0 = Cooling, 1 = Heating)	BOOL	-
5	Output command for 4-way reversing valve - circuit 1	BOOL	-
5	Output command for 4-way reversing valve - circuit 2	BOOL	-
7	Defrost status - circuit 1	UINT	-
8	Defrost status - circuit 2	UINT	-

Tab. 5.q

µchiller +0300053EN rel. 2.5 - 03.10.2024 Functions 71





LOG 2: Control
Type: periodical

No. of samples per variable: 864

Sampling time: 5 min **Total storage time:** 3 d

#	Description	Type	UOM
1	Actual main control set point	REAL	C
2	Water temperature currently used for control	REAL	C
3	Unit status (0=OFF from remote DI, 1=OFF from keypad, 2=OFF from scheduler, 3=OFF from BMS, 4=OFF from CH/HP changeover mode, 5=OFF from alarm, 6=Unit defrosting, 7=Unit ON, 8=Manual mode)	USINT	-
4	Compressor 1 status - circuit 1	BOOL	-
5	Compressor 2 status - circuit 1	BOOL	-
6	Compressor 1 status - circuit 2	BOOL	-
7	Compressor 2 status - circuit 2	BOOL	-
8	User pump 1 status	BOOL	-
9	User pump 2 status	BOOL	-
10	Operating mode (0 = Cooling, 1 = Heating)	BOOL	-

Tab. 5.r

5.15 Source fans

On units with two circuits, μ Chiller manages the source (condenser) either separately (independent air circuits) or with one common air circuit, by setting a parameter: when there is a common air circuit, fan 1 works based on the higher request between circuit 1 and 2.

User	Code	Description	Def	Min	Max	UOM
S	S064	Type of source air circuit - 0 = Independent 1 = Common	0	0	1	-

Below is a table summarising the probes used for controlling the fans in each configuration:

Circuit	Probes used for control		
Circuit	Chiller	Heat pump	
1	Condensing press/temp. circuit 1	Evaporation press./temp. circuit 1	
2	Condensing press./temp. circuit 2	Evaporation press./temp. circuit 2	

Tab. 5.s

The control mode changes based on the operating mode (chiller or heat pump).

5.15.1 Modulating/On-Off fans


The modulating fan can be configured on an analogue output (Y). On-off fans can be configured on a digital output. For the output configuration parameters see paragraphs 2.12.3 and 2.12.4

The following parameters refer to the source fan and are valid for both types of fan, modulating or OnOff.

User	Code	Description	Def	Min	Max	UOM
S	S065	Type of source fan 0/1=Modulating/ON-OFF	0	0	1	-
S	S028	Source fan in cooling: set point	30.0	-999.9	999.9	°C
S	S029	Source fan in heating: set point	10.0	0.0	99.9	°C
S	S031	Source fan in cooling: set point at start-up	45.0	0.0	999.9	°C
S	S032	Source fan: delay at start-up in cooling	240	0	999	S
S	S034	Source fan: differential in cooling	15.0	0.0	99.9	K
S	S035	Source fan: differential in heating	5.0	0.0	99.9	K
S	S036	Modulating source fan: min speed value	20.0	0.0	100.0	%
S	S037	Modulating source fan: max speed value	80.0	0.0	100.0	%

Tab. 5.t

The following diagram shows the two control modes (modulating or on-off) in chiller operation (cooling):

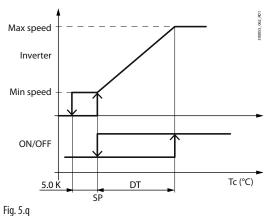

Key			
Max speed	Modulating source fan: max speed value		
Min speed	Modulating source fan: min speed value		
SP	Control set point		
DT	Control differential		
Tc	Condensing temperature		

72 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024




5.15.2 Control in chiller mode

Fan control may be modulating or ON-OFF and is based on the saturated temperature value, equivalent to the condensing pressure, limited by Tc max.

User	Code	Description	Def	Min	Max	UOM
S	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
S	S028	Source fan in cooling: set point	30.0	-999.9	999.9	°C
S	S034	Source fan: differential in cooling	15.0	0.0	99.9	K
S	S036	Modulating source fan: min speed value	20.0	0.0	100.0	%
S	S037	Modulating source fan: max speed value	80.0	0.0	100.0	%

The control diagram is shown below:

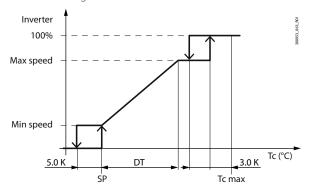

Key		
Max speed	Modulating source fan: max speed value	
Min speed	Modulating source fan: min speed value	
SP	Control set point	
DT	Control differential	
Tc max	Maximum condensing temperature	
Tc	Condensing temperature	


Fig. 5.r

In the graph, some offsets are expressed with a numerical value, indicating that they are not modifiable but rather are fixed parameters. The current calculated set point value is displayed on the dashboard.

Set point control

In chiller mode, a specific condensing temperature set point for starting the compressor can be set to a value that is higher than the nominal set point, so that the compressor can reach steady operation more quickly. The transition to the nominal set point is made gradually over a time equal to the delay at start-up.

User	Code	Description	Def	Min	Max	UOM
S	S031	Source fan in cooling: set point at start-up	45.0	0.0	999.9	°C
S	S032	Source fan: delay at start-up in cooling	240	0	999	S

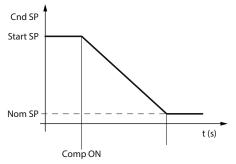

Key	
Cnd SP	Condensing temperature set point
Start SP	Set point at start-up
Nom SP	Nominal set point
Cmp ON	Compressor activation
D1	Delay at start-up

Fig. 5.s

5.15.3 Control in heat pump mode

Fan control may be modulating or ON-OFF and is based on the saturated temperature value, equivalent to the evaporation pressure.


User	Code	Description	Def	Min	Max	UOM
S	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C
S	S029	Source fan in heating: set point	10.0	0.0	99.9	°C
S	S035	Source fan: differential in heating	5.0	0.0	99.9	K
S	S036	Modulating source fan: min speed value	20.0	0.0	100.0	%
S	S037	Modulating source fan: max speed value	80.0	0.0	100.0	%

μchiller +0300053EN rel. 2.5 - 03.10.2024 **Functions**





The control diagram is shown below:

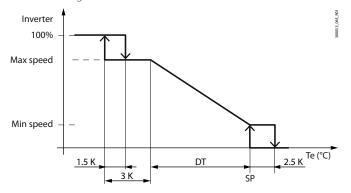

key	key					
Max speed	Modulating source fan:					
	max speed value					
Min speed	Modulating source fan:					
	min speed value					
SP	Control set point					
DT	Control differential					
Tc max	Maximum condensing temp.					
Te	Evaporation temperature					
	-					

Fig. 5.t

In the graph, some offsets are expressed with a numerical value, indicating that they are not modifiable on the display but rather are fixed parameters. The current calculated set point value is displayed on the dashboard.

5.15.4 "Low noise" function

This function reduces the noise emitted by modulating fans by increasing the set point at night.

User	Code	Description	Def	Min	Max	UOM
S	S020	Enable noise reduction 0/1=No/Yes	0	0	1	-
S	S021	Noise reduction time band: start hours	22	0	23	h
S	S022	Noise reduction time band: start minutes	30	0	59	min
S	S023	Noise reduction time band: end hours	8	0	23	h
S	S024	Noise reduction time band: end minutes	30	0	59	min
S	S025	Source fan: noise reduction set point	45.0	0.0	999.9	°C

5.15.5 Fan anti-blocking function

For systems intended to operate in cold climates, μ Chiller modulates fan speed so as to prevent the unit from shutting down due to frost formation. The function is activated when the outdoor temperature falls below a threshold, and, instead of turning off the fans, keeps then on at a minimum speed. If the outside temperature is reached when the fans are off, these are activated at start-up speed for a certain time, and then switch to the minimum speed.

User	Code	Description	Def	Min	Max	UOM
S	S016	Source fan: cold climate temperature threshold	-0.5	-999.9	999.9	°C
S	S017	Source fan: min cold climate speed	10.0	0.0	100.0	%
S	S018	Source fan: cold climate speed at start-up	50.0	0.0	100.0	%
S	S019	Source fan: cold climate speed at start-up time	5	0	300	S

5.15.6 Source fan alarm

A single alarm is available on uChiller for the source fan and/or pump. See §5.12.1 for a detailed description of this alarm.

5.16 Free cooling

The free cooling (FC) function can be enabled only on chiller units. The type of free cooling is configured by parameter, and may be:


- air free cooling, on air/water units equipped with air- water heat exchanger coils upstream of the condenser coils and with modulating fan control;
- remote air free cooling (see the specific paragraph);
- water free cooling, on water/water units with mixing of the source water or via water- water heat exchanger upstream of the evaporator and a 3-way modulating valve on the free cooling circuit.

User	Code	Description	[C	Def	Min	Max	UOM
S	U068	Free cooling: enable 0/1=no/yes	0)	0	1	-
S	U069	Free cooling: activation differential	3	3.0	0.0	99.9	K
S	U070	Free cooling: hysteresis	1	1.5	0.0	99.9	K
S	U071	Design free cooling delta T	8	3.0	0.0	99.9	K
S	U072	Water free cooling: valve closing threshold	5	5.0	-999.9	999.9℃	°C
S	U073	Water free cooling: valve closing differential	3	3.0	0.0	99.9	K
М	U074	Free cooling type: 0=Air 1=Remote coil 2=Water		0	0	2	-

74 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



Free cooling is enabled when the outside source temperature is sufficiently lower than the temperature of the water entering the unit, as shown in the following figure:

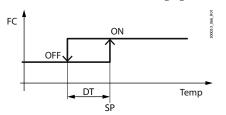

Key	
FC	Free cooling
DT	Hysteresis
SP	Activation differential
Temp	User return temperature - outside source temp.

Fig. 5.u

On air/water units, the fans are controlled based on the condensing temperature as long as the circuit's compressor is on; as soon as the compressor stops, the free cooling fan is controlled so as to maintain the desired water temperature set point.

5.17 Types of free cooling

5.17.1 Condensing unit with common air circuit

Free cooling is enabled based on the comparison between the user return water temperature and the outside air temperature; this directly controls switching of the three-way valve, which allows the water returning from the user terminals to flow through the free cooling coil before entering the evaporator. Free cooling capacity is controlled by modulating the fan speed (with the compressors off); in combined operation (free cooling + mechanical cooling), fan speed is controlled so as to correctly manage the condensing stage.


Inputs used:

To enable free cooling:

- · User return temperature;
- · Outside air temperature;

To manage capacity in free cooling mode:

- (according to the control probe used) Return/delivery water temp. Outputs used:
- 0-10 V to manage the common fan between free cooling and condenser;
- Free cooling valve On-Off control.

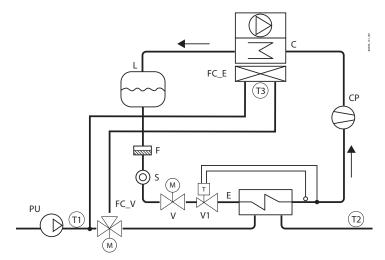

Ref.	Description
FC_E	Free cooling heat exchanger
C	Condenser
Е	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
S	Liquid sightglass
FC_V	Free cooling valve
PU	User pump
T1	User return probe
T2	User delivery probe
T3	Outside temperature probe
V1	Thermostatic expansion valve
V	Solenoid valve
	<u> </u>

Fig. 5.v

µchiller +0300053EN rel. 2.5 - 03.10.2024 Functions 75





5.17.2 Air-cooled condensing unit with separate air circuit

Free cooling is enabled based on the comparison between the user return water temperature and the outside air temperature; this directly controls switching of the three-way valve, which allows the water returning from the user terminals to flow through the free cooling coil before entering the evaporator. Free cooling capacity is controlled by modulating the specific fan speed; in combined operation (free cooling + mechanical cooling), free cooling fan speed is always 100%.

Inputs used:

To enable free cooling:

- · User return temperature;
- · Outside air temperature;

To manage capacity in free cooling mode:

• (according to the control probe used) Return/delivery water temp.

Outputs used:

- 0-10 V to manage the condenser fan (Y1: Circuit 1 and Circuit 2)
- 0-10 V to manage the free cooling fan (Y2: Circuit 1);
- Free cooling valve On-Off control.

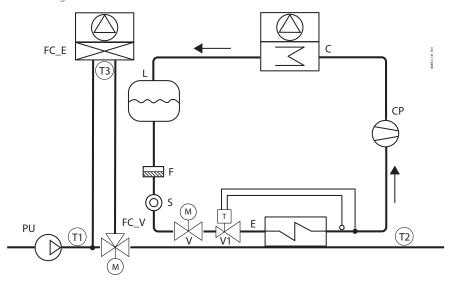


Fig. 5.w

Ref.	Description
FC_E	Free cooling heat exchanger
C	Condenser
Е	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
S	Liquid sightglass

Ref.	Description
FC_V	Free cooling valve
PU	User pump
T1	User return probe
T2	User delivery probe
T3	Outside temperature probe
V1	Thermostatic expansion valve
V	Solenoid valve

76 | Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



5.17.3 Water-cooled condensing unit

Free cooling is enabled based on the comparison between the user return water temperature and the source water temperature (Temp. IN source); this controls modulation of the three-way valve that mixes the source water with the water returning from the user terminals through the free cooling coil before entering the evaporator.

Free cooling capacity is controlled by modulating the three- way free cooling valve; in combined operation (free cooling + mechanical cooling), the three-way free cooling valve is always open at 100%.

Inputs used:

To enable free cooling:

- · User return temperature;
- Source inlet temperature;

To manage capacity in free cooling mode:

• (according to the control probe used) Return/delivery water temp.

Outputs used:

- 0-10 V to manage the condenser fan
- 0-10 V to manage the free cooling valve.

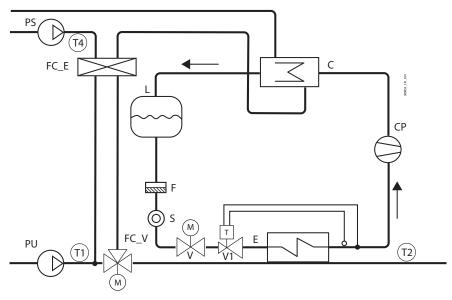


Fig. 5.x

Ref.	Description
FC_E	Free cooling heat exchanger
C	Condenser
E	Evaporator
F	Filter-drier
L	Liquid receiver
CP	Compressor
FC_E	Free cooling heat exchanger
S	Liquid sightglass

Ref.	Description
V	Solenoid valve
FC_V	Free cooling valve
PU	User pump
PS	Source pump
T1	User return probe
T2	User delivery probe
T4	Source return probe
V1	Thermostatic expansion valve

μchiller +0300053EN rel. 2.5 - 03.10.2024 Functions






5.18 Free cooling

5.18.1 Dynamic control gain

This special function manages the balancing of capacity between the free cooling coil and the evaporator: this optimises control stability and fluidity.

User	Code	Description	Def	Min	Max	UOM
S	U070	Free cooling: hysteresis	1.5	0.0	99.9	K
S	U069	Free cooling: activation differential	3.0	0.0	99.9	K
S	U071	Design free cooling delta T	8.0	0.0	99.9	K

Tab. 5.u

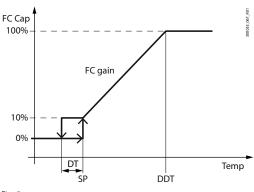


Key	
FC Cap	Free cooling capacity
DT	Hysteresis
SP	Activation differential
DDT	Design free cooling delta T
Temp	User return temp source temp.

Fig. 5.y

The diagram shows the ideal behaviour of free cooling control (FC) in relation proportionally to its capacity; "Design free cooling delta T" is the temperature difference (water inlet - source) needed to cover the rated unit capacity using the free cooling coil only.

The value obtained - "FC gain" - is used to adapt the control ramp to the various cooling sources, as shown in the figure.

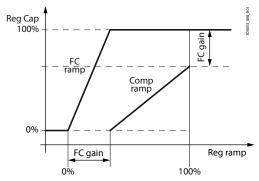

Control capacity
Free cooling control ramp
Dynamic gain of free cooling control
Compressor control ramp
Control ramp

Fig. 5.z

The result is a perfect balance between the cooling capacities of the free cooling coil and the evaporator, in order to maintain the same proportionality in all load conditions. In other words, the same percentage of capacity is obtained for the same temperature variation in any load condition.

5.18.2 Effectiveness control

 μ Chiller uses this function to start the compressors when the free cooling coil alone cannot bring the water to the set point, despite the fact that the source conditions theoretically allow for free cooling operation only. When this occurs, there may be a malfunction on the devices activated during free cooling; the compressors thus need to be started and free cooling disabled in order to ensure unit operation.

This situation is signalled by the "Free cooling warning".

5.18.3 Valve anti-block management

To avoid mechanical blocking of the valve, when a position (closed or open) is kept for more than a week, the valve is moved for 30 seconds to the opposite position.

78 | Functions µchiller +0300053EN rel. 2.5 - 03.10.2024




5.19 Defrost

During heat pump operation on air/water units, the outdoor coil works as an evaporator. If the outside temperature is low, frost may form on the coil, resulting in reduced unit efficiency. To free the coil from frost and restore maximum efficiency, μ Chiller activates the defrost function. Activation depends on the value read by the reference probe (pressure transducer, low pressure side -> evaporation temperature in the graph), on the activation threshold being exceeded, and a possible delay.

User	Code	Description	Def	Min	Max	UOM
S	S039	Defrost: start temperature	-1.0	-99.9	99.0	°C
S	S040	Defrost: reset start defrost delay threshold	1.0	S039	99.9	°C
S	S041	Defrost: delay at start-up	30	0	999	min
S	S042	Defrost: end temperature	52.0	-999.9	999.9	°C
S	S046	Defrost: min duration	1	0	99	min
S	S047	Defrost: max duration	5	0	99	min

Example of defrost activation:

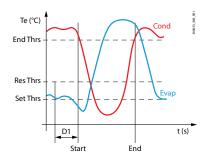

Key	
Т	Temperature
End Thrs	End defrost temperature
Res Thrs	Reset start defrost delay threshold
Set Thrs	Start defrost temperature
D1	Defrost start delay
Start	Start defrost
End	End defrost
T_Cond	Condensing temperature
T_Evap	Evaporation temperature

Fig. 5.aa

If the defrost temperature does not exceed the reset threshold during the defrost start delay, then the defrost starts. It ends when the reference probe (pressure transducer, high pressure side -> condensing temperature in the graph) exceeds the end defrost temperature or the maximum defrost duration has elapsed.

Note: for optimal defrost management, it is recommended to set the start defrost temperature to the evaporation temperature value at which ice starts forming on the coil (-1.0°C / -1.5°C); the defrost start delay expresses the time needed to accumulate a layer of ice that requires defrosting (30-60 minutes). Also see the paragraph "Sliding defrost".

5.19.1 Defrost procedure

Notes: in the following description:

- "case with compressor ON" indicates that the phase is only featured if defrost is set with the compressor On;
- · "case with compressor off" indicates that the phase is only featured if defrost is set with the compressor Off;


End defrost can be managed in two ways:


- with the compressor off: the thermal inertia of the condenser is used to end the defrost;
- with the compressor on: to make the defrost as fast as possible.


On air-to-air heat pump units, the user fan is stopped after the defrost starts and for the entire duration. This function is used to avoid introducing cold air into the room immediately after the cycle is reversed, in cooling mode. The function has no management parameters.

User	Code	Description	Def	Min	Max	UOM
M	\$055	Compressor after defrost 0/1=0n/Off	0	0	1	-

Compressor off at end defrost

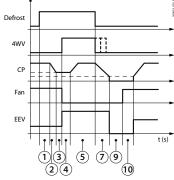

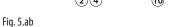

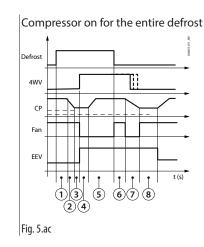

Key:	
Defrost	Defrost request
4WV	Cycle reversal
	(4-way valve)
CP	Compressor
	capacity
Fan	Enable fans
EEV	Electronic
	expansion valve

µchiller +0300053EN rel. 2.5 - 03.10.2024 Functions 79





The control phases are described below.

Synchronisation (1)

Once the defrost start condition is true, there is a fixed delay of 10 s to check whether the other circuit requires defrosting, so as to carry out a simultaneous defrost if needed.

User	Code	Description	Def	Min	Max	UOM
S	S053	Defrost synchronisation: 0=Independent 1=Separate 2=Simultaneous	40.0	0.0	999.9	rps

Decrease capacity to start defrosting (2)

Capacity at start defrost can be managed in two ways:

- stopping the compressors
- compressors running at minimum power. For circuits with on-off compressors, a single compressor is kept on, while the compressor is kept at minimum capacity for circuits with BLDC compressor.

User	Code	Description	Def	Min	Max	UOM
M	S073	Compressor status at start defrost 0/1=On/Off	0	0	1	-
S	S052	BLDC compressor speed for cycle reversing in defrost	40.0	0.0	999.9	rps

Waiting time before reversing the cycle (3)

The 4-way valve is positioned in chiller mode to run the defrost, the fans are stopped and the compressor remains at the cycle-reversal speed for 5 seconds. Normally during this phase the electronic expansion valve tends to close, due to low superheat. As a result it is forced to the maximum opening so as to guarantee a constant flow of refrigerant and maximum defrost capacity.

User	Code	Description	Def	Min	Max	UOM
S	S044	Operation time at min capacity before cycle reversing	20	0	999	S

Cycle reversal and waiting time after reversal (4)

La valvola 4 vie si posiziona in modalità chiller per eseguire lo sbrinamento, i ventilatori si spengono e il compressore rimane alla velocità di inversione di ciclo per 5 secondi. Normalmente durante questa fase la valvola di espansione elettronica tende a chiudersi per basso surriscaldamento. Per questo essa è forzata alla massima apertura per garantire il flusso costante di refrigerante e la potenza massima di sbrinamento.

Defrosting (5)

The actual defrosting procedure starts: the compressor delivers full capacity so as to defrost the outdoor coil. In this phase, the BLDC compressor goes to the speed set by the corresponding parameter, the electronic expansion valve remains at the maximum opening and the fans remain off. The minimum/maximum defrost time and minimum time between two consecutive defrosts start counting in this phase.

User	Code	Description	D	ef	Min	Max	UOM
S	S046	Defrost: min duration	1		0	99	min
S	S047	Defrost: max duration	5		0	99	min
S	S050	Minimum delay between consecutive defrosts	20	0	0	999	min
S	S051	BDLC compressor speed in defrost	80	0.0	0.0	999.9	rps

The minimum defrost time protects compressors and circuit components from transients with high dynamics that are too close together. The maximum defrost time is a safety feature that avoids any abnormal conditions (end defrost threshold not reached - e.g. due to strong winds) that would stop the production of hot water required by the user terminals. The minimum time between consecutive defrosts is needed to prevent the unit from defrosting too frequently and thus only partly meeting demand. The actual defrosting procedure therefore ends after a maximum time or when the set condensing temperature is reached. If the compressor stops during this phase, the counters are reset.

Dripping (case with compressor on) (6)

In this phase, the compressor remains on at the defrost speed, the electronic valve is opened to the maximum and the fans are started at maximum speed, and remain at this speed for the entire dripping phase. The duration of the dripping phase can be set.

User	Code	Description	Def	Min	Max	UOM
S	S048	Dripping: duration	90	0	999	S

Decreased compressor capacity to end defrost (7)

Circuit capacity is reduced to the minimum and the cycle is reversed. In this phase, the fans are stopped (they are only activated if necessary for high pressure prevention) and the cycle reversing valve is moved to the heat pump position, controlled based on the difference between condensation and evaporation pressure: as soon as this pressure difference falls below the minimum differential for valve activation + 1 bar, the cycle is reversed (return to heat pump mode). If the reversing threshold is not reached, the cycle is reversed after a fixed time (60 s). The electronic expansion valve is opened to the maximum position.

User	Code	Description	Def	Min	Max	UOM
M	S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar

Waiting after cycle reversal (case with comp. ON) (8)

After reversing the cycle, there is a waiting time to ensure the correct flow of refrigerant; in this phase too, the ExV remains in the 100% open position.

User	Code	Description	Def	Min	Max	UOM
S	S045	Operation time at min capacity after cycle reversing	30	0	999	S

BO Functions μchiller +0300053EN rel. 2.5 - 03.10.2024



Dripping (case with comp. OFF) (9)

In this phase, the compressors, the electronic expansion valve and the fans are stopped, waiting for the coil to complete defrosting due to thermal inertia and stop dripping. The duration of the dripping phase can be set.

U	ser	Code	Description	Def	Min	Max	UOM
S		S048	Dripping: duration - 0=Dripping not performed	90	0	999	S

Post-dripping phase (case with comp. OFF) (10)

During this phase, the fans are started at 100% speed to completely expel any water still on the coil. The duration of the postdripping phase can be set. At the end of the post, dripping phase the circuit is reactivated in permal heat pump operation

unpping phase can be set. At the end of the post-dipping phase, the circuit is reactivated in normal heat pump o					h oheia	LIOII.	
ι	Jser	Code	Description	Def	Min	Max	UOM
S)	S049	Post-dripping: duration - 0=Post-dripping not performed	30	0	999	S

Quick start phase (case with comp. OFF) (11)

The compressor restarts based on the control request and the unit returns to normal operation. The start- up time is reduced so as to quickly bring compressor speed in line with the request.

User	Code	Description	Def	Min	Max	UOM
S	S056	BLDC smart start: duration (*)	20	0	999	S

^(*) Shortened compressor start-up after defrost

This action assumes that the compressor has been off for a very short time, and therefore does not require complete preheating as is the case during normal start-up.

During the defrost phase (when the unit is in chiller mode), the fans are started if the condensing pressure exceeds the high condensing pressure alarm threshold - 5K.

User	Code	Description	Def	Min	Max	UOM
M	C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C

5.19.2 Defrost with fans

When the outside temperature allows (outside temperature > 6-7°C), the fans alone can be used to defrost the coil, without operating the compressors, so as to improve system energy efficiency. When the outside temperature is greater than or equal to the value of S069, the function is activated: in this condition, the waiting time S041 before the defrost request is halved (to facilitate defrosting with fans only).



User	Code	Description	Def	Min	Max	UOM
S	S069	Defrost with fans: outside temperature threshold	0.0	0.0	99.9	°C
		0.0=Function disabled				

The defrost phases are as follows.

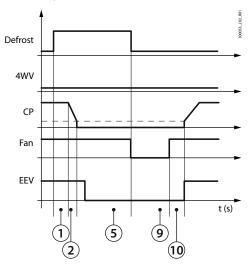


Fig. 5.ad

Synchronisation (1):

See the previous defrosts.

Compressor stopped to start defrosting (2)

The circuit with the BLDC compressor decreases its capacity to the minimum set value, and then switches off; on-off compressors are all switched off.

μchiller +0300053EN rel. 2.5 - 03.10.2024 Functions





Defrosting (5)

The actual defrosting phase starts: the fans are started at 100% speed to heat the coil and melt the ice that has formed on the fins. Defrosting ends, once the minimum time has elapsed, when the evaporation temperature reaches 2°C, or after the maximum time. The minimum/maximum defrost time and minimum time between two consecutive defrosts start counting in this phase.

Dripping (9)

The fans are stopped, waiting for the coil to complete defrosting due to thermal inertia and stop dripping. The dripping time can be set.

Post-dripping (10)


The fans are started at 100% speed to completely expel any water still on the coil. The post-dripping time can be set. At the end of the post-dripping phase, the circuit is reactivated in normal heat pump operation.

5.19.3 Sliding defrost

As the water vapour content in the air decreases as the outside temperature decreases, the time needed for a layer of ice to form that requires defrosting increases proportionally as the outside temperature decreases. Consequently, a function has been added, enabled when the outside air probe is available, which extends the defrost delay time, as shown in the following figure.

Note: the outside probe can be connected to inputs S3/S6 (setting: external temperature)

User	Code	Description	Def	Min	Max	UOM
М	Hc00	S3 configuration 0=Not used 2=Discharge temp. 4=Source water delivery temp. 1=External temp. 3=Suction temp.	0	0	3/4	-
M	Hc03	S6 configuration (0 = Not used, 1 = Source delivery water temp., 2 = Outdoor temp., 3 = Remote set point, 4 = Discharge temp., 5 = Condensing temp., 6 = Suction temp., 7 = Evaporation temp., 8 = Condensing press., 9 = Evaporation press., 10 = User return water temp., 11 = User delivery water temp., 12 = Capacity request from AIN)	0	0	2	-
S	S041	Defrost: delay at start-up	30	0	999	min
S	S043	Enable sliding defrost: 0/1=No/Yes	0	0	1	-

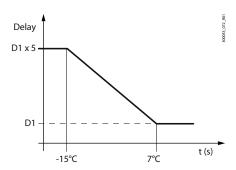

Key						
Delay	Calculated defrost start delay					
D1	Defrost start delay					
D1 x 5	Maximum defrost delay (5 x D1)					
Temp	Outside air temperature					

Fig. 5.ae

5.19.4 Defrost synchronisation

On two-circuit units, the defrosting procedures can be synchronised.

U	ser	Code	Description	Def	Min	Max	UOM
S		S053	Defrost synchronisation: 0=Independent; 1=Separate; 2=Simultaneous	0	0	2	-

Independent

The two circuits start defrosting when the conditions are right, independently of each other. In other words, there is no synchronisation and the circuits can defrost at the same time.

Separate

When the first circuit requires defrosting:

- it starts the defrost procedure;
- the other continues to work in heat pump mode.

When the first circuit has finished defrosting, the other is free to start.

Simultaneous

This procedure is used if the air flow cooling the condenser coils on one circuit affects the other: during the defrost phase this would mean a considerable waste of energy to recover the heat lost in the air flow on the other circuit. The first circuit that requires defrosting thus puts the entire unit into defrost mode. If only one circuit starts defrosting, it completes all the defrost phases while the other remains off. If the other circuit one requires defrosting but is waiting until the defrost start delay elapses, the delay is ignored and the circuit also starts defrosting.

82 | Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



When one of the circuits reaches the end defrost condition, it remains in the dripping phase until the other circuit ends the procedure. In this way, the dripping phase is performed by both circuits, preventing the air flow to the condenser coils from affecting the defrost procedure. During this phase, the compressor is stopped instead of operating at end defrost capacity, to prevent the waiting phase of the other compressor from bringing the user terminals to excessively low temperatures.

Note: if there is a common air circuit for the condensers, simultaneous defrosting is enabled automatically.

5.20 4-way valve management

A special function has been included to ensure correct control of the 4- way valve that reverses the refrigerating cycle. When there is a request to reverse the valve, the controller checks whether the pressure difference is higher than a threshold before activating the valve: if the difference is lower, the application waits until the compressor starts and then activates the valve when the pressure difference is reached.

User	Code	Description	Def	Min	Max	UOM
M	S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar

In the event of a power failure, the controller realigns the 4-way valve with the physical position of the valve at next start-up, considering the status of the circuit at the time of the power failure.

5.21 Manual device management

In the menu relating to the individual devices, operation of the individual actuators fitted on the unit can be switched from automatic to manual. For digital outputs, the options are ON or OFF, while analogue outputs can be set from 0 to 100%; the default values are all Auto.

User	Code	Description	Def	Min	Max	UOM
S	E000	ExV circuit 1: manual mode 0/1=No/Yes	0	0	1	-
S	E001	ExV circuit 1: steps in manual mode	0	0	65535	steps
S	E002	ExV circuit 2: manual mode 0/1=No/Yes	0	0	1	-
S	E003	ExV circuit 2: steps in manual mode	0	0	65535	steps
S	U002	User pump 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	U005	User pump 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C002	Comp. 1 circuit 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C005	Comp. 2 circuit 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C008	Comp. 1 circuit 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	C011	Comp. 2 circuit 2: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	S002	Source pump 1: operating mode 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	S011	Source modulating fan circuit 1: operating mode: 0=AUTO; 1=0%; 2=1%,; 101=100%	0	0	101	-
S	S014	Source ON/OFF fan 1 circuit 2: operating mode: 0=AUTO; 1=OFF; 2=ON	0	0	2	-
S	S015	Source modulating fan circuit 2: operating mode: 0=AUTO; 1=0%; 2=1%,; 101=100%	0	0	101	-

These operations bypass temperature control, but not the alarm thresholds set to protect unit safety; in general, these operations are used to test the individual actuators during installation.

Manual operation of the devices is described below:

Device	Notes
Compressors	Safety times taken into account
	All compressor alarms are enabled
User pumps	Pump overload and flow alarm active
Source pump	-
Defrost	-
Source fans	Speed-up disabled
ExV	All alarms disabled

5.22 Air/air unit management (Legacy model only)

The μ Chiller Legacy version can manage air/air units, both cooling only and reverse cycle. The type of unit is selected via parameter U077, which in the Legacy model can be set as Air/Air CH or Air/Air CH/HP. On these units, the control probes have the following meaning:

Sensor	Meaning
System water return temperature	Room air return temperature
System water delivery temperature	Air supply temperature

Air supply limit management in cooling mode

A function is used to limit the air supply temperature. When the air supply temperature falls below a certain threshold, set for parameter F009, in the band defined by parameter F010, the control ramp is limited proportionally.

User	Code	Description	Def	Min	Max	UOM
S	F009	Minimum air supply temp. limit: set point	14.0	0	99.9	°C
S	F024	Manual control of heater 1 0=AUTO, 1=OFF, 2=ON	0	0	2	-
S	F025	Manual control of heater 2 0=AUTO, 1=OFF, 2=ON	0	0	2	-
S	F010	Minimum air supply temp. limit: proportional band	4	1	20	K

µchiller +0300053EN rel. 2.5 - 03.10.2024 Functions 83





5.22.1 User fan

On air/air units, the user pump is replaced by a user fan. The water flow switch alarm is used as an air flow switch alarm. Fan control is subject to the following conditions:

parameter F017

If F017 = 0, it follows standard mode, i.e. unit on -> fan on.

If F017 = 1, the fan follows the temperature control request and remains off until there is a temperature control request.

• Hot-start and hot-keep functions

The user fan will be activated as shown in the following table:

Unit status	Mode	Control status	Parameter F017	Hot-start Hot-keep	Fan status
OFF	Not considered	Not considered	Not considered	Not considered	OFF (switch-off delay after compressor and/or heater off U048)
ON	Cooling	Not considered	FALSE	Not considered	ON
ON	Cooling	Off	TRUE	Not considered	OFF
ON	Cooling	On call	TRUE	Not considered	ON
ON	Cooling	Not considered	FALSE	Not considered	ON
ON	Heating	Off	TRUE	Not considered	OFF
ON	Heating	On call	TRUE	Enabled (F018+F019)	ON on Hot-Start function command

Tab. 10.b

_	User	Code	Description	Def	Min	Max	UOM
	S	F017	Main fan: activation mode 0=always On, 1=ON from control	0	0	1	-

Hot-start and Hot-keep functions

These functions are only active in heating mode.

The Hot-Start function is active on air/air units in heating mode only. The function keeps the fan off until the condensing temperature reaches a set point (parameter F018) to avoid sending cold air into the room. If the condensing pressure or condensing temperature probe is not fitted, control is based on the air supply temperature. If the electric heaters are activated, the fan is switched on immediately.

The Hot-keep function has two modes:

- in heating mode, if the compressors and/or heaters are off, the fan remains on until the condensing temperature is greater than the hot-start set point (parameter F018) minus the differential set for parameter F019.
- in cooling mode, the fan will be switched off after the time set for parameter U048, after the compressor and/or heater has been deactivated.

User	Code	Description	Def	Min	Max	UOM
S	F018	Hot-start: set point	40.0	0	99.9	°C
S	F019	Hot-keep: differential	5.0	0	99.9	K

Temperature set point for deactivating the compressors

To avoid energy efficiency below that of electric heaters, the compressors are deactivated if the outside temperature falls below F026, with a fixed reactivation differential of 1 degree. The heaters are activated according to the corresponding set points. Setting F026 to " -40° C" (default value) disables the function.

User	Code	Description	Def	Min	Max	UOM
S	F026	Compressor deactivation due to low outside air temperature	-40	-40	99.9	°C

5.22.2 Heater management on air-air units

This function is only active when the unit is on - main fan on and control active or in defrost.

The type of control is set using parameter F028:

- room temperature (F028 = 0)
- air supply temperature (F028 = 1)

The user can set two different offsets, one in cooling mode and one in heating mode.

The offset is a value that is subtracted from the current set point in cooling mode, or added to the current set point in heating mode. A differential can also be set to define the activation/deactivation temperature of the two heater steps.

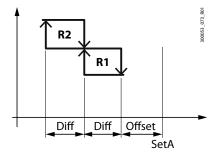


Fig. 5.af

Electric heaters can be activated during defrosting. If this function is activated by the user, the heaters remain on for the entire duration of the defrost, including the dripping and post-dripping phases.

Operation of the electric heaters follows the scheme shown below.

84 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



User	Code	Description	Def	Min	Max	UOM
М	F012	Offset on set point in cooling mode for the heaters	1.0	0.0	99.9	°K
M	F013	Differential on set point in cooling mode for the heaters	0.5	0.2	99.9	°K
M	F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K
M	F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K
М	F016	Heaters active during defrost (0= No, 1=Yes)	0	0	1	-
М	F028	Air heating: probe for user heater temperature control 0 = ROOM; 1 = SUPPLY	0	0	1	-

5.23 Automatic heater management for water units (Legacy model only)

The uChiller Legacy version can manage auxiliary heaters as part of the main control, even on air/water and water/water units. The function is active

- · only when the unit is on
- with the fan/pump on
- · only in heating mode
- · when control is active

The heater control diagram is the same as shown in par. 5.20.2 for air/air units.

The control set point (SetH) and probe are the same used for the main control.

An offset (F014) and differential (F015) can be set to define the auxiliary heater activation/deactivation limits.

Example: The following figure shows the control diagram with one auxiliary heater only.

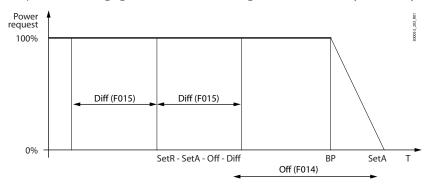


Fig. 5.ag

The auxiliary heater works mainly to supplement the main control, but also remains active for frost protection. In the event of frost protection, when both auxiliary and frost protection heaters are installed, both outputs will be active.

Up to two heaters are available, however with the following configuration required:

- heater 1 configured on circuit 1
- heater 2 configured on circuit 2 using the I/O expansion

Code	Description	Def	Min	Max	UOM
F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K
F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K
F016	Heaters active during defrost (0= No, 1=Yes)	0	0	1	-
F028	Air heating: probe for user heater temperature control	0	0	1	-
	0 = ROOM; 1 = SUPPLY				

Tab. 5.v

5.24 Condensing unit management

μChiller can manage condensing units with one or two circuits, air- or water-cooled, in cooling-only mode or reverse cycle with defrost. The mode is set using parameter U077.

Compared to a chiller unit, the condensing unit does not manage circulation of the primary fluid (pump, flow switch, etc.)

The control signal can be sent to the condensing unit in two ways:

- via BMS (not available on Legacy models)
- · via digital inputs

Request via BMS

The request is written by an external device to register HR 331. If the unit is offline, the request is overridden to 0% and the devices are turned off.

Request via digital inputs

There is a digital input for each compressor. Activation of the digital input corresponds to a control step request. The µChiller application manages rotation between steps, stop due to alarms, and timings.

μchiller +0300053EN rel. 2.5 - 03.10.2024 Functions | 85





For Legacy models only, the direct relationship between request digital inputs and compressor digital outputs can be set using parameter F023. In this case, rotation of the steps must be managed externally.

User	Code	Description	Def	Min	Max	UOM
S	F023	Direct relationship DI - compressor DO (MC only) 0=No, 1=Yes	0	0	1	-

5.25 Automatic changeover (Legacy model only)

This function is used to switch automatically between cooling/heating modes based on the selected probe.

When automatic changeover is enabled, summer/winter seasons are ignored..

The function is only available for the Legacy model.


The following table shows the parameters used to manage this function.

Code	Description	Def	Min	Max	UOM
U083	Changeover type	0	0	3	-
	0: disabled				
	1: outside air temperature;				
	2: air return temperature (air/air units only)				
	3: delivery water temperature (air/water or water/water units only)				
U084	Changeover threshold (type 1 only)	23	-99.9	99.9	°C/F
U085	Changeover dead zone	2	0	99.9	°C/F
U086	Automatic changeover set point minimum limit	0	-99.9	999.9	°C/F
U087	Automatic changeover set point maximum limit	80	-99.9	999.9	°C/F
U035	Automatic changeover delay	15	0	999	Min
SEtU	Automatic changeover set point (types 2 and 3 only)	23	U086	U087	°C/F

Tab. 10.c

The operating mode selection diagrams are shown for each single case.


5.25.1 Mode 1: outside air temperature;

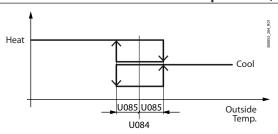

If automatic changeover is set based on the outside temperature, the main temperature control will use the probes configured for U036 (start-up) and Uo38 (running) and the set points SetC (cooling) and SetH (heating).

Fig. 10.c


5.25.2 Mode 2: air return temperature (A/A units)

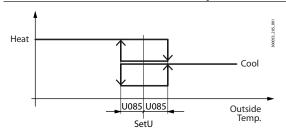

If the automatic changeover is set based on the air return temperature, the main temperature control will also use the same set point SEtU for changeover.

Fig. 10.d

5.25.3 Mode 3: delivery water temperature (A/W and W/W units)

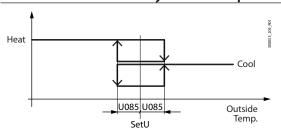

If the automatic changeover is set based on the delivery water temperature, the main temperature control will also use the same set point SEtU for changeover.

Fig. 10.e

86 Functions µchiller +0300053EN rel. 2.5 - 03.10.2024



6. PARAMETER TABLE

Notes:

- Levels: U=User; S=Service; M=Manufacturer; Display: the x indicates that the parameter can be accessed from the display terminal;
- $\bullet \ \ \text{R/W=read/write parameters; R=read-only parameters.}$

6.1 System

User	Display	Code	Description	Def.	Min.	Max.	UOM	R/W	Modbus
Plt = Syste	em	U000	Heaving 1 maintanance hour threshold (v100)	99	0	999	h	R/W	HR002
S		U000	User pump 1: maintenance hour threshold (x100) User pump 1: reset hour counter	0	0	1	n	R/W	CS000
S	X	U002	User pump 1: operating mode	0	0	2	-	R/W	HR003
,	^	0002	0=AUTO - 1=OFF - 2=ON	0	ľ	-		1000	1111003
S		U003	User pump 2: maintenance hour threshold (x100)	99	0	999	h	R/W	HR004
S		U004	User pump 2: reset hour counter	0	0	1	-	R/W	CS001
S	Х	U005	User pump 2: operating mode	0	0	2	-	R/W	HR005
			0=AUTO - 1=OFF - 2=ON						
S S		U006	Cooling set point: minimum limit	5.0	-99.9	999.9	°C/°F	R/W	HR007 (2R)
<u>S</u>		U007	Cooling set point: maximum limit	20.0	-99.9	999.9	°C/°F	R/W	HR009 (2R)
S		U008	Heating set point: minimum limit	30.0	0.0	999.9	°C/°F	R/W	HR01 (2R)
S S S S S		U009	Heating set point: maximum limit	45.0	0.0	999.9	°C/°F	R/W	HR011 (2R)
5		U010 U011	Enable set point compensation 0/1=no/yes	0 25.0	-99.9	999.9	°C/°F	R/W R/W	CS002 HR015 (2R)
5	+	U012	Cooling compensation: start Cooling compensation: end	35.0	-99.9	999.9	°C/°F	R/W	HR017 (2R)
5		U013	Cooling compensation: maximum value	5.0	-99.9	999.9	K/R	R/W	HR019 (2R)
5		U014	Heating compensation: start	5.0	-99.9	999.9	°C/°F	R/W	HR021 (2R)
S		U015	Heating compensation: end	-10	-99.9	999.9	°C/°F	R/W	HR023 (2R)
S		U016	Heating compensation: maximum value	5.0	-99.9	999.9	K/R	R/W	HR025 (2R)
S		U017	Enable scheduler 0/1=No/Yes	0	0	1	-	R/W	CS003
S		U018	Time band: start hours	17	0	23	h	R/W	HR027
S S S		U019	Time band: start minutes	30	0	59	min	R/W	HR028
S		U020	Time band: end hours	7	0	23	h	R/W	HR029
S		U021	Time band: end minutes	0	0	59	min	R/W	HR030
S		U022	Type of changeover in time band	0	0	1	-	R/W	CS004
		11000	0=Off - 1=2nd set point	46.5	11000	110.5=	00.00	10000	LIDORE (CC)
U	Х	U023	2nd cooling set point	10.0	U006	U007	°C/°F	R/W	HR031(2R)
U	Х	U024	2nd heating set point	35.0	U008	U009	°C/°F	R/W	HR033(2R)
S		U025	Remote set point: analogue input	0	0	2	-	R/W	HR035
		11026	0 = 0-5V - 1=0-10V - 2=4-20 mA	5.0	-99.9	999.9	°C/°F	R/W	LIDO27(2D)
S	+	U026 U027	Remote set point: min value Remote set point: max value	35.0	-99.9	999.9	°C/°F	R/W	HR037(2R) HR039(2R)
S S S	+	U028	Remote set point: max value Remote set point: offset	0.0	-99.9	99.9	K/R	R/W	HR043(2R)
5	x	U031	High water temp. alarm: offset	10.0	0.0	99.9	K/R	R/W	HR049(2R)
S	X	U032	High water temp. alarm: delay at start-up	15	0	99	min	R/W	HR051
S	X	U033	High water temp. alarm: delay when running	180	0	999	S	R/W	HR052
S		U034	Operating mode changeover	0	0	1	-	R/W	CS005
			0=Keypad - 1=Digital input						
S		U035	Cooling/heating changeover: delay	15	0	999	min	R/W	HR053
		U036	Control probe at start-up: 0=Return - 1=Delivery	0	0	1	-	R/W	CS006
<u>S</u> S		U037	PID control delay at start-up/operation	180	0	999	S	R/W	HR054
		U038	Control probe when running: 0=Return - 1=Delivery	1	0	1	-	R/W	CS007
S S S S S S S S		U039	PID at start-up: Kp	50.0	0.0	999.9	-	R/W	HR055(2R)
<u>S</u>		U040	PID at start-up: Ti 0: integral action disabled	0	0	999	S	R/W	HR057
5	+	U041	PID at start-up: Td 0: derivative action disabled	0	0	99	S	R/W	HR058
5	+	U042 U043	PID when running: Kp	50.0	0.0	999.9 999	-	R/W R/W	HR059(2R)
5		U043	PID when running: Ti 0: integral action disabled PID when running: Td 0: derivative action disabled	0	0	999	S	R/W	HR061 HR062
<u>S</u>	+	U045	User pump flow alarm: delay at start-up	10	0	999	S	R/W	HR063
ς	+	U046	User pump flow alarm: delay when running	3	0	999	S	R/W	HR064
5	_	U047	Compressor start delay after user pump	30	0	999	5	R/W	HR065
S		U048	User pump shutdown delay after compressor	180	0	999	S	R/W	HR066
		U049	User pump rotation time	12	0	999	h	R/W	HR067
S		U050	User side frost protection: alarm threshold	-0.8	-99.9	999.9	°C/°F	R/W	HR068 (2R)
S		U051	User side frost protection: differential	30.0	0.0	999.9	K/R	R/W	HR070 (2R)
S S S S S S S S S S S S S S S S S S S		U052	User-side frost protection: delay time at 1K	30	0	999	S	R/W	HR072
S		U053	Unit OFF: frost protection set point	4.0	-99.9	999.9	°C/°F	R/W	HR073 (2R)
S		U054	Unit OFF: frost protection differential	2.0	0.0	99.9	K/R	R/W	HR075 (2R)
<u>S</u>		U055	User return temp. probe: offset	0.0	-99.9	99.9	K/R	R/W	HR079 (2R)
S		U056	User delivery temp. probe: offset	0.0	-99.9	99.9	K/R	R/W	HR083 (2R)
<u>S</u>		U057	Remote alarm: input logic 0/1=NC/NO	0	0	1	-	R/W	CS008
5		U058	Cooling/heating input: logic 0/1=NO/NC	1	0	1	-	R/W	CS009
S C	X	U059 U060	Remote ON/OFF: input logic 0/1=NO/NC User pump flow switch: input logic 0/1=NC/NO	0	0	1	-	R/W R/W	CS010 CS011
5	+		User pump overload protector: input logic 0/1=NC/NO	0	0	1	-		CS011
ς		U061 U062	2nd set point: input logic 0/1=NC/NC	1	0	1	-	R/W R/W	CS012 CS013
S M		U063	User pump: input logic 0/1=NC/NO	0	0	1	-	R/W	CS014
S		U064	Global alarm relay: output logic 0/1=NC/NO	0	0	1	_	R/W	CS014
S		U065	Free cooling valve: output logic 0/1=NO/NC	0	0	1	-	R/W	CS015
M		U066	Frost protection heater: output logic 0/1=NO/NC	0	0	1	-	R/W	CS017
		U067	Alarm relay configuration: 0/1=Control alarms/All	0	0	1	-	R/W	CS018
ς		U068	Free cooling: enable 0/1=no/yes	0	0	1	-	R/W	CS019
					To 0	00.0	L/ /D	0.044	
S S S		U069	Free cooling: activation differential	3.0	0.0	99.9	K/R	R/W	HR085 (2R)

µchiller +0300053EN rel. 2.5 - 03.10.2024 Parameter table 87





User	Display	Code	Description	Def.	Min.	Max.	UOM	R/W	Modbus
5		U071	Design free cooling delta T	8.0	0.0	99.9	K/R	R/W	HR089 (2R)
S		U072	Water free cooling: valve closing threshold	5.0	-999.9	999.9	°C/°F	R/W	HR091 (2R)
5		U073	Water free cooling: valve closing differential	3.0	0.0	99.9	K/R	R/W	HR093 (2R)
M		U074	Free cooling type: 0=Air - 1=Remote coil - 2=Water	0	0	2	-	R/W	HR095
5		U075	Frost protection type:	2	0	2	-	R/W	HR096
			0=Heater - 1=Pump - 2=Heater/pump						
M		U076	Number of user pumps	1	1	2	-	R/W	HR097
Λ		U077	Type of unit	0	0	7	-	R/W	HR098
			0 = CH						
			1 = HP						
			2 = CH/HP						
			3 = Condensing unit CH						
			4 = Condensing unit CH/HP						
			5 = Air/air CH						
			6 = Air/air CH/HP						
			7 = Water/water CH/HP with reversal on the hydronic circuit						
		U078	User pump in standby: enable On-Off cycles 0/1=No/Yes	0	0	1	-	R/W	CS080
<u>5</u> <u>5</u> М		U079	Unit pump in standby: On time	3	1	15	min	R/W	HR709
		U080	Unit pump in standby: Off time	15	3	99	min	R/W	HR710
)		U081	Pressure alarm reset configuration	7	0	7	-	R/W	HR239
И		U082	Frost protection type	0	0	1	-	R/W	CS093
			0 = Evaporation temperature					'	
			1 = Delivery water temperature						
Л		U083	Type of automatic changeover	0	0	3	-	R/W	HR6
			0: disabled					'	
			1: on outside temperature						
			2: on air return temp. (for legacy AA units only)						
			3: on delivery water temp. (AW and WW units only)						
И		U084	Automatic changeover threshold (type 1 only (U083 = 1))	23	-99.9	99.9	°C/°F	R/W	HR765
•		U085	Automatic changeover dead band	2	0	99.9	K/R	R/W	HR772
		U086	Automatic changeover set point lower limit	0	-99.9	999.9	°C/°F	R/W	HR774
		U087	Automatic changeover set point upper limit	80	-99.9	999.9	°C/°F	R/W	HR776
Л		U088	Frost protection heater position	0	0	2	-	R/W	HR769
			0 = user					'	
			1 = source (WW units only)						
			2 = user and source (WW units only)						
V		U089	Probe type for capacity request from analogue input	0	0	2	-	R/W	HR817
		0005	(0=0-5V, 1=0-10V, 2=4-20mA)		ľ	_		1.4	1
V		U090	Offset for capacity request from analogue input.	0	U091	U092	%	R/W	HR818
V		U091	Min. value for capacity request from analogue input	0	-999.9	999.9	%	R/W	HR820
M		U092	Max. value for capacity request from analogue input	0	-999.9	999.9	%	R/W	HR822
V		U093	Flow alarm management from flow switch	0	0	1	-	R/W	HR121
			(0 = manual, 1 = 3 attempts)	1	1	1		1.4	

Tab. 6.a

6.2 Compressor

<u> </u>	2										
User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus		
CMP = C	ompressor										
S		C000	Comp. 1 circuit 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR153		
<u>S</u> <u>S</u>		C001	Comp. 1 circuit 1: reset hour counter	0	0	1	-	R/W	CS023		
S	×	C002	Comp. 1 circuit 1: operating mode	0	0	2	-	R/W	HR154		
			0=AUTO - 1=OFF - 2=ON								
S		C003	Comp. 2 circuit 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR155		
S		C004	Comp. 2 circuit 1: reset hour counter	0	0	1	-	R/W	CS024		
S	X	C005	Comp. 2 circuit 1: operating mode	0	0	2	-	R/W	HR156		
			0=AUTO - 1=OFF - 2=ON								
S		C006	Comp. 2 circuit 1: maintenance hour threshold	99	0	999	h	R/W	HR157		
S		C007	Comp. 2 circuit 1: reset hour counter	0	0	1	-	R/W	CS025		
S	х	C008	Comp. 2 circuit 1: operating mode	0	0	2	-	R/W	HR158		
			0=AUTO - 1=OFF - 2=ON								
S		C009	Comp. 2 circuit 2: maintenance hour threshold (x100)	99	0	999	h	R/W	HR159		
S		C010	Comp. 2 circuit 2: reset hour counter	0	0	1	-	R/W	CS026		
S	x	C011	Comp. 2 circuit 2: operating mode	0	0	2	-	R/W	HR160		
			0=AUTO - 1=OFF - 2=ON								
М		C012	Min compressor on time	180	30	999	S	R/W	HR162		
М		C013	Min compressor off time	60	30	999	S	R/W	HR163		
М		C014	Min time between consecutive compressor starts	360	0	999	S	R/W	HR164		
М		C015	Compressor load up time	30	5	999	S	R/W	HR165		
М		C016	Compressor load down time	10	5	999	S	R/W	HR166		
М		C017	Max high pressure threshold (HP)	65.0	0.0	999.9	°C/°F	R/W	HR324 (2R)		
М		C018	Min low pressure threshold (LP)	0.2	-99.9	99.9	bar/psi	R/W	HR326 (2R)		
М		C020	Maximum circuit destabilisation time	240	5	999	min	R/W	HR168		
М		C021	Circuit capacity distribution	0	0	1	-	R/W	HR169		
			(0 = grouped, 1 = equalised)								
S		C022	Circuit 1: discharge temp. offset	0.0	-99.9	99.9	K/R	R/W	HR170 (2R)		
S		C023	Circuit 1: suction temp. offset	0.0	-99.9	99.9	K/R	R/W	HR172 (2R)		
S		C024	Circuit 2: discharge temp. offset	0.0	-99.9	99.9	K/R	R/W	HR174 (2R)		
S		C025	Circuit 2: suction temp. offset	0.0	-99.9	99.9	K/R	R/W	HR176 (2R)		
S		C026	Circuit 1: condensing pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR178 (2R)		
S		C027	Circuit 1: evaporation pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR180 (2R)		
S		C028	Circuit 1: condensing temp. offset	0.0	-99.9	99.9	K/R	R/W	HR182 (2R)		
S		C029	Circuit 1: evaporation temp. offset	0.0	-99.9	99.9	K/R	R/W	HR184 (2R)		
S		C030	Circuit 2: condensing pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR186 (2R)		
S		C031	Circuit 2: evaporation pressure offset	0.0	-99.9	99.9	bar/psi	R/W	HR188 (2R)		
S		C032	Circuit 2: condensing temp. offset	0.0	-99.9	99.9	K/R	R/W	HR190 (2R)		

88 Parameter table µchiller +0300053EN rel. 2.5 - 03.10.2024



User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		C033	Circuit 2: evaporation temp. offset	0.0	-99.9	99.9	K/R	R/W	HR192 (2R)
М		C034	HP pressure switch: input logic 0/1=NC/NO	0	0	1	-	R/W	CS027
M		C035	Compressor overload protector: input logic 0/1=NC/NO	0	0	1	-	R/W	CS028
М		C036	Compressor: input logic 0/1=NO/NC	0	0	1	-	R/W	CS029
M		C037	Evaporation pressure: probe type 0=0-5V; 1=4-20mA	0	0	1	-	R/W	HR194
М		C038	Evaporation pressure transducer: min value	0.0	-1.0	99.9	bar/psi	R/W	HR195 (2R)
M		C039	Evaporation pressure transducer: max value	17.3	0.0	99.9	bar/psi	R/W	HR197 (2R)
М		C040	Condensing pressure: probe type 0=0-5V; 1=4-20mA	0	0	1	-	R/W	HR199
M		C041	Condensing pressure transducer: min value	0.0	-1.0	99.9	bar/psi	R/W	HR200 (2R)
M		C042	Condensing pressure transducer: max value	45.0	0.0	99.9	bar/psi	R/W	HR202 (2R)
M		C043	Discharge temperature - Probe type (0=NTC, 1=NTC-HT)	1	0	1	-	R/W	204
M		C044	Enable destabilisation 0/1=No/Yes	1	0	1	-	R/W	CS030
S		C045	Refrigerant -	4	0	99	-	R	IR038
			3=R407C - 4=R410a - 6=R290 - 10=R744 - 22=R32						
М		C046	No. of unit circuits	1	1	2	-	R/W	HR206
M		C047	Type of compressors used	0	0	5	-	R/W	HR207
			0=1 On/Off - 1=2 On/Off - 2=1 BLDC - 3= 1 BLDC+On/Off,						
			4=AC Compressor, 5=AC Compressor + On/Off						
M		C049	LP pressure switch: alarm delay from compressor start	90	0	999	-	R/W	HR269
			If C049 = 0 the alarm is triggered even if						
			the compressors are off.						
			If C049 > 0 the alarm is only triggered						
			when the compressors are on						
М		C050	LP pressure switch: alarm delay when running	15	0	999	-	R/W	HR269
М		C051	Low press. pressostat input logic (0=N.C., 1=N.O.)	0	0	1	-	R/W	CS76
M,S,U		C052	Compressor with capacity control: output logic (0=NC, 1=NO)	0	0	1	-	R/W	CS118
M,S,U		C081	Maximum limit on request sent to AC compressor	100	0	100	%	R/W	HR 824
M,S,U		C082	Minimum limit on request sent to AC compressor	30	0	100	%	R/W	HR825

Tab. 6.b

6.3 BLDC and Inverter

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		P000	Min evaporation temp.: custom limit	-25.0	-99.9	999.9	°C/°F	R/W	HR335 (2R)
S		P001	Max condensing temp.: custom limit	70.0	-99.9	999.9	°C/°F	R/W	HR337 (2R)
М		P003	Out of envelope alarm delay	120	0	999	S	R/W	HR340
М		P004	Low pressure differential alarm delay	60	0	999	S	R/W	HR341
М		P005	Min. BLDC speed threshold for circuit destabilisation	35	0	999	S	R/W	HR342
М		P006	Oil recovery: min request for activation	35.0	0.0	100.0	%	R/W	HR344 (2R)
М		P007	Oil recovery: min speed for activation	35.0	0.0	999.9	rps	R/W	HR346 (2R)
М		P008	Oil recovery: comp. running time at low speed	15	0	999	min	R/W	HR348
М		P009	Oil recovery: force comp. speed time	3	0	999	min	R/W	HR349
М		P010	Oil recovery: force comp. speed value	50.0	0.0	999.9	rps	R/W	HR350 (2R)
М		P011	Oil equalisation: solenoid valve opening time at start-up	30	0	999	S	R/W	HR352
М		P012	Oil equalisation: solenoid valve opening time	3	0	999	S	R/W	HR353
М		P013	Oil equalisation: min solenoid valve closed time	1	0	999	min	R/W	HR354
М		P014	Oil equalisation: max solenoid valve closed time	15	0	999	min	R/W	HR355
М		P015	Oil equalisation: solenoid valve closed time increment	20	0	999	min	R/W	HR356
S		P016	Oil equalisation valve: output logic 0/1= NO/NC	0	0	1	-	R/W	CS66
М		P017	Enable oil equalisation 0/1=No/Yes	0	0	1	-	R/W	CS67
М		P018	Enable oil recovery 0/1=No/Yes	0	0	1	-	R/W	CS68
S	х	P019	BLDC compressor circ. 1: operating mode 0=AUTO; 1=0%, 101=100%	0	0101-	R/W	HR357		
S	х	P020	BLDC compressor circ. 2: operating mode 0=AUTO; 1=0%, 101=100%	0	0	101	-	R/W	HR358
М		P021	Max. deltaP at start-up	900.0	0.0	2000.0	kPa	R/W	HR359 (2R)
М		P022	EVD: max pre-opening time for pressure equalisation	10	0	999	S	R/W	HR361
М		P023	EVD: pre-opening value for pressure equalisation	50.0	0.0	100.0	%	R/W	HR362 (2R)
М		P024	Start-up speed	50.0	20.0	120.0	rps	R/W	HR363 (2R)
М		P025	Custom speed: max value	120.0	0.0	999.9	rps	R/W	HR365 (2R)
М		P026	Custom speed: min value	20.0	0.0	999.9	rps	R/W	HR367 (2R)
М		P027	BLDC speed request threshold to start comp.	45	0	100	%	R/W	HR369(2R)
М		P028	BLDC speed request threshold % to start 2nd OnOff compressor	85	20	100	%	R/W	HR371(2R)
M		P029	BLDC speed request threshold % to stop 2nd OnOff compressor	25	20	100	%	R/W	HR373(2R)
S		P030	Skip frequency: centre point [010]	0.0	0.0	999.9	Hz	R/W	HR375 (2R)
S		P031	Skip frequency: band [011]	0.0	0.0	999.9	Hz	R/W	HR377 (2R)
M		P032	Enable motor over-temperature alarm (PTC) [027] 0/1=No/Yes	0	0	1		R/W	HR379
M		P033	Motor over-temperature delay delay (PTC) [028]	0	0	999	S	R/W	HR380
M		P034	Enable crankcase heater function 0/1=No/Yes	0	0	1		R/W	CS69

Tab. 6.c

μchiller +0300053EN rel. 2.5 - 03.10.2024 Parameter table 89



6.4 Valve

User	Display	Code	Description	Def.	Min	Max	иом	R/W	Modbus
EEU = Va	lve								
S		E000	ExV circuit 1: manual mode - 0/1=No/Yes	0	0	1	-	R/W	CS020
S		E001	ExV circuit 1: steps in manual mode	0	0	65535	steps	R/W	HR099
S		E002	ExV circuit 2: manual mode - 0/1=No/Yes	0	0	1	-	R/W	CS021
S		E003	ExV circuit 2: steps in manual mode	0	0	65535	steps	R/W	HR100
S	X	E004	SH in cooling: set point	6.0	-40.0	180.0	K/R	R/W	HR101 (2R)
S		E005	SH in cooling: Kp	15.0	0.0	800.0	-	R/W	HR103 (2R)
S		E006	SH in cooling: Ti	150.0	0.0	1000.0	S	R/W	HR105 (2R)
S		E007	SH in cooling: Td	1.0	0.0	800.0	S	R/W	HR107 (2R)
S	×	E008	SH in heating: set point	6.0	-40.0	180.0	K/R	R/W	HR109 (2R)
S		E009	SH in heating: Kp	15.0	0.0	800.0	-	R/W	HR111 (2R)
S		E010	SH in heating: Ti	150.0	0.0	1000.0	S	R/W	HR113 (2R)
S		E011	SH in heating: Td	1.0	0.0	800.0	S	R/W	HR115 (2R)
S		E012	LowSH in cooling: threshold	1.0	-40.0	180.0	K/R	R/W	HR117 (2R)
S		E013	LowSH in cooling: Ti	10.0	0.0	800.0	S	R/W	HR119 (2R)
S		E014	LowSH in heating: threshold	1.0	-40.0	180.0	K/R	R/W	HR121 (2R)
S		E015	LowSH in heating: Ti	10.0	0.0	800.0	S	R/W	HR123 (2R)
S		E016	LOP in cooling: threshold	-5.0	-60.0	200.0	°C/°F	R/W	HR125 (2R)
S		E017	LOP in cooling: Ti	5.0	0.0	800.0	S	R/W	HR127 (2R)
S		E018	LOP in heating: threshold	-50.0	-60.0	200.0	°C/°F	R/W	HR129 (2R)
S		E019	LOP in heating: Ti	5.0	0.0	800.0	S	R/W	HR131 (2R)
М		E020	MOP in cooling: threshold	30.0	-60.0	200.0	°C/°F	R/W	HR133 (2R)
М		E021	MOP in cooling: Ti	15.0	0.0	800.0	S	R/W	HR135 (2R)
М		E022	MOP in heating: threshold	20.0	-60.0	200.0	°C	R/W	HR137 (2R)
М		E023	MOP in heating: Ti	15.0	0.0	800.0	S	R/W	HR139 (2R)
М		E024	LowSH: alarm delay time	300	0	18000	S	R/W	HR141
M		E025	LOP: alarm delay time	300	0	18000	S	R/W	HR142
М		E026	MOP: alarm delay time	300	0	18000	S	R/W	HR143
М		E032	Valve opening % at start-up (EVAP/EEV capacity ratio) in cooling	100	0	100	%	R/W	HR144
М		E033	Valve opening % at start-up (EVAP/EEV capacity ratio) in heating	100	0	100	%	R/W	HR145
М		E034	Control delay after pre-positioning	6	3	18000	s	R/W	HR146
М		E046	EVD Evolution: valve (1=CAREL EXV,) (*)	1	1	35	-	R/W	HR048
S		E047	ExV driver (0=Disabled, 1=Built-in, 2=EVD Evolution)	0	0	2	-	R/W	HR328
M,S,U		E072	High superheat alarm activation threshold	20	0	99.9	К	R/W	HR815
M,S,U		E073	High superheat alarm delay time	0	0	99	min	R/W	HR791

Tab. 6.d

Note: (*) see the EVD Evolution manual for the complete list of selectable valves.

6.5 Source

0.5	500	100							
User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
Src = Sou	rce	1	T-		1.	1	T.	1	
<u>S</u>		S000	Source pump 1: maintenance hour threshold (x100)	99	0	999	h	R/W	HR209
S		S001	Source pump 1: reset hour counter	0	0	1	-	R/W	CS031
S	Х	S002	Source pump 1: operating mode - 0=AUTO - 1=OFF - 2=ON	0	0	2	-	R/W	HR210
S		S008	Source fan 1 circuit 1: maintenance hour threshold (X100)	99	0	999	h	R/W	HR214
S		S009	Source fan 1 circuit 1: reset hour counter	0	0	1	-	R/W	CS033
S	X	S010	Source ON/OFF fan 1 circuit 1: operating mode 0=AUTO 1=OFF 2=ON	0	0	2	-	R/W	HR215
S	X	S011	Source modulating fan circuit 1: operating mode 0=AUTO 1=0% 2=1%, 101=100%	0	0	101	-	R/W	HR216
S		S012	Source fan 1 circuit 2: maintenance hour threshold (X100)	99	0	999	h	R/W	HR217
S		S013	Source fan 1 circuit 2: reset hour counter	0	0	1	-	R/W	CS034
S	х	S014	Source ON/OFF fan circuit 2: operating mode 0=AUTO 1=OFF 2=ON	0	0	2	-	R/W	HR218
S	х	S015	Source modulating fan circuit 2: operating mode 0=AUTO 1=0% 2=1%, 101=100%	0	0	101	-	R/W	HR219
ς		S016	Source fan: cold climate temperature threshold	-0.5	-999.9	999.9	°C/°F	R/W	HR220 (2R)
S S		S017	Source fan: min cold climate speed	10.0	0.0	100.0	%	R/W	HR222 (2R)
		S018	Source fan: cold climate speed at start-up	50.0	0.0	100.0	%	R/W	HR224 (2R)
S S		S019	Source fan: cold climate speed at start-up time	5	0.0	300	S	R/W	HR226
S	x	S020	Enable noise reduction 0/1=No/Yes	0	0	1	-	R/W	CS035
S		S021	Noise reduction time band: start hours	22	0	23	h	R/W	HR167
S		S022	Noise reduction time band: start minutes	30	0	59	min	R/W	HR212
		S023	Noise reduction time band: end hours	8	0	23	h	R/W	HR041
S S		S024	Noise reduction time band: end minutes	30	0	59	min	R/W	HR042
S		S025	Source fan: noise reduction set point	45.0	0.0	999.9	°C/°F	R/W	HR231 (2R)
S		S026	Compressor start delay after pump start	30	0.0	999	S .	R/W	HR233
S		S027	Pump (source) shutdown delay after compressor off	10	0	999	S	R/W	HR234
S		S028	Source fan in cooling: set point	30.0	-999.9	999.9	°C/°F	R/W	HR235 (2R)
S		S029	Source fan in heating: set point	10.0	0.0	99.9	°C/°F	R/W	HR237 (2R)
		S031	Source fan in cooling set point at start-up	45.0	0.0	999.9	°C/°F	R/W	HR241 (2R)
S S		S032	Source fan: delay at start-up in cooling	240	0.0	999	5	R/W	HR243
S		S034	Source fan: defay at start up in cooling	15.0	0.0	99.9	K	R/W	HR246 (2R)
S		S035	Source fan: differential in heating	5.0	0.0	99.9	K	R/W	HR248 (2R)
S		S036	Modulating source fan: min speed value	20.0	0.0	100.0	%	R/W	HR250 (2R)
		S037	Modulating source fan: max speed value	80.0	0.0	100.0	%	R/W	HR252 (2R)
S S		S039	Defrost: start temperature	-1.0	-99.9	99.0	°C/°F	R/W	HR254 (2R)
ς		S040	Defrost: reset start defrost delay threshold	1.0	S039	99.9	°C/°F	R/W	HR256 (2R)
S S		S041	Defrost: delay at start-up	130	0	999	min	R/W	HR258
S		S042	Defrost: end temperature	52.0	-999.9	999.9	°C/°F	R/W	HR259 (2R)
		S043	Enable sliding defrost 0/1=No/Yes	0	0	1	-	R/W	CS037
S S		S044	Operation time at min capacity before cycle reversing	20	0	999	ς	R/W	HR261
S		S045	Running time at min capacity after reversing cycle	30	0	999	5	R/W	HR262
S		S046	Defrost: min duration	1	0	99	min	R/W	HR263

90 Parameter table μ chiller +0300053EN rel. 2.5 - 03.10.2024



User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S		S047	Defrost: max duration	5	0	99	min	R/W	HR264
S		S048	Dripping: duration - 0=Dripping not performed	90	0	999	S	R/W	HR265
S		S049	Post-dripping: duration - 0=Post-dripping not performed	30	0	999	S	R/W	HR266
S		S050	Minimum delay between consecutive defrosts	20	0	999	min	R/W	HR267
S		S051	BDLC compressor speed in defrost	80.0	0.0	999.9	rps	R/W	HR382 (2R)
S		S052	BLDC compressor speed for reversing	40.0	0.0	999.9	rps	R/W	HR384 (2R)
			the cycle when defrosting						
S		S053	Defrost synchronisation	0	0	2	-	R/W	HR272
			0=Independent - 1=Separate - 2=Simultaneous						
М		S054	4-way valve: pressure differential for reversing	3.0	0.0	999.9	bar/psi	R/W	HR274 (2R)
М		S055	Compressor after defrost - 0/1=On/Off	0	0	1	-	R/W	CS038
S		S056	BLDC smart start: duration (*)	20	0	999	S	R/W	HR278
S		S057	Source frost protection: alarm threshold	-0.8	-999.9	999.9	K/R	R/W	HR279 (2R)
S		S058	Source frost protection: alarm differential	30.0	0.0	999.9	K/R	R/W	HR281 (2R)
S		S059	Frost protection alarm delay at threshold -1K	30	0	999	S	R/W	HR283
S		S060	Source: outside air temperature probe offset	0.0	-99.9	99.9	K/R	R/W	HR284 (2R)
М		S061	Source fan: output logic 0/1=NO/NC	0	0	1	-	R/W	CS039
М		S062	Source pump: output logic 0/1=NO/NC	0	0	1	-	R/W	CS040
S		S063	Reversing valve: output logic 0/1=NO/NC	0	0	1	-	R/W	CS041
S		S064	Type of source air circuit	0	0	1	-	R/W	CS042
			0=Independent - 1=Common						
S		S065	Type of source fan 0/1=Modulating/ON-OFF	0	0	1	-	R/W	CS044
М		S066	Source water flow type	1	0	1	-	R/W	CS96
			(0=Independent, 1=Common)						
S		S068	Unit type 0=Air - 1=Water	0	0	1	-	R/W	CS046
S		S069	Defrost with fans: outside temperature threshold - 0.0°C/32.0 -	0.0	0.0	99.9	-	R/W	HR736
			°F=Function disabled						
М		S070	Cond. 1 frost temperature probe offset	0	-99.9	99.9	-	R/W	HR732
М		S071	Cond. 2 frost temperature probe offset	0	-99.9	99.9	-	R/W	HR734
S		S072	Source pump activation	0	0	2	-	R/W	HR213
			0=on with unit on						
			1=on with compressor on						
			2=modulating on/off with condensing temperature						
S		S073	Compressor status at start defrost	0	0	1	-	R/W	CS92
-		1	0=On minimum speed - 1=Off	-	[-	1		1	1
		S074	Logic for source fan/pump alarm from digital input	0	0	1	-	R/W	CS117

Tab. 6.e

6.6 Input/output configuration

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
5		Hc31	S1 configuration	7	0	8	-	R/W	HR752
		Hc32	S2 configuration	8	0	8	-	R/W	HR753
		Hc00	S3 configuration	0	0	8	-	R/W	HR286
		S008	Source fan 1 circuit 1 - maintenance hour threshold (x100)	99	0	999	h	R/W	HR214
		Hc34	S4 configuration	7	0	10	-	R/W	HR754
		Hc35	S5 configuration	8	0	10	-	R/W	HR755
		Hc03	S6 configuration	0	0	12	-	R/W	HR288
		Hc04	S7 configuration (DIN)	6	0	8	-	R/W	HR289
		Hc41	S1 configuration (circuit 2)	0	0	8	-	R/W	HR756
		Hc42	S2 configuration (circuit 2)	0	0	8	-	R/W	HR757
		Hc43	S3 configuration (circuit 2)	0	0	8	-	R/W	HR758
		Hc44	S4 configuration (circuit 2)	7	0	10	-	R/W	HR759
		Hc45	S5 configuration (circuit 2)	8	0	10	-	R/W	HR760
		Hc05	S6 configuration (circuit 2)	0	0	11	-	R/W	HR290
		Hc47	S7 configuration (circuit 2)	6	0	8	-	R/W	HR761
		Hc14	ID1 configuration	1	0	10	-	R/W	HR297
		Hc15	ID2 configuration	2	0	10	-	R/W	HR298
		Hc06	ID4 configuration	0	0	10	-	R/W	HR291
		Hc07	ID5 configuration	7	0	10	-	R/W	HR292
		Hc08	ID6 configuration	6	0	10	-	R/W	HR293
		Hc16	ID1 configuration (circuit 2)	10	0	10	-	R/W	HR299
		Hc17	ID2 configuration (circuit 2)	2	0	10	-	R/W	HR300
		Hc09	ID4 configuration (circuit 2)	0	0	10	-	R/W	HR294
		Hc10	ID5 configuration (circuit 2)	0	0	10	-	R/W	HR295
		Hc11	ID6 configuration (circuit 2)	0	0	10	-	R/W	HR296
		Hc51	NO1 configuration	1	0	11	-	R/W	HR740
		Hc52	NO2 configuration	2	0	11	-	R/W	HR741
		Hc53	NO3 configuration	4	0	11	-	R/W	HR742
		Hc54	NO4 configuration	7	0	11	-	R/W	HR743
		Hc55	NO5 configuration	10	0	11	-	R/W	HR744
		Hc56	NO6 configuration	0	0	11	-	R/W	HR745
		Hc61	NO1 configuration (circuit 2)	1	0	8	-	R/W	HR746
		Hc62	NO2 configuration (circuit 2)	2	0	8	-	R/W	HR747
		Hc63	NO3 configuration (circuit 2)	4	0	8	-	R/W	HR748
		Hc64	NO4 configuration (circuit 2)	7	0	8	-	R/W	HR749
		Hc65	NO5 configuration (circuit 2)	0	0	8	-	R/W	HR750
		Hc66	NO6 configuration (circuit 2)	0	0	8	-	R/W	HR751
		Hc71	Y1 configuration	1	0	4	-	R/W	HR240
		Hc72	Y2 configuration	3	0	4	-	R/W	HR245
		Hc81	Y1 configuration (circuit 2)	1	0	3	-	R/W	HR244
		Hc82	Y2 configuration (circuit 2)	0	0	3	-	R/W	HR276
		Hc13	Buzzer 0/1=No/Yes	0	0	1	-	R/W	CS050

Tab. 6.f

Note: (1) Max = 3 with Panel model, Max = 2 with DIN model.

µchiller +0300053EN rel. 2.5 - 03.10.2024 Parameter table 91





6.7 mCH2 parameters (Legacy models only)

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S	X	F003	Number of evaporators (0=1; 1=2)	0	0	1	-	R/W	-
S	X	F007	Probe S4 installed on the source heat exchanger (0=No, 1=Yes:	0	0	1	-	R/W	-
			condensing in CH, evaporation in HP)						
S	X	F008	Frost protection alarm delay	10	0	999	-	R/W	-
S	X	F009	Supply air temperature limit threshold	14.0	0.0	99.9	°C	R/W	-
S	X	F010	Supply air temperature limit differential	4.0	0.0	20.0	°K	R/W	-
S	X	F011	Heater digital output logic (0=NO; 1=NC)	0	0	1	-	R/W	-
S	X	F012	Offset on set point in cooling mode for the heaters	1.0	0.0	99.9	°K	R/W	-
S	X	F013	Differential on set point in cooling mode for the heaters	0.5	0.2	99.9	°K	R/W	-
S	X	F014	Offset on set point in heating mode for the heaters	3.0	0.0	99.9	°K	R/W	-
S	X	F015	Differential on set point in heating mode for the heaters	1.0	0.2	99.9	°K	R/W	-
S	X	F016	Heaters active during defrost (0= No, 1=Yes)	0	0	1	-	R/W	-
S	X	F017	Supply fan operating mode (0=Always ON; 1=ON by temp. control)	0	0	1	-	R/W	-
S	X	F018	Hot-start set point	40.0	0.0	99.9	°C	R/W	-
S	X	F019	Hot-keep differential	5.0	0.0	99.9	°K	R/W	-
S	X	F020	Compressor request logic from digital input (0=NC; 1=NO)	1	0	1	-	R/W	-
S	X	F021	Mix delivery water temperature probe calibration	0.0	-99.9	99.9	°K	R/W	-
			(S1 expansion)						
S	X	F022	Evaporator 2 water outlet temperature probe calibration	0.0	-99.9	99.9	°K	R/W	-
			(S2 expansion)						
S	X	F023	Direct relationship between digital inputs and digital outputs	0	0	1	-	R/W	-
			for condensing unit (0=No; 1=Yes)						
S	X	F024	Manual heater 1 management (0=AUTO; 1=OFF; 2=ON)	0	0	2	-	R/W	-
S	X	F025	Manual heater 2 management (0=AUTO; 1=OFF; 2=ON)	0	0	2	-	R/W	-
S	Х	F026	Compressors off at low outside temperature (air/air)	-40.0	-40.0	99.9	°C	R/W	-
S		F027	Enable compressor capacity control 0/1=No/Yes	0	0	1	-	R/W	CS49
S		F028	Air heating: probe for user heater temperature control	FALSE	-	-	-	R/W	CS94
			0 = ROOM - 1 = SUPPLY						

Tab. 6.g

6.8 BMS port

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
S	X	Hd00	BMS: serial address	1	1	247	-	-	HR147
S	X	Hd01	BMS: baud rate 3=9600; 4=19200; 5=38400; 6=57600; 7=115200	7	3	7	-	-	HR148
S	X	Hd02	BMS: settings	1	0	5	-	-	HR149
			0= 8-NONE-1 - 1= 8-NONE-2 - 2= 8-EVEN-1						
			3= 8-EVEN-2 - 4= 8-ODD-1 - 5= 8-ODD-2						
S	Х	Hd07	BMS: supervisor database 0= 32bit 1= 16bit	0	0	1	-	-	CS48

Tab. 6.h

6.9 Password

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
U		He00	User password	1000	0000	9999	-	-	-
S		He01	Service password	2000	0000	9999	-	-	-
M		He02	Manufacturer password	1234	0000	9999	-	-	-
M		He03	Password for profile 1	0001	0000	9999	-	-	-
M		He04	Password for profile 2	0002	0000	9999	-	-	-
V		He05	Password for profile 3	0003	0000	9999	-	-	-
Л		He06	Password for profile 4	0004	0000	9999	-	-	-
M		He07	Password for profile 5	0005	0000	9999	-	-	-
V		He08	Password for profile 6	0006	0000	9999	-	-	-
V		He09	Password for profile 7	0007	0000	9999	-	-	-

Tab. 6.i

92 Parameter table µchiller +0300053EN rel. 2.5 - 03.10.2024



6.10 Dashboard values

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
J	X	AFC1	Circuit 1: source delivery water temperature	-	-999.9	999.9	°C/°F	R	IR217 (2R)
	X	AFC2	Circuit 2: source delivery water temperature	-	-999.9	999.9	°C/°F	R	IR213 (2R)
	X	AFE1	Circuit 1: user delivery water temperature	-	-999.9	999.9	°C/°F	R	
	X	AFE2	Circuit 2: user delivery water temperature	-	-999.9	999.9	°C/°F	R	
	X	EuP1	Circuit 1: evaporation temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR026 (2R)
	X	EuP2	Circuit 2: evaporation temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR034 (2R)
		dSP1	Circuit 1: condensing pressure	-	-999.9	999.9	bar/psi	R	IR020 (2R)
		dSP2	Circuit 2: condensing pressure	-	-999.9	999.9	bar/psi	R	IR028 (2R)
	x	dSt1	Circuit 1: discharge temperature	-	-999.9	999.9	°C/°F	R	IR012 (2R)
	Х	dSt2	Circuit 2: discharge temperature	-	-999.9	999.9	°C/°F	R	IR016 (2R)
	x	rUSr	User: return water temperature	-	-999.9	999.9	°C/°F	R	IR054 (2R)
	x	dUSr	User: delivery water temperature	-	-999.9	999.9	°C/°F	R	IR056 (2R)
	x	Cnd1	Circuit 1: condensing temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR024 (2R)
	х	Cnd2	Circuit 2: condensing temperature (or converted value)	-	-999.9	999.9	°C/°F	R	IR032 (2R)
		Sprb	Source: outside air temperature		-999.9	999.9	°C/°F	R	HR229
		ScP1	Circuit 1: evaporation pressure	-	-999.9	999.9	bar/psi	R	IR022 (2R)
		ScP2	Circuit 2: evaporation pressure	-	-999.9	999.9	bar/psi	R	IR030 (2R)
		Sct1	Circuit 1: suction temperature	-	-999.9	999.9	°C/°F	R	IR014 (2R)
		Sct2	Circuit 2: suction temperature	-	-999.9	999.9	°C/°F	R	IR018 (2R)
	x	SetA	Current set point	-	-999.9	999.9	°C/°F	R	IR046 (2R)
		rSPt	Remote set point		-999.9	999.9	°C/°F		IR090 (2R)
	×	SetU	Automatic set point changeover	23	U086	U087	°C/°F	R/W	HR767 (2R)
	<u> </u>	Opn1	ExV circuit 1: position	-	0	9999	%	R	IR050
		Opn2	ExV circuit 2: position	-	0	9999	%	R	IR053
	×	SSH1	Circuit 1: suction superheat	-	-999.9	999.9	°C/°F	R	IR048 (2R)
	X	SSH2	Circuit 2: suction superheat	-	-999.9	999.9	°C/°F	R	IR051 (2R)
	X	Hd00	BMS: serial address	1	1	245	-	R	HR147
	X	Hd01	BMS: baud rate	7	3	7	-	R	HR148
	^	11001	3=9600 - 4=19200 - 5=38400 - 6=57600 - 7=115200	,	٦	'		11	111111111111111111111111111111111111111
	X	Hd02	BMS: settings	0	0	5	-	R	HR149
	^	11002	0= 8-NONE-1 2= 8-EVEN-1 4= 8-ODD-1	1	ľ			11	111(14)
			1=8-NONE-2						
		114.64				00000		-	10004 (20)
		H1C1	Comp. 1 circuit 1: hour counter	-	0	99999	h	R	IR004 (2R)
		H1C2	Comp. 2 circuit 1: hour counter	-	0	99999	h	R	IR006 (2R)
		H2C1	Comp. 2 circuit 1: hour counter	-	0	99999	h	R	IR008 (2R)
		H2C2	Comp. 2 circuit 2: hour counter	-	0	99999	h	R	IR010 (2R)
		HSP1	Source pump: hour counter	-	0	99999	h	R	IR036 (2R)
		HuP1	User pump 1: hour counter	-	0	99999	h	R	IR000 (2R)
		HuP2	User pump 2: hour counter	-	0	99999	h	R	IR002 (2R)
		HFn1	Fan circuit 1: hour counter	-	0	99999	h	R	IR040 (2R)
		HFn2	Fan circuit 2: hour counter	-	0	99999	h	R	IR042 (2R)
	X	rps1	BLDC 1 speed	-	0	999.9	rps	R	IR100 (2R)
	X	rps2	BLDC 2 speed	-	0	999.9	rps	R	IR181 (2R)
	X	Mc1	BLDC 1 current	-	0	99.9	A	R	IR102 (2R)
	X	Mc2	BLDC 2 current	-	0	99.9	A	R	IR183 (2R)
		MP1	BLDC1 power	-	0	99.9	kW	R	IR104 (2R)
		MP2	BLDC2 power	-	0	99.9	kW	R	IR185 (2R)
		Drt1	Current speed drive 1 temperature	-	0	999.9	°C/°F	R	IR106 (2R)
		Drt2	Current speed drive 2 temperature		0	999.9	°C/°F	R	IR187 (2R)
		AlHs1_1	Speed drive 1 alarm log: last	-	0	99		R	IR108
		AlHs2_1	Speed drive 1 alarm log: second-to-last	-	0	99		R	IR109
		AlHs3_1	Speed drive 1 alarm log: third-to-last	-	0	99		R	IR110
		AlHs4_1	Speed drive 1 alarm log: fourth-to-last	-	0	99		R	IR111
		AlHs1 2	Speed drive 2 alarm log: last	-	0	99		R	IR189
		AlHs2 2	Speed drive 2 alarm log: second-to-last	-	0	99		R	IR190
		AlHs3 2	Speed drive 2 alarm log: seestra to last	-	0	99	1	R	IR191
		AlHs4 2	Speed drive 2 alarm log: fourth-to-last		0	99	1	R	IR192

Tab. 6.j

6.11 Settings

User	Display	Code	Description	Def.	Min	Max	UOM	R/W	Modbus
U	X	SEtC	Cooling set point	7.0	U006	U007	°C/°F	R/W	HR307 (2R)
U	X	SEtH	Heating set point	40.0	U008	U009	°C/°F	R/W	HR309 (2R)
U	X	0-1	Unit On-Off from keypad	0	0	1	-	R/W	CS54
			0=OFF 1=ON						
U	Х	ModE	Cooling/heating from keypad	0	0	1	-	R/W	CS55
			0=Cooling 1=Heating						
-		RES	Reset alarms from BMS	0	0	1	-	R/W	CS56
			0/1=No/Yes						
S	×	DFr	Force defrost	0	0	3	-	R/W	HR78
			0=No 1=Circuit 1 2=Circuit 2 3=Circuit 1 and 2						
S	×	ClrH	Reset alarm log	0	0	1	-	R/W	CS59
			0/1=No/Yes						
S	×	UoM	Unit of measure	0	0	1	-	R/W	CS47
			0=°C/barg 1=°F/psig						
S	x	rStr	Reset factory parameters	0	0	1	-	R/W	CS45

Tab. 6.k

μchiller +0300053EN rel. 2.5 - 03.10.2024 Parameter table 93





7. SUPERVISOR TABLE

 μ Chiller provides a database of supervisor variables via Modbus RTU protocol over RS485 (BMS port on the μ Chiller controller). The BMS port has the following default settings:

- baud rate 115,200;
- · data bits 8;
- · no parity;
- stop bits 2.

See "Parameter table: BMS port" to set different values.

"Index" is the address specified in the Modbus® frame.

Unit on/off management from BMS.

The unit can also be switched on/off from the BMS supervisor, as follows. By setting Hd05 = TRUE (CS 63) and UnSt = TRUE (CS 54), the unit can be switched on/off via BMS with BmsOnOff (CS 64). Remember that the capacity request from BMS (HR 331) is a REAL data type: the value is written to 2 registers in big endian not swapped mode. Register Hd07 (CS 48) can be used to select the database type (FALSE: 32bit, TRUE: 16bit).

7.1 Coil Status

Index	Size	Acronym	Data Type	Min Value	Max Value	R/W	Init Value	UoM	Description
)	1	U001	BOOL	Turue	Turue	R/W	FALSE		U001 - User pump 1 reset hour counters
	1	U004	BOOL			R/W	FALSE		U004 - User pump 2 reset hour counters
	1	U010	BOOL			R/W	FALSE		U010 - Enable set point compensation (0=Disabled, 1=Enabled)
	1	U017	BOOL			R/W	FALSE		U017 - Enable scheduler (0=Disabled, 1=Enabled)
	1	U022	BOOL			R/W	FALSE		U022 - Type of scheduling (0=Switch OFF, 1=Change set point)
	1	U034	BOOL			R/W	FALSE		U034 - Cool/heat changeover type (0=keypad, 1=Dln)
	1	U036	BOOL			R/W	FALSE		U036 - Startup control probe (0=Return, 1=Delivery)
	1	U038	BOOL			R/W	TRUE		U038 - Run control probe (0=Return, 1=Delivery)
	1	U057	BOOL			R/W	FALSE		U057 - Remote alarm input logic (0=N.C., 1=N.O.)
	1	U058	BOOL			R/W	TRUE		U058 - Cool/Heat input logic (0=N.O., 1=N.C.)
0	1	U059	BOOL			R/W	TRUE		U059 - Remote unit ON/OFF input logic (0=N.O., 1=N.C.)
1	1	U060	BOOL			R/W	FALSE		U060 - User pump flow input logic (0=N.C., 1=N.O.)
2	1	U061	BOOL			R/W	FALSE		U061 - User pump overload input logic (0=N.C., 1=N.O.)
3	1	U062	BOOL			R/W	TRUE		U062 - 2nd set point input logic (0=N.O., 1=N.C.)
4	1	U063	BOOL			R/W	FALSE		U063 - User pump output logic (0=N.O., 1=N.C.)
5	1	U064	BOOL			R/W	FALSE		U064 - Global alarm relay output logic (0=N.C., 1=N.O.)
5	1	U065	BOOL			R/W	FALSE		U065 - Free-Cooling valve output logic (0=N.O., 1=N.C.)
7	1	U066	BOOL			R/W	FALSE		U066 - Frost heater output logic (0=N.O., 1=N.C.)
8	1	U067	BOOL		-	R/W	FALSE		U067 - Alarm relay configuration (0=Control alarms, 1=All alarms)
9	1	U068	BOOL	-	-	R/W	FALSE	-	U068 - Enable Free-Cooling (0=Disabled, 1=Enabled)
0	1	E000	BOOL	-	-	R/W	FALSE	-	E000 - ExV circ.1 enable manual mode
1	1	E002	BOOL			R/W	FALSE		E002 - ExV circ.2 enable manual mode
2	1	Hd06	BOOL			R/W	FALSE		Hd06 - Enable capacity request from BMS (0=Disabled, 1=Enabled)
3	1	C001	BOOL			R/W	FALSE		C001 - Comp.1 circ.1 reset hour counters
4	1	C004	BOOL	-		R/W	FALSE FALSE		C004 - Comp.2 circ.1 reset hour counters
5	1	C007		_	_	R/W			C007 - Comp.1 circ.2 reset hour counters
6 7	1	C010 C034	BOOL	-	_	R/W	FALSE FALSE		C010 - Comp.2 circ.2 reset hour counters
0	1	C034	BOOL	_	_	R/W R/W	FALSE		C034 - High press. switch input logic (0=N.C., 1=N.O.)
8	1	C036	BOOL	_	_	R/W	FALSE		C035 - Comp. overload input logic (0=N.C., 1=N.O.)
9	1	C044	BOOL	_	_	R/W	FALSE		C036 - Comp. output logic (0=N.O., 1=N.C.) C044 - Enable circuit destabilisation (0=Disabled, 1=Enabled)
1	1	S001	BOOL			R/W	FALSE		S001 - Source pump 1 reset hour counters
3	1	S009	BOOL			R/W	FALSE		S009 - Source fan 1 circ.1 reset hour counters
4	1	S013	BOOL			R/W	FALSE		S013 - Source fan 1 circ.2 reset hour counters
5	1	S020	BOOL			R/W	FALSE		S020 - Enable low noise (0=Disabled, 1=Enabled)
7	1	S043	BOOL			R/W	FALSE		S043 - Enable sliding defrost (0=Disabled, 1=Enabled)
8	1	S055	BOOL			R/W	FALSE		S055 - Comp. behavior in post-defrost phase
	l'	3033	DOOL			10 **	II/\LJL		(0=Comp. is OFF, 1=Comp. is switched ON)
9	1	S061	BOOL			R/W	FALSE		Solition Solition
0	1	S062	BOOL			R/W	FALSE		S062 - Source pump output logic (0=N.O., 1=N.C.)
1	1	S063	BOOL			R/W	FALSE		S063 - Reverse valve output logic (0=N.O., 1=N.C.)
2	1	S064	BOOL	_		R/W	FALSE		S064 - Source flow type (0=Independent, 1=Common)
<u>~</u> 4	1	S065	BOOL	_		R/W	FALSE		S065 - Source fan type (0=Inverter, 1=ON/OFF)
5	1	rStr	BOOL			R/W	FALSE		rStr - Restore application to Carel settings (0=Disabled, 1=Enabled)
6	1	S068	BOOL			R/W	FALSE		S068 - Source type (0=Air, 1=Water)
.7	1	UoM	BOOL			R/W	FALSE		UoM - Unit of measure used for Display 2-Row and BMS,
•	Ι΄		DOOL				1,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		not for Applica (0=°C/bar, 1=°F/PSI)
8	1	Hd07	BOOL	 	+	R/W	FALSE	-	Hd07 - BMS port database type (0= 32bit, 1= 16bit)
<u>o </u>	1	F027	BOOL	1		R/W	FALSE	1	F027 - Compressor with capacity control
0	1	Hc13	BOOL	1	_	R/W	TRUE		Hc13 - Enable buzzer (0=Disabled, 1=Enabled)
2	1	Ha02	BOOL	1	_	R/W	FALSE	1	Ha02 - Set controller internal clock (0=No set, 1=Set)
3	1	Hd03	BOOL			R/W	TRUE		#N/D
4	1	UnSt	BOOL		_	R/W	FALSE	1	UnSt - Unit ON/OFF command from keypad (0=OFF 1=ON)
5	1	ModE	BOOL			R/W	FALSE		ModE - Cool/Heat mode from keypad (0=Cool, 1=Heat)
5	1	RES	BOOL			R/W	FALSE		RES - Reset active alarms from BMS net (0=NO, 1=Reset)
<u> </u>	1	DevRotReg Comp1Circ1	BOOL			R/W	III		Reguest comp.1 circ.1 by DeviceRotation
8	1	DevRotReg Comp2Circ1	BOOL			R/W	+		Reguest comp.2 circ.1 by DeviceRotation
9	1	ClrH	BOOL			R/W	FALSE		CIrH - Delete alarms log (0=No, 1=Yes)
0	1	UnitOn Slv	BOOL			R/W	II / NESE		Unit ON/OFF status (0=OFF, 1=ON) sent to Secondary board
1	1	UsrPmp2_On_Slv	BOOL			R/W	1		Command to manage user pump 2 (Secondary board)
2	1	AFreezeHeat Slv	BOOL			R/W			Command to manage user pump 2 (Secondary Board) Command to manage the frost heater (Secondary board)
i3	1	Hd05	BOOL			R/W	FALSE		Hd05 - Enable unit ON/OFF command by BMS net
_	l'	1.005	DOOL				11/1636		(0=Disabled, 1=Enabled)
		BmsOnOff	BOOL		-	R/W	+	-	Unit On/Off command from BMS (0=OFF, 1=ON)

94 | Supervisor table µchiller +0300053EN rel. 2.5 - 03.10.2024



Index	Size	Acronym	Data Type	Min Value	Max Value	R/W	Init Value	UoM	Description
65	1	HeatCool Slv	BOOL			R/W			Unit in cooling mode sent to secondary board (0=Heating, 1=Cooling)
66	1	P016	BOOL			R/W	FALSE		P016 - Oil equalisation solenoid valve circ.1 output logic (0=NC, 1=NO)
67	1	P017	BOOL			R/W	TRUE		P017 - Enable oil equalisation function (0=OFF, 1=ON)
68	1	P018	BOOL			R/W	FALSE		P018 - Enable oil recovery function (0=OFF, 1=ON)
69	1	P034	BOOL			R/W	FALSE		P034 - Enable cranckcase heater (0=OFF, 1=ON)
70	1	Al_SrsUnit_StopSlv	BOOL			R/W			Main sends Serious alarm to stop Secondary
71	1	CompCfg_BLDC.En_Vapor- Injection	BOOL			R/W	FALSE		#N/D
72	1	SlaveTyp_OnOff	BOOL			R/W	FALSE		Secondary type (0=Secondary connected to CORE-1 with Rotation, 1= Secondary connected to CORE-0 with EasyRot for ON/OFF)
73	1	ManInstDef PWRP	BOOL			R/W			Request default installation of Power+ circ.1
74	1	MC UnitTyp	BOOL			R/W	FALSE		MC unit(0= NO, 1= YES)
75	1	En_uC2SE	BOOL			R/W	FALSE		#N/D
76	1	C051	BOOL			R/W	FALSE		C051 - Low press. switch input logic (0=N.C., 1=N.O.)
77	1	F003	BOOL			R/W	FALSE		F003 - Evaporator number uC2SE (0=1, 1=2)
78	1	F020	BOOL			R/W	TRUE		F020 - Remote compressor command input logic (0=N.C., 1=N.O.)
79	1	F007	BOOL			R/W	FALSE		F007 - S4 probe fitted on source exchanger [uCH2SE] (0= NO, 1=YES: in CH read cond., in HP read evap.)
80	1	U078	BOOL			R/W	FALSE		U078 - Enable burst function (0=Disabled, 1=Enabled)
81	1	F016	BOOL			R/W	FALSE		F016 - Heaters active during defrost (0=OFF, 1=ON)
82	1	F017	BOOL			R/W	FALSE		F017 - User fan device activation mode (0=Always ON, 1=ON by control)
83	1	UsrHeater1	BOOL			R/W	FALSE		UsrHeater1 - User heater 1 status
84	1	F011	BOOL			R/W	FALSE		F011 - Heater output logic (0=N.O., 1=N.C.)
85	1	F023	BOOL			R/W	FALSE		F023 - Correspondence D.I. to D.O. compressors (for MC units only) (0=FALSE, 1=TRUE)
87	1	UsrFanON	BOOL			R/W	FALSE		UsrFanON - User fan ON
88	1	FC Agree	BOOL			R/W			Free cooling condition exists (0=FC not possible; 1=FC possible)
89	1	En SrcRetTempPrb	BOOL			R/W	FALSE		En SrcRetTempPrb - Connected source return temperature probe
90	1	WaitOtherDevCirc1_Smar- tOpnExV	BOOL			R/W			0
91	1	LowNoiseActive	BOOL			R/W	FALSE		Low noise function active
92	1	S073	BOOL			R/W	FALSE		S073 - Compressor status at defrost in (0 : Minimum speed, 1: OFF)
93	1	U082	BOOL			R/W	FALSE		U082 - Frost measurement type (0=ON EVAP., 1=ON WATER)
94	1	F028	BOOL			R/W	FALSE		F028 - Air heating: Control temp. probe for user heaters (0=ROOM, 1=DELIVERY)
95	1	AFreezeHeatUsr	BOOL			R/W			User frost heater status
97	1	AFreezeHeatSrc	BOOL			R/W			Source frost heater status
96	1	S066	BOOL			R/W	TRUE		S066 - Source water flow type (0=Independent, 1=Common)
118	1	C052	BOOL			R/W	FALSE		C052 - Compressor with capacity control: output logic (0=NC, 1=NO)
121	1	U093	BOOL			R/W	FALSE		U093 - Flow alarm management
133	1	En CompAC	BOOL			R/W	FALSE		Compressor AC enabled
134	1	En_COmpAC_Single	BOOL			R/W	FALSE		Compressor AC enabled as single comp in circuit
135	1	En CompAC Tandem	BOOL			R/W	FALSE		Compressor AC enabled as tandem

Tab. 7.a

7.2 Holding Register

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
0	2	Ha00	DATE_			R/W	0		Ha00 - New date and time to set on the controller's internal clock
			AND_TIME						
2	1	U000	UINT(0999)			R/W	99	HOUR	U000 - User pump 1 maintenance hour threshold (x100)
3	1	U002	UINT(02)			R/W	0		U002 - User pump 1/fan manual mode (0=AUTO, 1=OFF, 2=ON)
4	1	U003	UINT(0999)			R/W	0	HOUR	U003 - User pump 2 maintenance hour threshold (x100)
5	1	U005	UINT(02)			R/W	0		U005 - User pump 2 manual mode (0=AUTO, 1=OFF, 2=ON)
6	1	U083	USINT(03)			R/W	0		U083 - Automatic changeover type
7	2	U006	REAL			R/W	5	CELSIUS	U006 - Cool set point low limit
9	2	U007	REAL			R/W	20	CELSIUS	U007 - Cool set point high limit
11	2	U008	REAL			R/W	30	CELSIUS	U008 - Heat set point low limit
13	2	U009	REAL			R/W	45	CELSIUS	U009 - Heat set point high limit
15	2	U011	REAL			R/W	25	CELSIUS	U011 - Start temp. for cool set point compensation
17	2	U012	REAL			R/W	10	CELSIUS	U012 - End temp. for cool set point compensation
19	2	U013	REAL			R/W	5	DELTA-	U013 - Max compensation for cool set point
								KELVIN	' '
21	2	U014	REAL			R/W	5	CELSIUS	U014 - Start temp. for heat set point compensation
23	2	U015	REAL			R/W	-10	CELSIUS	U015 - Outside temp. diff. for heat set point compensation
25	2	U016	REAL			R/W	5	DELTA-	U016 - Max compensation for heat set point
								KELVIN	' '
27	1	U018	UINT			R/W	0	HOUR	Time band hours
28	1	U019	UINT			R/W	0	MINUTE	Time band minutes
29	1	U020	UINT			R/W	0	HOUR	Time band hours
30	1	U021	UINT			R/W	0	MINUTE	Time band minutes
31	2	U023	REAL			R/W	10	CELSIUS	U023 - 2nd cool set point
33	2	U024	REAL			R/W	35	CELSIUS	U024 - 2nd heat set point
35	1	U025	USINT(02)			R/W	0		U025 - Analogue set point input type (0=0-5V, 1=0-10V,
			, ,						2=4-20mA)
36	1	F008	UINT(0999)			R/W	10	SECOND	F008 - Antifrezee alarm delay
37	2	U026	REAL			R/W	5	CELSIUS	U026 - Remote set point min value
39	2	U027	REAL			R/W	35	CELSIUS	U027 - Remote set point max value
41	1	S023	UINT			R/W	0	HOUR	Time band hours
42	1	S024	UINT			R/W	0	MINUTE	Time band minutes
43	2	U028	REAL			R/W	0	DELTAKELVIN	U028 - Remote set point offset
48	1	E046	UINT	0	35	R/W	1		E046 - ExV valve type for EVD EVO (1=CAREL EXV,)
49	2	U031	REAL			R/W	10	DELTAKELVIN	U031 - High water temp. set point offset
51	1	U032	USINT(099)			R/W	15	MINUTE	U032 - High water temp. startup delay
52	1	U033	UINT(0999)			R/W	180	SECOND	U033 - High water temp.run delay
53	1	U035	UINT(0999)			R/W	1	MINUTE	U035 - Changeover delay time

µchiller +0300053EN rel. 2.5 - 03.10.2024 Supervisor table 95





Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
54	1	U037	UINT(0999)			R/W	180	SECOND	U037 - Delay time between Startup PID and Run PID
55	2	U039	REAL			R/W	8.3		U039 - Startup PID Kp
57	1	U040	UINT(0999)			R/W	180	SECOND	U040 - Startup PID Ti
58	1	U041	UINT(099)			R/W	0	SECOND	U041 - Startup PID Td
59	2	U042	REAL			R/W	10		U042 - Run PID Kp
61	1	U043	UINT(0999)			R/W	120	SECOND	U043 - Run PID Ti
52	1	U044	UINT(099)			R/W	0	SECOND	U044 - Run PID Td
53	1	U045	UINT(0999)			R/W	10	SECOND	U045 - User pump flow alarm startup delay
54	1	U046	UINT(099)			R/W	3	SECOND	U046 - User pump flow alarm run delay
65	1	U047	UINT(0999)			R/W	30	SECOND	U047 - Comp. ON delay after user pump ON
66	1	U048	UINT(0999)			R/W	180	SECOND	U048 - User pump delay OFF from comp. OFF
67	1	U049	UINT(0999)			R/W	5	HOUR	U049 - User pump rotation time
68	2	U050	REAL			R/W	-0.8	CELSIUS	U050 - User frost alarm threshold
70	2	U051	REAL			R/W	30	DELTAKELVIN	U051 - User frost alarm differential
72	1	U052	UINT(0999)			R/W	30	SECOND	U052 - User frost alarm delay time at 1K below threshold
73 75	2	U053	REAL			R/W	4	CELSIUS	U053 - Frost (with unit OFF) set point
	2	U054	REAL			R/W	2	DELTA- KELVIN	U054 - Frost (with unit OFF) differential
78	1	DFr	USINT(03)			R/W	0		DFr - Force manual defrost (0= None, 1= Force defrost on circ. 1, 2= Force defrost on circ. 2, 3= Force defrost on all circuits)
79	2	U055	REAL			R/W	0	DELTA- KELVIN	U055 - Probe offset for return water temp. from user
83	2	U056	REAL	1		R/W	0	DELTA-KELVIN	U056 - Probe offset for delivery water temp. to user
85	2	U069	REAL	1		R/W	3	DELTA-KELVIN	U069 - Delta temp. to activate Free Cooling
87	2	U070	REAL	1		R/W	1.5	DELTA-KELVIN	U070 - Free-Cooling ON/OFF hysteresis
89	2	U071	REAL	1		R/W	8	DELTA-KELVIN	U071 - Delta temp. Free-Cooling design (to reach unit nominal capacity)
91	2	U072	REAL	1		R/W	5	CELSIUS	U072 - Free Cooling limit threshold (used to close FC valve: because FC
		1		1		1	1		gives water with very low temp.)
93	2	U073	REAL	1		R/W	3	DELTA-KELVIN	U073 - Free-Cooling limit differential
95	1	U074	USINT(02)	1		R/W	0	1	U074 - Free-Cooling type (0=Air, 1=Remote air coil, 2=Water)
96	1	U075	USINT(02)	1		R/W	2	1	U075 - Frost type (0=Heater, 1=Pump, 2=Heater-Pump)
97	1	U076	USINT(12)	1.		R/W	1	1	U076 - User pump number
98	1	U077	USINT	0	2	R/W	0		U077 - Unit type (0=CH, 1=HP, 2=CH/HP, 3=MC CH, 4=MC CH/HP, 5=A/A
									CH, 6=A/A CH/HP, 7=W/W CH/HP with water reverse)
99	1	E001	UINT(065535)			R/W	0	STEPS	E001 - ExV circ.1 manual mode steps
100	1	E003	UINT(065535)			R/W	0	STEPS	E003 - ExV circ.2 manual mode steps
101	2	E004	REAL			R/W	6	DELTAKELVIN	E004 - ExV SH set point in cool
103	2	E005	REAL			R/W	15		E005 - ExV SH control Kp in cool
105	2	E006	REAL			R/W	150	SECOND	E006 - ExV SH control Ti in cool
107	2	E007	REAL			R/W	1	SECOND	E007 - ExV SH control Td in cool
109	2	E008	REAL			R/W	6	DELTAKELVIN	E008 - ExV SH set point in heat
111	2	E009	REAL			R/W	15		E009 - ExV SH control Kp in heat
113	2	E010	REAL			R/W	150	SECOND	E010 - ExV SH control Ti in heat
115	2	E011	REAL			R/W	1	SECOND	E011 - ExV SH control Td in heat
117	2	E012	REAL			R/W	1	DELTAKELVIN	E012 - ExV low SH threshold in cool
119	2	E013	REAL			R/W	10	SECOND	E013 - ExV low SH Ti in cool
121	2	E014	REAL			R/W	1	DELTAKELVIN	E014 - ExV low SH threshold in heat
123	2	E015	REAL			R/W	10	SECOND	E015 - ExV low SH Ti in heat
125	2	E016	REAL			R/W	-5	CELSIUS	E016 - ExV LOP control threshold in cool
127	2	E017	REAL			R/W	5	SECOND	E017 - ExV LOP control Ti in cool
129	2	E018	REAL			R/W	-50	CELSIUS	E018 - ExV LOP control threshold in heat
131	2	E019	REAL			R/W	5	SECOND	E019 - EEV LOP control Ti in heat
133	2	E020	REAL			R/W	30	CELSIUS	E020 - ExV MOP control threshold in cool
135	2	E021	REAL			R/W	15	SECOND	E021 - ExV MOP control Ti in cool
137	2	E022	REAL			R/W	20	CELSIUS	E022 - ExV MOP control threshold in heat
139	2	E023	REAL 10000			R/W	15	SECOND	E023 - ExV MOP control Ti in heat
141	1	E024	UINT(018000)	1		R/W	300	SECOND	E024 - ExV low SH alarm delay time
142	1	E025	UINT(018000)	1	-	R/W	300	SECOND	E025 - ExV LOP alarm delay time
143	1	E026	UINT(018000)	1	-	R/W	300	SECOND	E026 - ExV MOP alarm delay time
144	1	E032	UINT(0100)	1		R/W	100	PERCENT	E032 - ExV startup valve opening % (capacity ratio EVAP / EEV) in cool
145	1	E033	UINT(0100)	1	_	R/W	100	PERCENT	E033 - ExV startup valve opening % (capacity ratio EVAP / EEV) in heat
146	1	E034	UINT(018000)	1		R/W	6	SECOND	E034 - ExV control delay after pre-positioning
147	1	Hd00	USINT(1247)	1	_	R/W	4	-	Hd00 - BMS port serial address Hd01 - BMS port baud rate (3=9600, 4=19200, 5=38400, 6=57600,
148	1	Hd01	USINT(37)			R/W			7=115200)
149	1	Hd02	USINT(05)			R/W	1	LIQUID	Hd02 - BMS port network settings (0=8-NONE-1, 1=8-NONE-2, 2=8-EVEN-1, 3=8-EVEN-2, 4=8-ODD-1, 5=8-ODD-2)
153	1	C000	UINT(0999)	1	-	R/W	99	HOUR	C000 - Comp.1 circ.1 maintenance hour threshold (x100)
154	1	C002	USINT(02)	1	-	R/W	0	110110	C002 - Comp.1 circ.1 manual mode (0=AUTO, 1=OFF, 2=ON)
155	1	C003	UINT(0999)	1		R/W	99	HOUR	C003 - Comp.2 circ.1 maintenance hour threshold (x100)
156	1	C005	USINT(02)	1		R/W	0	110112	C005 - Comp.2 circ.1 manual mode (0=AUTO, 1=OFF, 2=ON)
157	1	C006	UINT(0999)	1		R/W	99	HOUR	C006 - Comp.1 circ.2 maintenance hour threshold (x100)
158	1	C008	USINT(02)	1		R/W	0	LIOLIS	C008 - Comp.1 circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
159	1	C009	UINT(0999)	1	-	R/W	99	HOUR	C009 - Comp.2 circ.2 maintenance hour threshold (x100)
160	1	C011	USINT(02)	1		R/W	0	CECCNIC	C011 - Comp.2 circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
162	1	C012	UINT(0999)	1	-	R/W	180	SECOND	C012 - Comp. min On time
163	1	C013	UINT(0999)	1		R/W	60	SECOND	C013 - Comp. min Off time
164	1	C014	UINT(0999)	1		R/W	360	SECOND	C014 - Min time between On of same comp.
165	1	C015	UINT(5999)	1		R/W	30	SECOND	C015 - Comp. load up time
166	1	C016	UINT(5999)	1		R/W	10	SECOND	C016 - Comp. load down time
67	1	S021	UINT	1		R/W	0	HOUR	Time band hours
168	1	C020	UINT(5999)	1		R/W	720	MINUTE	C020 - Circuit destabilisation max time with one or more comp. OFF
169	1	C021	USINT(01)	1		R/W	0		C021 - Circuit capacity distribution (0= Grouped, 1= Equalised)
70	2	C022	REAL			R/W	0	DELTAKELVIN	C022 - Discharge temp. probe offset for circ.1
172	2	C023	REAL			R/W	0	DELTAKELVIN	C023 - Suction temp. probe offset for circ.1
174	2	C024	REAL			R/W	0	DELTAKELVIN	C024 - Discharge temp. probe offset for circ.2
176	2	C025	REAL			R/W	0	DELTAKELVIN	C025 - Suction temp. probe offset for circ.2
178	2	C026	REAL			R/W	0	BAR	C026 - Discharge press. probe offset for circ.1
		C027	REAL			R/W	0	BAR	C027 - Suction press. probe offset for circ.1

96 Supervisor table µchiller +0300053EN rel. 2.5 - 03.10.2024



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
182	2	C028	REAL			R/W	0	DELTAKELVIN	C028 - Cond. temp. probe offset for circ.1
184	2	C029	REAL			R/W	0	DELTAKELVIN	C029 - Evap. temp. probe offset for circ.1
186	2	C030	REAL			R/W	0	BAR	C030 - Discharge press. probe offset for circ.2
188	2	C031	REAL			R/W	0	BAR	C031 - Suction press. probe offset for circ.2
190	2	C032	REAL			R/W	0	DELTAKELVIN	C032 - Cond. temp. probe offset for circ.2
192	2	C033	REAL			R/W	0	DELTAKELVIN	C033 - Evap. temp. probe offset for circ.2
194	1	C037	USINT(01)			R/W	0		C037 - Suction press. probe type (0=05V, 1=420mA)
195	2	C038	REAL			R/W	0	BAR	C038 - Suction press. probe min value
197	2	C039	REAL			R/W	17.3	BAR	C039 - Suction press. probe max value
199	1	C040	USINT(01)			R/W	0		C040 - Discharge press. probe type (0=05V, 1=420mA)
200	2	C041	REAL			R/W	0	BAR	C041 - Discharge press. probe min value
202	2	C042	REAL			R/W	45	BAR	C042 - Discharge press. probe max value
204	1	C043	USINT(01)			R/W	1	DATE	C043 - Discharge temp. probe type (0=NTC, 1=NTC-HT)
206	1	C046	USINT(12)			R/W	1		C046 - Number of circuit in the unit
207	1	C040	USINT	2	5	R/W	2		CO47 - Type of compressors used (0=1 ON/OFF, 1=2 ON/OFF, 2=BLDC, 3=BLDC + ON/OFF, 4=AC Compressor,
			Lighter						5=AC Compressor + ON/OFF)
208	1	C048	USINT(12)			R/W	1		C048 - Compressor rotation type (1=FIFO, 2=TIME)
209	1	S000	UINT(0999)			R/W	99	HOUR	S000 - Source pump 1 maintenance hour threshold (x100)
210	1	S002	UINT(02)			R/W	0		S002 - Source pump 1 manual mode (0=AUTO, 1=OFF, 2=ON)
212	1	S022	UINT			R/W	0	MINUTE	Time band minutes
213	1	S072	USINT(02)			R/W	0		S072 - Source pump activation (0=always on, 1=on with compressor, 2=modulate on discharge)
214	1	S008	UINT(0999)			R/W	99	HOUR	S008 - Source fan 1 circ.1 maintenance hour threshold (x100)
215	1	S010	USINT(02)			R/W	0		S010 - Source fan ON/OFFcirc.1 manual mode (0=AUTO, 1=OFF, 2=ON)
216	1	S011	USINT(0101)			R/W	0	PERCENT	S011 - Source fan inverter circ.1 manual mode (0=AUTO, 1=0%, 2=1%,
	Ι.	155	33(0101)				-		101=100%)
217	1	S012	UINT(0999)	1		R/W	0	HOUR	S012 - Source fan 1 circ.2 maintenance hour threshold (x100)
218	1	S014	USINT(02)	1		R/W	0		S014 - Source fan ON/OFF circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
219	1	S014 S015	USINT(02)	+	<u> </u>	R/W	0	PERCENT	S015 - Source fan inverter circ.2 manual mode (0=AUTO, 1=OFF, 2=ON)
Z17	[]	داندا	UUI)			LV VV	10	I. FUCEIAI	
220	2	C016	DEAL	+	+	D AA	-	CELCUIC	101=100%) C016 Source for town threshold for sold slimates
220	2	S016	REAL	1		R/W	-5	CELSIUS	S016 - Source fan temp. threshold for cold climates
222	2	S017	REAL			R/W	10	PERCENT	S017 - Source fan min speed for cold climates
224	2	S018	REAL			R/W	50	PERCENT	S018 - Source fan speed up speed for cold climates
226	1	S019	UINT(0300)			R/W	5	SECOND	S019 - Source fan speed up time for cold climates
229	2	Sprb	REAL			R	0	CELSIUS	SPrb - Source external air temperature
231	2	S025	REAL			R/W	45	CELSIUS	S025 - Low noise source fan set point in cooling
233	1	S026	UINT(0999)			R/W	30	SECOND	S026 - Comp. ON delay after source pump ON
234	1	S027	UINT(0999)			R/W	10	SECOND	S027 - Source pump delay OFF from comp. OFF
235	2	S028	REAL			R/W	30	CELSIUS	S028 - Source device cool set point
237	2	S029	REAL			R/W	10	CELSIUS	S029 - Source device heat set point
239	1	U081	USINT(07)			R/W	0	CLLSIOS	U081 - Pressure alarm reset configuration
240	1	Hc71	USINT(03)			R/W	1		Hc71 - Analogue output 1 config. (0= Not used, 1=Source pump - Source
240		111071	031141 (03)			IV VV			fan on/off; 2=Source fan mod, 3=Free cooling valve, 4=AC compressor circuit 1)
241	2	C021	DEAL			D 44/	45	CELCILIC	
241	2	S031	REAL		-	R/W	45	CELSIUS	S031 - Source fan cool set point at startup
243	1	S032	UINT(0999)			R/W	240	SECOND	S032 - Source fan cool startup delay
244	1	Hc81	USINT(02)			R/W	1		Hc81 - Analogue output 1 secondary config. (0= Not used, 1=Source fan on/off, 2=Source fan mod, 3=AC compressor circuit 2)
245	1	Hc72	USINT(03)			R/W	1		Hc72 - Analogue output 2 config. (0= Not used, 1=Source pump - Source fan on/off, 2=Source fan mod, 3=Free cooling valve, 4=AC compressor circuit 1)
246	2	S034	REAL			R/W	15	DELTAKELVIN	S034 - Source device cool differential
248	2	S035	REAL			R/W	5	DELTAKELVIN	S035 - Source device heat differential
250	2	S036	REAL			R/W	20	PERCENT	S036 - Source fan inverter min speed
252	2	S037	REAL			R/W	80	PERCENT	S037 - Source fan inverter max speed
254	2	S039	REAL			R/W	-1	CELSIUS	S039 - Defrost start threshold
256	2	S040	REAL			R/W	1	CELSIUS	S040 - Defrost start threshold reset
258	1	S041	UINT(0999)			R/W	30	MINUTE	S041 - Defrost start delay
259	2	S042	REAL			R/W	52	CELSIUS	S042 - Defrost end threshold
	1	S042 S044		+	_	_	20		S044 - Defrost end threshold S044 - Defrost begin delay before actuating the 4 way valve
261	1		UINT(0999)	-	-	R/W		SECOND	
262	1	S045	UINT(0999)	+	_	R/W	30	SECOND	S045 - Defrost ending delay after actuating the 4 way valve
263	1	S046	UINT(099)	+	-	R/W	11	MINUTE	S046 - Defrost min duration
264	11	S047	UINT(099)	1		R/W	5	MINUTE	S047 - Defrost max duration
265	1	S048	UINT(0999)			R/W	90	SECOND	S048 - Dripping duration
266	1	S049	UINT(0999)			R/W	30	SECOND	S049 - Post dripping duration
267	1	S050	UINT(0999)			R/W	20	MINUTE	S050 - Delay between defrosts
268	1	C049	UINT(0999)			R/W	90	SECOND	C049 - Low pressure alarm start delay
269	1	C050	UINT(0999)			R/W	15	SECOND	C050 - Low pressure alarm run delay
270	1	F024	USINT			R/W	0		F024 - Heater 1 manual mode (0=AUTO, 1=OFF, 2=ON)
271	1	F025	USINT			R/W	0		F025 - Heater 2 manual mode (0=AUTO, 1=OFF, 2=ON)
272	1	S053	USINT(02)			R/W	0		S053 - Defrost synchronisation type (0=Independent, 1=Separate, 2=Simultaneous)
274	2	S054	REAL	+	_	R/W	3	BAR	S054 - Delta press. to reverse the 4 way valve
274 276	1	Hc82	USINT(02)			R/W	1	BAR	Hc82 - Analogue output 2 secondary config. (0= Not used, 1=Source fan
277	1	Al_CfgLim-	USINT			R/W	9		on/off, 2=Source fan mod, 3=AC compressor circuit 2) Al_CfgLimMax_Grp3 - Lim max probe group 3
		Max_Grp3							
278	1	S056	UINT(20999)			R/W	20	SECOND	S056 - Duration of smart start function
279	2	S057	REAL			R/W	-0.8	CELSIUS	S057 - Source frost alarm threshold
281	2	S058	REAL	1		R/W	30	DELTAKELVIN	S058 - Source frost alarm differential
283	1	S059	UINT(0999)	1		R/W	30	SECOND	S059 - Source frost alarm delay time at 1K below threshold
284	2	S060	REAL	1		R/W	0	DELTAKELVIN	S060 - Source external air temperature offset
	1		USINT	0	4		1	DLLIANELVIN	
286		Hc00	IVIICU		4	R/W			Hc00 - Analogue input 3 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Return water temp. from user,
	-		1			-		1	8= Delivery water temp. to user)
287	1	Al_CfgLimMax_	USINT			R/W	11		Al_CfgLimMax_Grp3 - Lim max probe group 3 secondary
207		Grp3_Slv		1	i .	1	1	1	

μchiller +0300053EN rel. 2.5 - 03.10.2024 Supervisor table 97





Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
288	1	Hc03	USINT	0	2	R/W	0		Hc03 - Analogue input 6 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp.,3= Remote set point, 4= Discharge temp., 5= Condensing, temp., 6= Suction temp., 7= Evaporation temp., 8= Condensing press., 9= Evaporating press., 10= Return water temp. from user, 11= Delivery water temp. to user, 12= Capacity request from AIN)
289	1	Hc04	USINT	0	1	R/W	0		Hc04 - Analogue input 7 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7= Return water temp. from user,
290	1	Hc05	USINT	0	1	R/W	0		8= Delivery water temp. to user) Hc05 - Analogue input 6 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Remote set point, 4= Discharge temp., 5= Condensing. temp., 6= Suction temp., 7= Evaporation temp., 8= Condensing press., 9= Evaporating press., 10= Common delivery temp., 11= Delivery water evap.2 temp., 12= Capacity request from AlN)
291	1	Hc06	USINT	0	6	R/W	1		Hc06 - Digital input 4 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
292	1	Нс07	USINT	0	6	R/W	5		Hc07 - Digital input 5 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/ Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
293	1	Hc08	USINT	0	6	R/W	4		Hc08 - Digital input 6 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/ Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
294	1	Hc09	USINT	0	5	R/W	0		Hc09 - Digital input 4 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
295	1	Hc10	USINT	0	5	R/W	0		HC10 - Digital input 5 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
296	1	Hc11	USINT	0	5	R/W	0		Hc11 - Digital input 6 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
297	1	Hc14	USINT			R/W	1		Hc14 - Digital input 1 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/ Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
298	1	Hc15	USINT			R/W	2		Hc15 - Digital input 2 config. (0=Not used, 1=User flow switch, 2=Comp.1 circ.1 overload, 3=Comp.2 circ.1 overload, 4=Remote ON/OFF, 5=Cool/ Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 1, 12=Remote cmd 2, 13=Source alarm)
299	1	Hc16	USINT			R/W	0		Hc16 - Digital input 1 config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
300	1	Hc17	USINT			R/W	0		Hc17 - Digital input config. on Secondary board (0=Not used, 1=User flow switch, 2=Comp.1 circ.2 overload, 3=Comp.2 circ.2 overload, 4=Remote ON/OFF, 5=Cool/Heat, 6=2nd set point, 7=Remote alarm, 8=User pump 1 overload, 9=LP pressure switch, 10=User pump 2 overload, 11=Remote cmd 3, 12=Remote cmd 4, 13=Source alarm)
301	1	Al_CfgLim- Max_Grp2	USINT			R/W	8		Al_CfgLimMax_Grp2 - Lim max probe group 2
302	1	He00	UINT(09999)			R/W	1		He00 - USER profile password
303	1	He01 He02	UINT(09999) UINT(09999)			R/W	1234		He01 - SERVICE profile password He02 - MANUFACTURER profile password
305	2	Hd04	STRING[4]			R/W R/W	0		Hd04 - NFC password
307	2	SEtC	REAL			R/W	7	CELSIUS	SEtC - Cool set point
309	1	SEtH Al_CfgLim- Max_Grp1	USINT USINT			R/W R/W	8	CELSIUS	SEtH - Heat set point AI_CfgLimMax_Grp1 - Lim max probe group 1
324	2	C017	REAL			R/W	65	CELSIUS	C017 - Threshold of max high pressure (HP)
326	2	C018	REAL			R/W	0.2	BAR	C018 - Threshold of min low pressure (LP)
328 331	2	E047 BMS_PwrReq	USINT(02) REAL	+		R/W	0	PERCENT	E047 - Type of ExV driver (0= Disabled, 1= EVD embedded, 2=EVD EVO) Capacity request using BMS net
335	2	P000	REAL	+		R/W	-25	CELSIUS	P000 - Evaporating min temp. custom envelope limit
337	2	P001	REAL			R/W	70	CELSIUS	P001 - Condensing max temp. custom envelope limit
339	1	P002	UINT(0999)			R/W	15	SECOND	P002 - Prevent min duration
340 341	1	P003 P004	UINT(0999) UINT(0999)	-		R/W R/W	120	SECOND SECOND	P003 - Out of envelope alarm delay time P004 - Low pressure difference alarm delay
341	2	P004 P005	REAL	+		R/W	35	RPS	P004 - Low pressure difference afarm defay P005 - Circuit destabilisation min BLDC speed threshold
344	2	P006	REAL			R/W	35	PERCENT	P006 - Oil recovery min request for activation
346 348	1	P007 P008	REAL UINT(0999)			R/W R/W	35 15	RPS MINUTE	P007 - Oil recovery min comp. speed for activation P008 - Oil recovery time before activation in which the comp. can run at
		1	1	1	1	1	1	1	min speed
349	1	P009	UINT(0999)		_	R/W	3	MINUTE	P009 - Oil recovery duration in which the comp. speed is forced

98 Supervisor table 40300053EN rel. 2.5 - 03.10.2024



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
352	1	P011	UINT(0999)			R/W	30	SECOND	P011- Oil equalisation startup time for solenoid valve on comp. starts
353	1	P012	UINT(0999)			R/W	3	SECOND	P012 - Oil equalisation solenoid valve open time
354	1	P013	UINT(0999)			R/W	1	MINUTE	P013 - Oil equalisation solenoid valve min off time
355	1	P014	UINT(0999)			R/W	20	MINUTE	P014 - Oil equalisation solenoid valve max off time
356	1	P015	UINT(0999)			R/W	20	MINUTE	P015 - Oil equalisation max time for management
357	1	P019	USINT(0101)			R/W	0	PERCENT	P019 - Compressor 1 circuit 1 manual mode (0=AUTO, 1=0%,
		1							101=100%)
358	1	P020	USINT(0101)			R/W	0	PERCENT	P020 - Compressor 1 circuit 2 manual mode (0=AUTO, 1=0%,
330	'	1 020	031141(0101)			10,44	ľ	LINCLINI	101=100%)
250	2	P021	REAL			R/W	0	KILOPASCAL	P021 - Max permitted Delta P to start up
359	1								
361	1	P022	UINT			R/W	0	SECOND	P022 - Max EVD pre-opening time to equalise pressure
362	1	P023	UINT			R/W	0	PERCENT	P023 - EVD pre-opening in case of pre-start to equalise pressure
363	2	P024	REAL			R/W	0	RPS	P024 - Start-up speed
365	2	P025	REAL			R/W	0	RPS	P025 - Max custom speed (rps)
367	2	P026	REAL			R/W	0	RPS	P026 - Min custom speed (rps)
369	2	P027	REAL			R/W	45	PERCENT	P027 - BLDC speed request threshold % to call on
371	2	P028	REAL			R/W	90	PERCENT	P028 - BLDC speed threshold to call on fixed speed compressor
373	2	P029	REAL			R/W	30	PERCENT	P029 - BLDC speed threshold to switch off fixed speed compres.
375	2	P030	REAL			R/W	0		P030 - Skip frequency: set 1 [010]
377	2	P031	REAL			R/W	0		P031 - Skip frequency: band 1 [011]
379	1	P032	UINT			R/W	0		P032 - Enable motor overtemperature alarm (PTC) (0=OFF, 1=ON) [027]
380	1	P033	UINT			R/W	0		P033 - Motor overtemperature alarm delay [028]
	2	S051	REAL			R/W	80	RPS	S051 - BLDC defrost speed
382	2					_			
384	2	S052	REAL			R/W	40	RPS	S052 - BLDC cycle reverse speed in defrost
386	40	Ha01	STRING	1	-	R/W	0	0.51.51.11.11	New time zone to set for the controller's internal clock
705	2	E048	REAL			R/W	1	DELTAKELVIN	E048 - RESERVED, Delta evap. temp. (Smart opening ExV)
707	2	E049	REAL			R/W	0.2	DELTAKELVIN	E049 - RESERVED, Delta suction temp. (Smart opening ExV)
709	1	U079	UINT(115)			R/W	3	MINUTE	U079 - Burst funct. time for unit pump on
710	1	U080	UINT(399)			R/W	15	MINUTE	U080 - Burst funct. time for unit pump off
711	2	F009	REAL			R/W	14	CELSIUS	F009 - Delivery air min. temp. threshold
713	2	F010	REAL			R/W	4	DELTAKELVIN	F010 - Delivery limit proportional band
715	1	ID CfgLim-	USINT			R/W	0		ID_CfgLimMax_Slv - Lim digital input
715	'	Max_Slv	OSIIVI			10,44	ľ		ID_cigcimiviax_siv Eim digital input
716	2	F012	REAL			R/W	1	DELTAKELVIN	F012
	2					_	0.5		F012 - Heater offset in cool
718	2	F013	REAL			R/W	0.5	DELTAKELVIN	F013 - Heater differential in cool
720	2	F014	REAL			R/W	3	DELTAKELVIN	F014 - Heater offset in heat
722	2	F015	REAL			R/W	1	DELTAKELVIN	F015 - Heater differential in heat
724	2	F018	REAL			R/W	40	CELSIUS	F018 - Hot-Start set point
726	2	F019	REAL			R/W	5	DELTAKELVIN	F019 - Hot-Keep differential
728	2	F021	REAL			R/W	0	DELTAKELVIN	F021 - Common delivery user water temp. probe offset
730	2	F022	REAL			R/W	0	DELTAKELVIN	F022 - Evap.2 frost temp. probe offset
732	2	S070	REAL			R/W	0	DELTAKELVIN	S070 - Cond.1 frost temp. probe offset
734	2	S071	REAL			R/W	0	DELTAKELVIN	S071 - Cond.2 frost temp. probe offset
736	2	S069	REAL			R/W	0	CELSIUS	S069 - Temperature set point for fan-defrost function
	_								(0=Function disabled)
738	2	UsrDlvWTemp_	REAL					CELSIUS	Delivery water temperature to user received from Main
750	_	FromMst	TILLY IL					CEESIOS	(Single evaporator)
740	1	Hc51	USINT(011)			R/W	1		Hc51 - Digital output 1 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp.
740	1	I ICJ I	031141 (011)			IN/ VV	'		2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater,
									7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm,
7.44		11.50	LIGINIT(O. 4.4)			D 444			11=User pump 2
741	1	Hc52	USINT(011)			R/W	'		Hc52 - Digital output 2 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp.
									2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater,
									7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm,
									11=User pump 2
742	1	Hc53	USINT(011)			R/W	1		Hc53 - Digital output 3 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp.
									2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater,
									7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm,
									11=User pump 2
743	1	Hc54	USINT(011)			R/W	1		Hc54 - Digital output 4 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp.
			, ,						2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater,
									7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm,
									11=User pump 2
744	1	Hc55	USINT(011)	+		R/W	1		Hc55 - Digital output 5 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp.
, , , , ,	Ι'	1.1033	35111(011)			1.7 **	[2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater,
	1								7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm,
	1								
745		11.56	LIGINIT(O. 4.4)	-		D 444			11=User pump 2
745	[1	Hc56	USINT(011)			R/W	[1		Hc56 - Digital output 6 config. (0= Not used, 1=Comp. 1 circ. 1, 2=Comp.
	1								2 circ. 1, 3=User heater step 1, 4=User pump 1, 5=Source, 6=Frost heater,
	1								7=4way valve, 8=Oil equal. valve, 9=Freecooling valve, 10=General alarm,
									11=User pump 2
746	1	Hc61	USINT(08)			R/W	1		Hc61 - Digital output 1 secondary config. (0= Not used, 1=Comp. 1 circ.
	1								2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source,
				\perp			\perp		6=Frost heater, 7=4way valve, 8=Oil equal. valve
747	1	Hc62	USINT(08)			R/W	1		Hc62 - Digital output 2 secondary config. (0= Not used, 1=Comp. 1 circ.
7 - 17									2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source,
7 - 7 /									6=Frost heater, 7=4way valve, 8=Oil equal. valve
7 77						R/W	1		Hc63 - Digital output 3 secondary config. (0= Not used, 1=Comp. 1 circ.
	1	Hc63	USINT(0 &)				I.		2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source,
748	1	Hc63	USINT(08)				1		
	1	Hc63	USINT(08)			.,,,,			
748	1						1		6=Frost heater, 7=4way valve, 8=Oil equal. valve
	1	Hc63	USINT(08) USINT(08)			R/W	1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ.
748	1						1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source,
748	1	Hc64	USINT(08)			R/W	1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
748	1 1						1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc65 - Digital output 5 secondary config. (0= Not used, 1=Comp. 1 circ.
748	1 1	Hc64	USINT(08)			R/W	1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc65 - Digital output 5 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source,
748 749 750	1 1 1	Hc64	USINT(08) USINT(08)			R/W	1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc65 - Digital output 5 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve
748	1 1 1 1	Hc64	USINT(08)			R/W	1 1 1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc65 - Digital output 5 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source,
748 749 750	1 1 1 1	Hc64 Hc65	USINT(08) USINT(08)			R/W	1 1		6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc64 - Digital output 4 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve Hc65 - Digital output 5 secondary config. (0= Not used, 1=Comp. 1 circ. 2, 2=Comp. 2 circ. 2, 3=User heater step 2, 4=User pump 2, 5=Source, 6=Frost heater, 7=4way valve, 8=Oil equal. valve

μchiller +0300053EN rel. 2.5 - 03.10.2024 Supervisor table 99





Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description
752	1	Hc31	USINT			R/W	0		Hc31 - Analogue input 1 config. (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5=
									Suction temp., 6= Evaporation temp., 7= Return water temp. from user, 8= Delivery water temp. to user)
753	1	Hc32	USINT			R/W	0		Hc32 - Analogue input 2 config. (0= Not used, 1= Source water delivery
									temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5=
									Suction temp., 6= Evaporation temp., 7= Return water temp. from user,
754	1	Hc34	USINT			R/W	0		8= Delivery water temp. to user) Hc34 - Analogue input 4 config. (0= Not used, 1= Source water delivery
		1							temp., 2= Outside temp., 3= Discharge temp., 4= Condensing. temp.,
									5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8=
									Evaporating press., 9= Return water temp. from user, 10= Delivery water temp. to user)
755	1	Hc35	USINT			R/W	0		Hc35 - Analogue input 5 config. (0= Not used, 1= Source water delivery
									temp., 2= Outside temp., 3= Discharge temp., 4= Condensing. temp.,
									5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporating press., 9= Return water temp. from user, 10= Delivery water
									temp. to user)
756	1	Hc41	USINT			R/W	0		Hc41 - Analogue input 1 config. on Secondary board (0= Not used, 1=
									Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common
									delivery temp., 8= Delivery water evap.2 temp.)
757	1	Hc42	USINT			R/W	0		Hc42 - Analogue input 2 config. on Secondary board (0= Not used, 1=
									Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common
									delivery temp., 8= Delivery water evap.2 temp.)
758	1	Hc43	USINT			R/W	0		Hc43 - Analogue input 3 config. on Secondary board (0= Not used, 1=
									Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common
									delivery temp., 8= Delivery water evap.2 temp.)
759	1	Hc44	USINT			R/W	0		Hc44 - Analogue input 4 config. on Secondary board (0= Not used, 1= Source
									water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing. temp., 5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporation temp., 8= Evapora
									orating press., 9= Common delivery temp., 10= Delivery water evap.2 temp.)
760	1	Hc45	USINT			R/W	0		Hc45 - Analogue input 5 config. on Secondary board (0= Not used, 1= Source
									water delivery temp., 2= Outside temp., 3= Discharge temp., 4= Condensing. temp., 5= Suction temp., 6= Evaporation temp., 7= Condensing press., 8= Evaporation temp., 8= Evapora
									orating press., 9= Common delivery temp., 10= Delivery water evap.2 temp.)
761	1	Hc47	USINT			R/W	0		Hc47 - Analogue input 7 config. on Secondary board (0= Not used, 1= Source water delivery temp., 2= Outside temp., 3= Discharge temp., 4=
									Condensing temp., 5= Suction temp., 6= Evaporation temp., 7=Common
									delivery temp., 8= Delivery water evap.2 temp.)
762	1	Al_CfgLimMax_ Grp2_Slv	USINT			R/W	10		Al_CfgLimMax_Grp2 - Lim max probe group 2 secondary
763	1	Al_CfgLimMax_ Grp1_Slv	USINT			R/W	8		Al_CfgLimMax_Grp1 - Lim max probe group 1 secondary
764	1	UnitTyp_Lim-	USINT			R/W	4		UnitTyp_LimMax - Lim max unit type
765	2	Max U084	REAL			R/W	23	CELSIUS	U084 - Automatic changever threshold (type 1) (°C)
767	2	SEtU	REAL			R/W	23	CELSIUS	SEtU - Automatic changeover set point (type 2,3) (°C)
769	1	U088	USINT(02)			R/W	0	051 01110	U088 - Frost heater position
770 772	2	F026 U085	REAL			R/W R/W	-40 2	CELSIUS DELTAKELVIN	F026 - Compressor cut-off by outside temperature U085 - Automatic changeover deadband (°C)
774	2	U086	REAL			R/W	5	CELSIUS	U086 - Automatic changeover deadband (C)
776	2	U087	REAL			R/W	20	CELSIUS	U087 - Automatic changeover set point high limit (°C)
818 820	2	U090 U091	REAL REAL			R/W R/W	0	PERCENT PERCENT	U090 - Analogue capacity request offset U091 - Analogue capacity request min value
822	2	U092	REAL			R/W	100	PERCENT	U092 - Analogue capacity request max value
817	1	U089	USINT(02)			R/W	0		U089 - Analogue capacity request input type (0=0-5V, 1=0-10V, 2=4-
788	1	Hc90	USINT	0	8	R/W	0		20mA) HC90 - Display value selection - Large area
789	1	Hc91	USINT	0	8	R/W	0		Hc91 - Display value selection - Small area
791	1	E073	UINT	0	99	R/W	0	DELTA- KELVIN	E072 - High superheat alarm activation threshold
815 824	1	E072 C081	REAL USINT	0	99.9	R/W R/W	100	MINUTE %	E072 - High superheat alarm activation threshold C081 – Maximum limit of request sent to AC compressor
825	1	C082	USINT	0	100	R/W	30	%	C082 – Minimum limit of request sent to AC compressor
826	2	PwrReq_AC_Slv	REAL	0	100	R/W		%	Request sent to 2nd circuit via analogue output

Tab. 7.b

7.3 Input Register

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description	
0	2	HuP1	UDINT			R	0	HOUR	HuP1 - User pump 1 operating hours	
2	2	HuP2	UDINT			R	0	HOUR	HuP2 - User pump 2 operating hours	
1	2	H1C1	UDINT			R	0	HOUR	H1C1 - Comp.1 circ.1 operating hours	
5	2	H1C2	UDINT			R	0	HOUR	H1C2 - Comp.2 circ.1 operating hours	
3	2	H2C1	UDINT			R	0	HOUR	H2C1 - Comp.1 circ.2 operating hours	
10	2	H2C2	UDINT			R	0	HOUR	H2C2 - Comp.2 circ.2 operating hours	
2	2	dSt1	REAL			R	0	CELSIUS	dSt1 - Discharge temp. probe on circ.1	
4	2	Sct1	REAL			R	0	CELSIUS	Sct1 - Suction temp. on circ.1	
6	2	dSt2	REAL			R	0	CELSIUS	dSt2- Discharge temp. probe on circ.2	
8	2	Sct2	REAL			R	0	CELSIUS	Sct2 - Suction temp. on circ.2	
.0	2	dSP1	REAL			R	0	BAR	dSP1 - Discharge press, probe on circ.1	
72	2	ScP1	REAL			R	0	BAR	ScP1 - Suction press on circ 1	

100 Supervisor table µchiller +0300053EN rel. 2.5 - 03.10.2024



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description	
24	2	Cnd1	REAL			R	0	CELSIUS	Cnd1 - Cond. temp. probe (or press. probe converted value) on circ.1	
26	2	EuP1	REAL			R	0	CELSIUS	EuP1 - Evap. temp. probe (or press. probe converted value) on circ.1	
28	2	dSP2	REAL			R	0	BAR	dSP2 - Discharge press. probe on circ.2	
30	2	ScP2	REAL			R	0	BAR	ScP2 - Suction press, on circ.2	
32	2	Cnd2	REAL	_		R	0	CELSIUS	Cnd2 - Cond. temp. probe (or press. probe converted value) on circ.2	
24	2									
34	-	EuP2	REAL			R	0	CELSIUS	EuP2 - Evap. temp. probe (or press. probe converted value) on circ.2	
36	2	HSP1	UDINT			R	0	HOUR	HSP1 - Source pump 1 operating hours	
38	1	C045	UINT			R	0		C045 - Refrigerant type (3=R407C, 4=R410a, 6=R290, 10=R744, 22=R3	
39	1	UnitCompT- yp LimMax	USINT			R	0		UnitCompTyp_LimMax - Limit max of UnitCompTyp variable	
40	2	HFn1	UDINT			R	0	HOUR	UEn1 Course fan 1 sirs 1 aparating haurs	
	-						-		HFn1 - Source fan 1 circ.1 operating hours	
12	2	HFn2	UDINT			R	0	HOUR	HFn2 - Source fan 1 circ.2 operating hours	
16	2	SEtA	REAL			R	0	CELSIUS	SEtA - Actual set point used by temp. control	
8	2	SSH1	REAL			R	0	DELTAKELVIN	SSH1 - Suction superheat on circ.1	
0	1	Opn1	UINT			R	0	PERCENT	Opn1 - EEV position on circ.1	
1	2	SSH2	REAL			R	0	DELTAKELVIN	SSH2 - Suction superheat on circ.2	
3	1	Opn2	UINT		1	R	0	PERCENT	Opn2 - EEV position on circ.2	
i4	2									
14	2	rUSr	REAL			R	0	CELSIUS	rUSr - Return water temp. from user	
6	2	dUSr	REAL			R	0	CELSIUS	dUSr - Delivery water temperature to user	
8	1	PwrReq_MC	USINT			R	0	PERCENT	PwrReq_MC - MC capacity request	
9	1	PwrOut_MC	USINT			R	0	PERCENT	PwrOut_MC - MC output capacity	
5	2	Fan1Reg	REAL			R	0	PERCENT	Fan1Reg - Inverter request source fan circ.1	
7	2	Fan2Reg	REAL			R	0	PERCENT	Fan2Reg - Inverter request source fan circ.2	
9	2	WoutMixVlv	REAL	_		R	10	I LINCLINI	Water output mixing valve (from tank)	
	1									
1		UnitStatus	USINT			R	0		UnitStatus - Unit status (0=OFF from remote DI, 1=OFF from keypad,	
							1		2=OFF from scheduler, 3=OFF from BMS, 4=OFF from CH/HP changed	
									ver mode, 5=OFF from alarm, 6=Unit defrosting, 7=Unit ON, 8=Manua	
							1		mode)	
רי	2	Comm1C:111 D	LIDINT		_	D	0	LIOLID		
2	2	Comp1Circ1HrsR				R	0	HOUR	Comp1Circ1HrsR - Comp.1 circ.1 operating hours (partial)	
74	2	Comp2Circ1HrsR				R	0	HOUR	Comp2Circ1HrsR - Comp.2 circ.1 operating hours (partial)	
'6	2	SrcFan1Circ1HrsF	UDINT			R	0	HOUR	SrcFan1Circ1HrsR - Source fan 1 circ.1 operating hours (partial)	
'8	1	FrcCompDesta-	UINT			R			Destabilisation status for circ.1 (0=No comp. forcing request, 1=Checl	
-		bil_Circ1					1		forcing is possible , 2=Enable to force comp. 3=Wait status)	
79	1		LUNIT			D				
9	l l	FrcCompDesta-	UINT			R			Destabilisation status for circ.2 (0=No comp. forcing request , 1=Checl	
		bil_Circ2							forcing is possible, 2=Enable to force comp., 3=Wait status)	
0	2	rSPt	REAL			R/W	0	CELSIUS	rSPt - Remote set point	
2	2	PwrReg	REAL			R	0	PERCENT	PwrReg - Power request	
96	2	SrcSetP Circ1	REAL			R	0	CELSIUS	SrcSetP_Circ1 - Source fan circ.1 set point	
8	2	SrcSetP_Circ2	REAL	_		R	0	CELSIUS		
	-			_					SrcSetP_Circ2 - Source fan circ.2 set point	
00	2	rps1	REAL			R	0	RPS	rps1 - Actual rotor speed coming from inverter	
02	2	Mc1	REAL			R	0	AMPERE	Mc1 - Current motor current [A]	
04	2	MP1	REAL			R	0	KILOWATT	MP1 - Current motor consumption [kW]	
106	2	Drt1	REAL			R	0	CELSIUS	Drt1 - Current drive temperature [°C]	
108	1	AlHs1 1	UINT			R	0		PSD circuit 1: the last alarm log	
109	1	AlHs2 1	UINT			R	0			
				_	-				PSD circuit 1: the last-but-1st alarm log	
110	1	AlHs3_1	UINT			R	0		PSD circuit 1: the last-but-2nd alarm log	
111	1	AlHs4_1	UINT			R	0		PSD circuit 1: the last-but-3rd alarm log	
112	2	DxPwrReg	REAL			R		PERCENT	Direct expansion capacity request	
114	1	MotTyp	UINT			R	0	LITCLITT	MotTyp - BLDC circ.1 Carel Database ID	
115	1	EnvelopeZone_	USINT			R	0		EnvelopeZone_Circ1 - Envelope zone circ.1	
113			USIIVI			I.V.	10		Envelopezone_Circ i - Envelope zone circ.i	
		Circ1								
16	2	EnvPnt_X1	REAL			R	0	CELSIUS	EnvPnt_X1 - Envelope point	
18	2	EnvPnt_Y1	REAL			R	0	CELSIUS	EnvPnt_Y1 - Envelope point	
20	2	EnvPnt_X2	REAL			R	0	CELSIUS	EnvPnt_X2 - Envelope point	
22	2	EnvPnt_Y2	REAL			R	0	CELSIUS	EnvPnt_Y2 - Envelope point	
								CELSIUS		
24	2	EnvPnt_X3	REAL	+	1	R	0		EnvPnt_X3 - Envelope point	
26	2	EnvPnt_Y3	REAL		-	R	0	CELSIUS	EnvPnt_Y3 - Envelope point	
28	2	EnvPnt_X4	REAL			R	0	CELSIUS	EnvPnt_X4 - Envelope point	
30	2	EnvPnt_Y4	REAL			R	0	CELSIUS	EnvPnt_Y4 - Envelope point	
32	2	EnvPnt_X5	REAL			R	0	CELSIUS	EnvPnt_X5 - Envelope point	
34	2	EnvPnt_Y5	REAL			R	0	CELSIUS	EnvPnt_Y5 - Envelope point	
	2			_	+					
36	2	EnvPnt_X6	REAL	_	-	R	0	CELSIUS	EnvPnt_X6 - Envelope point	
38	2	EnvPnt_Y6	REAL			R	0	CELSIUS	EnvPnt_Y6 - Envelope point	
40	2	EnvPnt_X7	REAL			R	0	CELSIUS	EnvPnt_X7 - Envelope point	
42	2	EnvPnt_Y7	REAL			R	0	CELSIUS	EnvPnt_Y7 - Envelope point	
44	2	EnvPnt X8	REAL			R	0	CELSIUS	EnvPnt_X8 - Envelope point	
46	2	EnvPnt Y8	REAL			R	0	CELSIUS	EnvPnt_Y8 - Envelope point	
48	1			_	1			CLLUIUU		
48	[1	EnvelopeZone_	USINT			R	0		EnvelopeZone_Circ2 - Envelope zone circ.2	
		Circ2								
149	2	EnvPnt2_X1	REAL			R	0	CELSIUS	EnvPnt2_X1 - Envelope point	
51	2	EnvPnt2_Y1	REAL			R	0	CELSIUS	EnvPnt2_Y1 - Envelope point	
	2	EnvPnt2_X2	REAL			R	0	CELSIUS	EnvPnt2_X2 - Envelope point	
					_		0			
53	12	EnvPnt2_Y2	REAL	_	1	R	-	CELSIUS	EnvPnt2_Y2 - Envelope point	
53 55	2	F. D.: 2 1/2	REAL	1		R	0	CELSIUS	EnvPnt2_X3 - Envelope point	
53 55 57	2	EnvPnt2_X3		_		I D	0	CELSIUS	EnvPnt2_Y3 - Envelope point	
53 55 57	2 2 2	EnvPnt2_X3 EnvPnt2_Y3	REAL			R	U	ICELSIO3	[LINITITZ_13 - LINEIOPE POINT	
53 55 57 59	2 2 2	EnvPnt2_Y3	REAL						EnvPnt2 X4- Envelope point	
53 55 57 59 61	2	EnvPnt2_Y3 EnvPnt2_X4	REAL REAL			R	0	CELSIUS	EnvPnt2 X4- Envelope point	
53 55 57 59 61 63	2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4	REAL REAL REAL			R R	0	CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point	
53 55 57 59 61 63 65	2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5	REAL REAL REAL REAL			R R R	0 0	CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point	
53 55 57 59 61 63 65	2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5 EnvPnt2_Y5	REAL REAL REAL REAL REAL			R R R	0 0 0 0	CELSIUS CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point	
53 55 57 59 61 63 65	2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5	REAL REAL REAL REAL			R R R	0 0	CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point	
53 55 57 59 61 63 65 67	2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5 EnvPnt2_Y5 EnvPnt2_X6	REAL REAL REAL REAL REAL REAL			R R R R	0 0 0 0	CELSIUS CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y6 - Envelope point	
53 55 57 59 61 63 65 67 69 71	2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_Y6	REAL REAL REAL REAL REAL REAL REAL			R R R R R	0 0 0 0 0	CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y6 - Envelope point	
53 55 57 59 61 63 65 67 69 71	2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_X6 EnvPnt2_Y6 EnvPnt2_X7	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R	0 0 0 0 0 0	CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_X7 - Envelope point	
53 55 57 59 61 63 65 67 69 71 73	2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_Y6 EnvPnt2_Y7 EnvPnt2_X7 EnvPnt2_X7	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R	0 0 0 0 0 0	CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point	
53 55 57 59 61 63 65 67 69 71 73 75	2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_X6 EnvPnt2_X6 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_X7	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R	0 0 0 0 0 0 0	CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_X8 - Envelope point	
53 55 57 59 61 63 65 67 69 71 73 75	2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_X5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_Y6 EnvPnt2_Y7 EnvPnt2_X7 EnvPnt2_X7	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R	0 0 0 0 0 0	CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point	
53 55 57 59 61 63 65 67 69 71 73 75	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_X6 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_Y7 EnvPnt2_X8 EnvPnt2_Y8	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R	0 0 0 0 0 0 0 0	CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_Y8 - Envelope point	
53 55 57 59 61 63 65 67 69 71 73 75 77	2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_X5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_Y6 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_X8 EnvPnt2_Y8 rps2	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R	0 0 0 0 0 0 0 0 0	CELSIUS	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point FnyPnt2_Y8 - Envelope FnyPn	
53 55 57 59 61 63 65 67 69 71 73 75 77 79 81 83	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y8 EnvPnt2_Y8 EnvPnt2_Y8 EnvPnt2_Y8 EnvPnt2_Y8 Mc2	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R R	0 0 0 0 0 0 0 0 0 0 0	CELSIUS AMPERE	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point InvPnt2_Y8 - Envelope Pnt2_Y8 - Envelope Pnt2	
53 55 57 59 61 63 65 67 69 71 73 75 77 79 81 83	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_Y7 EnvPnt2_X7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y8 EnvPnt2_Y8 FnyPnt2_Y8	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R R R	0 0 0 0 0 0 0 0 0 0 0 0	CELSIUS RPS AMPERE kW	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point InvPnt2_Y8 - Envelope point InvPnt2_Y9 - Envelope point Inv	
53 55 57 59 61 63 65 67 69 71 73 75 77 79 81 83 85	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_X7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y8 EnvPnt2_Y8 EnvPnt2_Y8 EnvPnt2_Y8 EnvPnt2_Y8 Mc2	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R R	0 0 0 0 0 0 0 0 0 0 0 0 0	CELSIUS AMPERE	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y8 - Envelope point Env	
53 55 57 59 61 63 65 67 69 71 73 75 77 79 81 83 85 87	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_Y6 EnvPnt2_Y7 EnvPnt2_X7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y8 EnvPnt2_Y8 FnyPnt2_Y8	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R R R	0 0 0 0 0 0 0 0 0 0 0 0	CELSIUS RPS AMPERE kW	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_Y5 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X7 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_X8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point EnvPnt2_Y8 - Envelope point InvPnt2_Y8 - Envelope point InvPnt2_Y9 - Envelope point Inv	
53 55 57 59 61 63 65 67 71 73 75 77 79 81 83 85 87 89	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	EnvPnt2_Y3 EnvPnt2_X4 EnvPnt2_Y4 EnvPnt2_Y5 EnvPnt2_Y5 EnvPnt2_X6 EnvPnt2_X6 EnvPnt2_X7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y7 EnvPnt2_Y8 EnvPnt2_Y8 InvPnt2_Y8	REAL REAL REAL REAL REAL REAL REAL REAL			R R R R R R R R R R	0 0 0 0 0 0 0 0 0 0 0 0 0	CELSIUS RPS AMPERE kW	EnvPnt2_X4- Envelope point EnvPnt2_Y4 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_X5 - Envelope point EnvPnt2_X6 - Envelope point EnvPnt2_Y6 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y7 - Envelope point EnvPnt2_Y8 - Envelope point Env	

μchiller +0300053EN rel. 2.5 - 03.10.2024 Supervisor table 101





Index	Size	Acronym	DataType	Min Value	Max Value	R/W	Init Value	UoM	Description	
192	1	AlHs4_2	UINT			R	0		PSD circuit 2: the last-but-3rd alarm log	
193	1	MotTyp2	UINT			R	0		MotTyp2 - BLDC circ.2 Carel Database ID	
203	1	EEV_Protec-	EEV_Protection-			R	0		EEV_Protection_Circ1 - ExV protection status on circ.1 (1=NONE,	
		tion_Circ1	Status(15)						2=LOWSH, 3=LOP, 4=MOP, 5=HITCOND)	
204	1	EEV_Protec-	EEV_Protection-			R	0		EEV_Protection_Circ2 - ExV protection status on circ.2 (1=NONE,	
		tion_Circ2	Status(15)						2=LOWSH, 3=LOP, 4=MOP, 5=HITCOND)	
205	1	EEV_Reg_Circ1	INT			R	0		EEV_Reg_Circ1 - ExV control status on circ.1	
206	1	EEV_Reg_Circ2	INT			R	0		EEV_Reg_Circ2 - ExV control status on circ.2	
207	2	AFE2	REAL			R	0	CELSIUS	AFE2 - Evap.2 frost temp.	
209	2	cUSr	REAL			R	0	CELSIUS	User delivery common water temperature	
211	2	PwrRunCircs_	REAL			R	0	PERCENT	PwrRunCircs_Perc - Circuit capacity percentage by compressors ON	
		Perc								
213	2	AFC2	REAL			R	0	CELSIUS	AFC2 - Cond.2 frost temp	
215	2	AFE1	REAL			R	0	CELSIUS	AFE1 - Evap.1 frost temp.	
217	2	AFC1	REAL			R	0	CELSIUS	AFC1 - Cond.1 frost temp	
219	1	IOprbCfgWrn	UINT			R	0		IOcfgPrbWrn - I/O probe configuration warnings	
220	2	W_UsrTempReg- PID	REAL			R	0	CELSIUS	W_UsrTempRegPID - Water temperature value used by control	
226	1	DfrStatus Circ1	UINT						Defrost status of circ 1	
227	2	AIN_PwrReq_ Circ1	REAL			R	0	PERCENT	Capacity request using analogue input on circuit 1	
231	1	SWverEXP	UINT			R	0		Firmware B version on expansion board	
232	1	SWverMAIN	UINT			R	0		Firmware B version on main board	
233	1	PWRP ErrCode	UDINT	-	-	R	-	-	Power+ circuit 1 error code	
		Circ1								
234	1	PWRP ErrCode	UDINT	-	-	R	-	-	Power+ circuit 2 error code	
		Circ2							Torrest established	
235	2	PwrReg AC	REAL	-	-	R	-	-	Capacity request to AC compressor – Circ 1	
		Circ1							, , ,	
237	2	PwrReq_AC_	REAL	-	-	R	-	-	Capacity request to AC compressor – Circ 2	
237	2		REAL	-	-	R	-	-	Capacity request to AC compressor	

Tab. 7.c

7.4 Input Status

Index	Size	Acronym	DataType	Min Value	Max Value	R/W	InitValue	UoM	Description	
0	1	A01	BOOL			R	FALSE		Unit - Error in the number of retain memory writes	
1	1	A02	BOOL			R	FALSE		Unit - Error in retain memory writes	
2	1	A03	BOOL			R	FALSE		Unit - Remote alarm by digital input	
3	1	A04	BOOL			R	FALSE		Unit - Remote set point out of range alarm	
4	1	A05	BOOL			R	FALSE		Unit - User return water temperature probe broken or disconnected	
									alarm	
5	1	A06	BOOL			R	FALSE		Unit - User delivery water temperature probe broken or disconnect ed alarm	
c	1	A07	BOOL			R	FALSE		Unit - Tank temperature probe broken or disconnected alarm	
<u>6</u> 7	1	A08	BOOL			R	FALSE		Unit - User pump 1 overload	
	1									
3	1	A09	BOOL			R	FALSE		Unit - User pump 2 overload	
9	1	A10	BOOL			R	FALSE		Unit - Flow switch alarm, no flow present with user pump 1 active	
10	1	A11	BOOL			R	FALSE		Unit - Flow switch alarm, no flow present with user pump 2 active	
11	1	A12	BOOL			R	FALSE		Unit - User pump group alarm	
12	1	A13	BOOL			R	FALSE		Unit - User 1 pump maintenance	
13	1	A14	BOOL			R	FALSE		Unit - User 2 pump maintenance	
14	1	A15	BOOL			R	FALSE		Unit - High chilled water temperature	
15	1	A16	BOOL			R	FALSE		Unit - Source return water/air temperature probe broken or discon-	
									nected alarm	
16	1	A17	BOOL			R	FALSE		Unit - Source 1 pump maintenance	
17	1	A18	BOOL			R	FALSE		Unit - Free cooling fault	
18	1	A19	BOOL			R	FALSE		Circuit 1 - Discharge pressure probe broken or disconnected alarm	
19	1	A20	BOOL			R	FALSE		Circuit 1 - Condensing temperature probe broken or discon. alarm	
20	1	A21	BOOL			R	FALSE		Circuit 1 - Suction pressure probe broken or disconnected alarm	
21	1	A22	BOOL			R	FALSE		Circuit 1 - Evaporation temperature probe broken or discon. alarm	
22	1	A23	BOOL			R	FALSE		Circuit 1 - Discharge temperature probe broken or discon. alarm	
23	1	A24	BOOL			R	FALSE		Circuit 1 - Suction temperature probe broken or disconn. alarm	
24	1	A25	BOOL			R	FALSE		Circuit 1 - High pressure alarm from pressure switch	
25	1	A26	BOOL			R	FALSE		Circuit 1 - High pressure alarm from transducer	
26	1	A27	BOOL			R	FALSE		Circuit 1 - Low pressure alarm from transducer	
27 27	1	A28	BOOL			R	FALSE		Circuit 1 or unit - Frost evaporation temperature alarm	
2 <i>7</i> 28	1	A29	BOOL			R	FALSE		Circuit 1 - Low pressure alarm from pressure switch	
29 29	1	A30	BOOL			R	FALSE		Circuit 1 - Overload compressor 1	
30	1	A31	BOOL			R	FALSE		Circuit 1 - Overload compressor 2	
31	1	A32	BOOL			R	FALSE			
31 32	1						FALSE		Circuit 1 - Compressor 1 maintenance	
	1	A33	BOOL			R			Circuit 1 - Compressor 2 maintenance	
33	1	A34	BOOL			R	FALSE		Circuit 1 - Source fan 1 maintenance	
34	1	A35	BOOL			R	FALSE		Circuit 1 EVD - Low superheat (SH)	
35	1	A36	BOOL			R	FALSE		Circuit 1 EVD - Low evaporation pressure (LOP)	
36	1	A37	BOOL			R	FALSE		Circuit 1 EVD - Maximum evaporating pressure (MOP)	
37	1	A38	BOOL			R	FALSE		Circuit 1 EVD - Valve motor error	
38	1	A39	BOOL			R	FALSE		Circuit 1 EVD - Emergency closing	
39	1	A40	BOOL			R	FALSE		Circuit 1 EVD - Incomplete valve closing	
40	1	A41	BOOL			R	FALSE		Circuit 1 EVD - Offline	
41	1	A42	BOOL			R	FALSE		Circuit 1 Envelope - General alarm + Zone alarm	
12	1	A43	BOOL			R	FALSE		Circuit 1 BLDC - Delta pressure greater than the allowable at startur	
13	1	A44	BOOL			R	FALSE		Circuit 1 BLDC - Starting failure	
14	1	A45	BOOL			R	FALSE		Circuit 1 BLDC - Low differential pressure	
15	1	A46	BOOL			R	FALSE		Circuit 1 BLDC - High discharge gas temperature	
16	1	A47	BOOL			R	FALSE		Circuit 1 Inverter - Offline	

102 Supervisor table µchiller +0300053EN rel. 2.5 - 03.10.2024



Index	Size	Acronym	DataType	Min Value	Max Value	R/W	InitValue	UoM	Description
47	1	A48	BOOL			R	FALSE		Circuit 1 Inverter - General alarm + Error code
48	1	A49	BOOL			R	FALSE		Unit - Secondary board is offline
49	1	A50	BOOL			R	FALSE		Unit - Error in the number of retain memory writes on Secondary board
50	1	A51	BOOL			R	FALSE		Unit - Error in retain memory writes on Secondary board
51	1	A52	BOOL			R	FALSE		Circuit 2 - Discharge pressure probe broken or disconnected alarm
52	1	A53	BOOL			R	FALSE		Circuit 2 - Condensing temperature probe broken or disconnected
									alarm
53	1	A54	BOOL			R	FALSE		Circuit 2 - Suction pressure probe broken or disconnected alarm
54	1	A55	BOOL			R	FALSE		Circuit 2 - Evaporation temperature probe broken or disconnected alarm
55	1	A56	BOOL			R	FALSE		Circuit 2 - Discharge temperature probe broken or disconnected alarm
56	1	A57	BOOL	_	_	R	FALSE		Circuit 2 - Suction temperature probe broken or disconnected alarm
57	1	A58	BOOL		_	R	FALSE		Circuit 2 - Suction temperature probe proken or disconnected alarm Circuit 2 - High pressure alarm from pressure switch
	1								
58	1	A59	BOOL			R	FALSE		Circuit 2 - High pressure alarm from transducer
59	1	A60	BOOL	_	_	R	FALSE		Circuit 2 - Low pressure alarm from transducer
60	1	A61	BOOL		-	R	FALSE		Circuit 2 - Frost evaporation temperature alarm
61	1	A62	BOOL			R	FALSE		Circuit 2 - Low pressure alarm from pressure switch
52	1	A63	BOOL			R	FALSE		Circuit 2 - Overload compressor 1
53	1	A64	BOOL			R	FALSE		Circuit 2 - Overload compressor 2
54	1	A65	BOOL			R	FALSE		Circuit 2 - Compressor 1 maintenance
55	1	A66	BOOL			R	FALSE		Circuit 2 - Compressor 2 maintenance
56	1	A67	BOOL			R	FALSE		Circuit 2 - Source fan 1 maintenance
57	1	A68	BOOL			R	FALSE		Circuit 2 EVD - Low superheat (SH)
58	1	A69	BOOL			R	FALSE		Circuit 2 EVD - Low evaporation pressure (LOP)
59	1	A70	BOOL			R	FALSE		Circuit 2 EVD - Maximum evaporating pressure (MOP)
70	1	A71	BOOL			R	FALSE		Circuit 2 EVD - Valve motor error
71	1	A72	BOOL			R	FALSE		Circuit 2 EVD - Emergency closing
<u>'</u> 2	1	A73	BOOL			R	FALSE		Circuit 2 EVD - Incomplete valve closing
73	1	A74	BOOL			R	FALSE		Circuit 2 EVD - Offline
74	1	A75	BOOL			R	FALSE		Circuit 2 Evol - Offline Circuit 2 Envelope - General alarm + Zone alarm
75	1	A76	BOOL		1	R	FALSE	 	Circuit 2 Envelope - General alarm + Zone alarm Circuit 2 BLDC - Delta pressure greater than the allowable at startu
	1	A77			_	R			
76	1		BOOL	_	_		FALSE		Circuit 2 BLDC - Starting failure
77	1	A78	BOOL			R	FALSE		Circuit 2 BLDC - Low differential pressure
78	1	A79	BOOL			R	FALSE		Circuit 2 BLDC - High discharge gas temperature
79	1	A80	BOOL			R	FALSE		Circuit 2 Inverter - Offline
30	1	A81	BOOL			R	FALSE		Circuit 2 Inverter - General alarm + Error code
31	1	PrevAFreeze_C1	BOOL			R	FALSE		PrevAFreeze_C1 - Prevent request for frost condition active inside circ.1
32	1	PrevHP_C1	BOOL			R	FALSE		PrevHP_C1 - Prevent request for high pressure condition active
33	1	PrevAFreeze_C2	BOOL			R	FALSE		inside circ.1 PrevAFreeze_C2 - Prevent request for frost condition active inside
34	1	PrevHP_C2	BOOL			R	FALSE		circ.2 PrevHP_C2 - Prevent request for high pressure condition active
22	4		2001				FALCE		inside circ.2
92	1	Comp1Circ1_DevAlrm	BOOL			R	FALSE		Comp1Circ1_DevAlrm - Comp.1 circ.1 in alarm condition
93	1	Comp1Circ1_AbleToOn				R	FALSE		Comp.1 circ.1 enabled to start
94	1	Comp1Circ1_AbleToOff				R	FALSE		Comp.1 circ.1 enabled to stop
95	1	Comp1Circ1_FrcdOnByT				R	FALSE		Comp.1 circ.1 forced ON by timings (min comp. ON)
96	1	Comp1Circ1_FrcdOffByT	BOOL			R	FALSE		Comp1Circ1_FrcdOffByT - Comp.1 circ.1 forced OFF by timings (mir comp. OFF)
97	1	Comp2Circ1_DevAlrm	BOOL			R	FALSE		Comp2Circ1_DevAlrm - Comp.2 circ.1 in alarm condition
98	1	Comp2Circ1_AbleToOn	BOOL			R	FALSE		Comp.2 circ.1 enabled to start
99	1	Comp2Circ1_AbleToOff				R	FALSE		Comp.2 circ.1 enabled to stop
100	1	Comp2Circ1_FrcdOnByT				R	FALSE		Comp.2 circ.1 forced ON by timings (min comp. ON)
101	1	Comp2Circ1_FrcdOffByT				R	FALSE		Comp.2 circ.1 forced OFF by timings (min comp. OFF)
02	1	Comp1Circ1_On	BOOL			R	FALSE		Comp1Circ1_On - Comp.1 circ.1 status (0=OFF 1=ON)
103	1	Comp2Circ1_On	BOOL			R	FALSE		Comp2Circ1_On - Comp.2 circ.1 status (0=OFF, 1=ON)
104	1	Comp1Circ2_On	BOOL			R	FALSE		Comp1Circ2_On - Comp.1 circ.2 status (0=OFF, 1=ON)
105	1	Comp2Circ2 On	BOOL			R	FALSE		Comp2Circ2_On - Comp.? circ.2 status (0=OFF, 1=ON)
106	1	RelayAlrm	BOOL			R	FALSE		RelayAlrm - Global alarm relay
107	1	CoolHeat	BOOL			R	FALSE		CoolHeat - Unit in heating mode (0=Cooling, 1=Heating)
	1			-	_				
08	1	FC_Status	BOOL		_	R	FALSE		FC_Status - Free cooling valve status (0=OFF, 1=ON)
09	1	AFreezeHeat	BOOL		_	R	FALSE		Frost heater status
110	1	SchedOnOff	BOOL			R	FALSE		Unit ON/OFF command by scheduler (0=On, 1=Off)
111	[1	A83	BOOL			R	FALSE		Unit - User delivery water temp. probe common broken or discon-
12	1	A84	BOOL			R	FALSE		nected alarm Circuit 2 - User delivery water temp, probe broken or disconnected
13	1	A86	BOOL			R	FALSE		alarm Circuit 2 - Source delivery water temp. probe broken or disconnected
	1								alarm
114		A85	BOOL			R	FALSE		Circuit 1 - Source delivery water temp. probe broken or disconnect ed alarm
115	1	Comp1Circ1_FrcOffDev	BOOL			R	FALSE		Comp1Circ1_FrcOffDev - Force OFF comp.1 circ.1
116	1	Comp2Circ1_FrcOffDev	BOOL			R	FALSE		Comp2Circ1_FrcOffDev - Force OFF comp.2 circ.1
17	1	Comp1Circ2_FrcOffDev	BOOL			R	FALSE		Comp1Circ2_FrcOffDev - Force OFF comp.1 circ.2
18	1	Comp2Circ2_FrcOffDev	BOOL			R	FALSE		Comp2Circ2_FrcOffDev - Force OFF comp.2 circ.2
19	1	A87	BOOL			R	FALSE		EVD - Incompatible HW alarm
120	1	SrcFanCirc1_On	BOOL			R	FALSE		SrcFanCirc1_On - Source fan circ.1 status (0=OFF, 1=ON)
21	1	SrcPmp1_On	BOOL			R	FALSE		SrcPmp1_On - Source pump 1 status (0=OFF, 1=ON)
22	1	UsrPmp1_On	BOOL			R	FALSE		UsrPmp1_On - User pump 1 status
123	1	RevVlv_Circ1	BOOL			R	FALSE		RevVIv_Circ1 - Reversing valve for refr. circ.1 (0=Cooling, 1=Heating)
124	1	OilEquilly Circ1	POOL	-	_	D	EVICE		
124	11	OilEquVIv_Circ1	BOOL	+	+	R	FALSE	-	Oil equalisation solenoid valve circ.1
25	1	SrcFanCirc2_On	BOOL	-		R	FALSE		SrcFanCirc2_On - Source fan circ.2 status (0=OFF, 1=ON)
26	11	SrcPmp2_On	BOOL	-	-	R	FALSE	-	Source pump 2 on
27	1	UsrPmp2_On	BOOL			R	FALSE		UsrPmp2_On - User pump 2 status
28	1	RevVlv_Circ2	BOOL			R	FALSE		RevVIv_Circ2 - Reversing valve for refr. circ.2 (0=Cooling, 1=Heating
29	1	OilEquVlv_Circ2	BOOL			R	FALSE		Oil equalisation solenoid valve circ.2
30	1	HeatCool	BOOL			R	TRUE		HeatCool - Unit in cooling mode (0=Heating, 1=Cooling)
31	1	DfrRun_Circ1	BOOL			R	FALSE		Defrost is running on circ.1
132	1	DfrRun_Circ2	BOOL			R	FALSE		Defrost is running on circ.2
33	1	DfrFrcCompDfrP-	BOOL			R	FALSE		Force circ.1 comp. to defrost capacity
		wr_Circ1							i i
134	1	UnitOn	BOOL	1		R	FALSE		Unit ON/OFF status (0=OFF, 1=ON)

µchiller +0300053EN rel. 2.5 - 03.10.2024 Supervisor table 103





Index	Size	Acronym	DataType	Min Value	Max Value	R/W	InitValue	UoM	Description	
140	1	EVD_CanGo	BOOL			R	FALSE		Enable EVD EVO driver to control superheat	
141	1	ManPmpReqCirc1	BOOL			R	FALSE		Request user pump activation by manual-compressor control in circ.1	
42	1	CompsManCirc1	BOOL			R	FALSE		Manual status of comp. in circ.1	
43	1	FrcOn_Comp1Circ1_Oil-	BOOL			R	FALSE		Force ON comp.1 circ.1 to avoid oil migration	
44	1	Migr FrcOn_Comp2Circ1_Oil-	ROOL			R	FALSE		Force ON comp.2 circ.1 to avoid oil migration	
	'	Migr	IDOOL			11	ITALJE		Torce on comp.2 circ.1 to avoid on migration	
45	1	FrcOn_Comp1Circ2_Oil-	BOOL			R	FALSE		Force ON comp.1 circ.2 to avoid oil migration	
46	1	Migr FrcOn_Comp2Circ2_Oil-	DOOL			R	FALSE		Force ON comp.2 circ.1 to avoid oil migration	
40		Migr	BOOL			n	FALSE		Force ON Comp.2 circ. I to avoid on migration	
48	1	UsrFlw_Absent	BOOL			R	FALSE		UsrFlw_Absent - User pump flow absent (0=Flow OK, 1=Flow absent)	
49	1	En_DscgPPrb_Circ1	BOOL			R	FALSE		En_DscgTempPrb_Circ1 - Connected discharge temp. probe for	
50	1	En_DscgTempPrb_Circ1	BOOL			R	FALSE		circ.1 En_DscgTempPrb_Circ1 - Connected discharge temp. probe for	
	<u> </u>								circ.1	
51	1	En_OvldComp1Circ1_ Din	BOOL			R	FALSE		Enable comp.1 circ.1 overload input	
52	1	UnitCh	BOOL			R	FALSE		Unit is chiller	
53	1	UnitHp	BOOL			R	FALSE		Unit is heat pump	
54	1	SrcFan1Circ1Status	BOOL			R	FALSE		Source fan circ.1 status (0=OFF, 1=ON)	
55	1	SrcFan1Circ2Status	BOOL			R	FALSE		Source fan circ.2 status (0=OFF, 1=ON)	
56	1	RegTypPrb	BOOL			R	FALSE		Control probe (0=Return; 1=Delivery)	
57	1	En_SuctPPrb_Circ1	BOOL			R	FALSE		En_SuctPPrb_Circ1 - Connected suction press. probe for circ.1	
59	1	ACU_PANEL	BOOL			R	FALSE		ACU panel	
60	1	En Circ2	BOOL			R	FALSE		Enable circ.2	
61	i i	En_Comp2Circ1	BOOL			R	FALSE		Enable compr.2 circ.1	
62	1	En_Comp2Circ2	BOOL			R	FALSE		Enable compr.2 circ.2	
63	1	En_CompsOnOffCirc1	BOOL			R	FALSE		Enable comp. ON/OFF for circ.1	
64	1	En CompsOnOffCirc2	BOOL			R	FALSE		Enable comp. ON/OFF for circ.2	
65	1	En_CondTempPrb_Circ1				R	FALSE		Connected cond. temp. probe for circ.1	
56	1	En SuctTempPrb Circ1	BOOL			R	FALSE		En SuctTempPrb Circ1 - Connected suction temp, probe for circ	
67	1	UsrHeater2	BOOL			R	FALSE		UsrHeater2 - User heater 2 status	
58	1	Al_RegulationAlrms	BOOL			R	FALSE		Al_RegulationAlrms - Control alarms	
69	1	Al_MiscAlrms	BOOL			R	FALSE		Al_MiscAlrms - Miscellaneous alarms	
70	1	Al SrsCirc1	BOOL			R	FALSE		Al_SrsCirc1 - Serious alarm circ.1	
70 <u> </u>	1	Al_SrsCirc2	BOOL			R	FALSE		Al_SrsCirc2 - Serious alarm circ.2	
72	1	Al_SrsCircs	BOOL			R	FALSE		Al_SrsCircs - Serious alarm circ.2 Al_SrsCircs - Serious alarm circ.1 and circ.2	
72 73	1	RemCmdComp1Circ1	BOOL			R	FALSE		RemCmdComp1Circ1 - Remote comand comp.1 circ.1	
74	1	RemCmdComp2Circ1	BOOL			R	FALSE		RemCmdComp2Circ1 - Remote comand comp.1 circ.1	
75 75	1	RemCmdComp1Circ2	BOOL			R	FALSE		RemCmdComp1Circ2 - Remote comand comp.1 circ.2	
75 76	1	RemCmdComp2Circ2	BOOL			R	FALSE		RemCmdComp2Circ2 - Remote comand comp.1 circ.2	
78	1	En_RemCmdComp-	BOOL			R	FALSE		Enable remote command comp.1 circ.1 input	
79	1	1Circ1_Din En_RemCmdComp-	BOOL			R	FALSE		Enable remote command comp.2 circ.1 input	
		2Circ1_Din	200				-		· · ·	
80		En_UsrRetWTempPrb	BOOL			R	FALSE		En_UsrRetWTempPrb - Connected user return water temperature probe	
81	1	En_UsrDlvWTempPrb	BOOL			R	FALSE		En_UsrDlvWTempPrb - Connected user delivery water temperatu probe	
83	1	AFreezeHeatUsr Circ2	BOOL			R	FALSE		Circuit 2 user frost heater status	
90	1	Active2ndSetPDin	BOOL			R	FALSE		Second set point input	
91	1	CoolHeatDin	BOOL			R	FALSE		Cool/Heat input status (0=Cooling, 1=Heating)	
92	1	HiP Pstat Circ1	BOOL			R	FALSE		High pressure switch on circ.1	
93	11	OvldComp1Circ1	BOOL			R	FALSE		Comp.1 circ.1 overload	
94	1	OvldComp2Circ1	BOOL			R	FALSE		Comp.2 circ.1 overload	
95	1	RemAlrmDin	BOOL			R	FALSE		Remote alarm	
96	1	RemOnOffDin	BOOL			R	FALSE		Remote unit ON/OFF command from digital input (0= OFF, 1=ON)	
98	1	UsrPmp10vld	BOOL			R	FALSE		User pump 1 overload input logic	
99	1	UsrPmp2Ovld	BOOL			R	FALSE		User pump 2 overload input logic	
00	1	UnitChOnly	BOOL			R	FALSE		Unit is chiller only	
97	1	UnitWW	BOOL			R	FALSE		Unit is WW - FALSE: Unit is not WW, TRUE: Unit is WW	
O 1	1	UnitChHp	BOOL			R	FALSE		Unit is Chiller/Heat pump with reversal of refrigeration cycle	
	11	UnitHpOnly	BOOL			R	FALSE		Unit is heat pump only	
05	1	UnitChHp_NotAA	BOOL			R	FALSE		Unit is reverse-cycle but not AA	
05 02	1			1	1	R	FALSE		UnitChHp_WR - WW Chiller/Heat pump with reversal on water circuit	
105 102 103	1	UnitChHp_WR	BOOL						4WayValve reverse output command for circ 2	
201 205 202 203	1	UnitChHp_WR Rev4WayValve_Circ2_	BOOL			R	FALSE			
105 102 103	1 1 1	UnitChHp_WR Rev4WayValve_Circ2_ OutSTATUS En_AIN_PwrReqPrb_				R R	FALSE FALSE			
05 02 03 06 04	1 1 1	UnitChHp_WR Rev4WayValve_Circ2_ OutSTATUS En_AIN_PwrReqPrb_ Circ1	BOOL			R	FALSE		4WayValve reverse output command for circ 2 Connected analogue capacity request probe on circuit 1	
05 02 03 06 04	1 1 1 1 1 1 1	UnitChHp_WR Rev4WayValve_Circ2_ OutSTATUS En_AIN_PwrReqPrb_ Circ1 A88	BOOL BOOL			R R	FALSE FALSE		4WayValve reverse output command for circ 2 Connected analogue capacity request probe on circuit 1 Circuit 1 - Source fan/pump alarm	
05 02 03 06 04 07 09	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	UnitChHp_WR Rev4WayValve_Circ2_ OutSTATUS En_AIN_PwrReqPrb_ Circ1 A88 LP_Pstat_Circ1	BOOL BOOL BOOL			R R R	FALSE FALSE FALSE		4WayValve reverse output command for circ 2 Connected analogue capacity request probe on circuit 1 Circuit 1 - Source fan/pump alarm Low pressure switch on circ.1	
05 02 03 06	1 1 1 1 1 1 1 1 1 1	UnitChHp_WR Rev4WayValve_Circ2_ OutSTATUS En_AIN_PwrReqPrb_ Circ1 A88	BOOL BOOL			R R	FALSE FALSE		4WayValve reverse output command for circ 2 Connected analogue capacity request probe on circuit 1 Circuit 1 - Source fan/pump alarm	

Tab. 7.d

104 Supervisor table µchiller +0300053EN rel. 2.5 - 03.10.2024



ALARMS AND SIGNALS

Types of alarms 8.1

The controller manages three types of alarms, depending on the reset mode:

- A automatic: the alarm is reset and the device restarts automatically when the alarm condition is no longer present;
- R semi-automatic: if the alarm occurs several times, reset becomes manual and an operator needs to physically restart the
- M manual: an operator an operator needs to physically restart the device.

Alarms that require technical service are shown on the display with the flashing spanner icon.

If the spanner icon is on, it means that a device has reached the programmed operating hour threshold, and maintenance is required (the alarm code indicates which device is affected).

For some alarms, the reset mode can be configured by parameter. The configurable alarms are:

- · High pressure switch
- Low pressure switch
- · Frost protection alarm

User	Code	Description	Def	Min	Max	UOM
М	U081	Pressure-frost alarm reset configuration	7	0	7	-
		0 = high pressure switch, low pressure switch,				
		frost all with manual reset				
		1 = high pressure switch, low pressure switch,				
		frost all with automatic reset				
		2 = high pressure and switch and frost with manual reset,				
		low pressure switch with automatic reset				
		3 = high pressure switch with manual reset, low pressure switch,				
		and frost with automatic reset				
		4 = high pressure switch and low pressure switch with manual reset, frost with automatic				
		reset				
		5 = high pressure switch and low pressure switch with				
		semi-automatic reset, frost with automatic reset				
		6 = high pressure switch and low pressure switch with				
		semi-automatic reset, frost with manual reset				
		7 = high pressure and switch and frost with manual reset,				
		low pressure switch with semi-automatic reset				

Tab. 8.a

8.1.1 Active alarms

Note: the user terminal can only access the active alarms without password protection, or, with password protection, to the alarms relating to unit initialisation and optimisation.

Active alarms are signalled by buzzer and the Alarm button lighting up. Pressing Alarm mutes the buzzer and displays the alarm code (on the top row) and any additional information (on the bottom row). Alarm activation is recorded in the alarm log. If the alarm is reset automatically, the Alarm button goes off, the alarm code is cleared from the list and the alarm reset event is recorded in the alarm log.

Procedure (alarm acknowledgement):

- 5. press Alarm: the buzzer is muted, the alarm code is shown on the display;
- press UP/DOWN to scroll through the list of alarms;
- when finished, press Esc and then PRG to exit.

Procedure



When an alarm is active, the buzzer sounds and the Alarm button lights





Pressing Alarm mutes the buzzer and displays the alarm code; pressing UP/ DOWN scrolls the list of any other alarms.

Pressing the Alarm button for more than 3 s resets the alarms: noAL indicates that there are no more active alarms. Press PRG to exit the alarm list.



When reaching the end of the alarm list, "ESC" is shown: press PRG to exit the alarm list.





A single alarm can be reset by pressing Alarm for more than 3 s. If the condition that generated the alarm is still present, the alarm will be reactivated. The alarm log can be deleted using parameter ClrH, accessible via the Service level on the terminal or APPLICA via smartphone, with BLE connection, using the specific function on the alarm page ("Service" level access). The same operations can be performed with APPLICA via smartphone, using the specific function on the alarm page (a BLE connection and "Service" level access are required).

Notes:

- · deletion of the alarm log is irreversible;
- See chapter "Functions" for the alarm parameters: evaporator outlet temperature, frost protection, compressor;
- the buzzer is activated for all alarms.

8.1.2 Alarms A48 and A81

On uChiller these alarms signal that there is an alarm on the Power+ inverter relating to circuit 1 (A48) and circuit 2 (A81). When one of the alarms is detected on the Power+, alarm A48 is displayed on uChiller for circuit 1 and/or A81 for circuit 2. Furthermore, these two alarms also report the error code that caused the alarm on the Power+.

For 2-row displays, this code can be viewed using the arrows, once having accessed the alarm list or the alarm log. If alarm A48 and/or A81 is active, the error code can be seen in Applica mobile, tablet and desktop under parameters PWRP_ErrCode_Circ1 and PWRP_ErrCode_Circ2 for circuits 1 and 2, respectively.

Otherwise, if the alarm is no longer active, the same code can be viewed in the alarm log from the display, Applica mobile, tablet and desktop. The list of Power+ error codes and their meanings is available in the Power+ manual.

8.1.3 Alarms A27 and A29

A27 and A29 are the low pressure alarms from the transducer and pressure switch, respectively. These are controlled by parameters C049 (Low pressure alarm delay at start-up) and C050 (Low pressure alarm delay when running).

By setting C049 = 0, the alarms are activated even when the compressor is off. In this case, the start delay time is the maximum value between 15 s and the delay when running C050.

If C049 > 0, the alarms are active only when the compressor is on.

8.2 Alarm list

Code	Description	Reset	Effect	Priority	Delay	No. of attempts	Period fo eval. (s)
401	Unit: no. of permanent memory writes	М	-	Fault	No	-	-
402	Unit: permanent memory writes	M	-	Fault	No	-	-
403	Unit: remote alarm from digital input	M	Unit shutdown	Serious, unit	No	-	-
404	Unit: remote set point probe	А	Use standard set	Fault	10s	-	-
405	Unit: user return water temperature probe	A	Unit shutdown	Serious, unit	10s	-	_
106	Unit: user delivery water temperature probe	A	Unit shutdown	Serious, unit	10s	-	-
108	Unit: user pump 1 overload	M	-	Fault	No	-	_
109	Unit: user pump 2 overload	M	_	Fault	No	-	_
\10	Unit: flow switch (with user pump 1 active)	M	Unit shutdown	Serious, unit	Par. U045/U046	-	-
\11	Unit: flow switch (with user pump 2 active)	М	Unit shutdown	Serious, unit	Par. U045/U046	-	-
12	Unit: user pump group	М	Unit shutdown	Serious, unit	No	-	-
\13	Unit: user pump 1 maintenance	А	Fault	Par.	U000	-	-
114	Unit: user pump 2 maintenance	А	-	Fault	Par. U003	-	-
\15	Unit: high chilled water temperature	А	-	Fault	Par. U032/U033	-	-
A16	Unit: source return water/air temperature probe	A	Disable FC and Compensation (A/W units)	Fault	10s	-	-
\17	Unit: source pump 1 maintenance	А	-	Fault	Par. S000	-	-
118	Unit: freecooling warning	M	Disable FC	Fault	Par. U032/180s	-	-
119	Circuit 1: condensing pressure transducer	Α	Shutdown circuit 1	Serious, circuit 1	10s	-	-
120	Circuit 1: condensing temperature probe	Α	Shutdown circuit 1	Serious, circuit 1	10s	-	-
\21	Circuit 1: evaporation pressure transducer	А	Shutdown circuit 1	Serious, circuit 1	10s	-	-
122	Circuit 1: evaporation temperature probe	Α	Shutdown circuit 1	Serious, circuit 1	10s	-	-
123	Circuit 1: discharge temperature probe	Α	Shutdown circuit 1	Serious, circuit 1	10s	-	-
124	Circuit 1: suction temperature probe	А	Shutdown circuit 1	Serious, circuit 1	10s	-	-
425	Circuit 1: high pressure switch	Param. U081.	Shutdown circuit 1	Serious, circuit 1	No	-	-
126	Circuit 1: high condensing pressure/ temperature transducer	М	Shutdown circuit 1	Serious, circuit 1	No	-	-
\27	Circuit 1: low pressure transducer	A (R)	Shutdown circuit 1	Serious, circuit 1	No	3	3600
A28	Circuit 1: frost protection temperature	Par. U081	Shutdown circuit 1	Serious, circuit 1	Par. U052	-	-
129	Circuit 1: low pressure switch	Par. U081	Shutdown circuit 1	Serious, circuit 1	Par. C049, C050	3	3600
430	Circuit 1: compressor 1 overload	М	Comp. 1 circ. 1 shutdown	Fault, circuit 1	No	-	-

106 | Alarms and signals µchiller +0300053EN rel. 2.5 - 03.10.2024



Code	Description	Reset	Effect	Priority	Delay	No. of attempts	Period fo eval. (s)
\31	Circuit 1: compressor 2 overload	М	Comp. 2 circ. 1 shutdown	Fault, circuit 1	No	-	-
32	Circuit 1: compressor 1 maintenance	А	-	Fault, circuit 1	Par. C000	-	-
33	Circuit 1: compressor 2 maintenance	Α	-	Fault, circuit 1	Par. C003	-	-
34	Circuit 1: source fan maintenance	А	-	Fault, circuit 1	Par. S008	-	-
35	EVD circuit 1: LowSH	М	Shutdown circuit 1	Serious, circuit 1	Par. E024	-	-
36	EVD circuit 1: LOP	А	-	Fault, circuit 1	Par. E025	-	-
.37	EVD circuit 1: MOP	Α	Shutdown circuit 1	Serious, circuit 1	Par. E026	-	-
38	EVD circuit 1: motor error	М	Shutdown circuit 1	Serious, circuit 1	No	-	-
39	EVD circuit 1: emergency closing	Α	-	Fault, circuit 1	No	-	-
40	EVD circuit 1: incomplete valve closing	Α	-	Fault, circuit 1	No	-	-
41	EVD circuit 1: offline	A	Circuit 1 & 2 shut- down	Serious, circuits 1 & 2	30s	-	-
42	Circuit 1: envelope alarm + zone alarm	A (R)	Shutdown circuit 1	Serious, circuit 1	Par. P003	3	3600
43	BLDC circuit 1: high pressure differential at start-up	А	Does not allow BLDC 1 to start	Serious, circuit 1	5min	-	-
44	BLDC circuit 1: failed start-up	A (R)	- DEDC 1 to start	Serious, circuit 1	45s	5	3600
45	BLDC circuit 1: low pressure differential	Α (11)	Shutdown circuit 1	Serious, circuit 1	Par. P004		3000
46	BLDC circuit 1: high gas discharge temp.	М	Shutdown circuit 1	Serious, circuit 1	No		
47	Speed drive 1: offline	A	Shutdown circuit 1	Serious, circuit 1	30s	-	
	'		/ BLDC 1	,		_	
48	Speed drive 1: alarm + error code	A (R)	Shutdown circuit 1 / BLDC 1	Serious, circuit 1	No	3	3600
49	Unit: circuit 2 offline	А	-	Serious, circuit 2	30s	-	-
150	Unit circuit 2: no. of permanent memory writes	М	-	Fault	No	-	-
\51	Unit circuit 2: permanent memory writes	М	-	Fault	No	-	-
52	Circuit 2: condensing pressure transducer	Α	Shutdown circuit 2	Serious, circuit 2	10s	-	-
53	Circuit 2: condensing temperature probe	Α	Shutdown circuit 2	Serious, circuit 2	10s	-	-
154	Circuit 2: evaporation pressure transducer	Α	Shutdown circuit 2	Serious, circuit 2	10s	-	-
155	Circuit 2: evaporation temperature probe	Α	Shutdown circuit 2	Serious, circuit 2	10s	_	-
156	Circuit 2: discharge temperature probe	Α	Shutdown circuit 2	Serious, circuit 2	10s	_	_
157	Circuit 2: suction temperature probe	A	Shutdown circuit 2	Serious, circuit 2	10s	-	-
58	Circuit 2: high pressure switch	Par.	Shutdown circuit 2	Serious, circuit 2	No	-	-
159	Circuit 2: high condensing pressure/	U081 M	Shutdown circuit 2	Serious, circuit 2	No	-	-
1.60	temperature transducer	A (D)	Clarita a dia 11.2	6	NI.		2600
\60 \61	Circuit 2: low pressure transducer Circuit 2: frost protection temperature	A (R) Par.	Shutdown circuit 2 Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2	No Par. U052	-	3600
162	Circuit 2: low pressure switch	U081 Par.	Shutdown circuit 2	Serious, circuit 2	Par.	3	3600
	·	U081			C049, C050		3000
\63	Circuit 2: compressor 1 overload	М	Comp. 1 circ. 2 shutdown	Fault, circuit 2	No	-	-
464	Circuit 2: compressor 2 overload	М	Comp. 2 circ. 2 shutdown	Fault, circuit 2	No	-	=
165	Circuit 2: compressor 1 maintenance	Α	-	Fault	Par. C006	-	-
166	Circuit 2: compressor 2 maintenance	Α	-	Fault	Par. C003	-	-
167	Circuit 2: source fan maintenance	Α	-	Fault	Par. S012	-	_
168	EVD circuit 2: LowSH	М	Shutdown circuit 2	Serious, circuit 2	Par. E024	1-	-
				'			_
109	TEVD circuit 2·1OP		Shutdown circuit 2	Serious circuit ?	TPar FU75		
	EVD circuit 2: LOP EVD circuit 2: MOP	А	Shutdown circuit 2	Serious, circuit 2		-	_
۹70	EVD circuit 2: MOP	А	Shutdown circuit 2	Serious, circuit 2	Par. E026	-	-
\70 \71	EVD circuit 2: MOP EVD circuit 2: motor error	A M	Shutdown circuit 2 Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2	Par. E026 No	-	-
\70 \71 \72	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing	A M A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No	- - -	
\70 \71 \72 \73	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing	A M A A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No No	- - - -	
\70 \71 \72 \73 \74	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline	A M A A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No No No 30s	- - - - -	
A69 A70 A71 A72 A73 A74 A75	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing	A M A A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 BLDC 2 not enabled	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No No No 30s Par. P003	- - - - - - 3	- - - - - 3600
\70 \71 \72 \73 \74 \75 \76	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up	A M A A A A (R)	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No No No 30s Par. P003 5min	-	-
170 171 172 173 174 175 176	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up	A M A A A A (R)	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 BLDC 2 not enabled	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No No No 30s Par. P003 5min	- - - - - - 3	- - - - - 3600 -
\70 \71 \72 \73 \74 \75 \76 \77	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up BLDC circuit 2: low pressure differential	A M A A A A (R) A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 BLDC 2 not enabled	Serious, circuit 2 Serious, circuit 2	Par. E026 No No No 30s Par. P003 5min 45	-	-
170 171 172 173 174 175 176	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up	A M A A A A (R) A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 BLDC 2 not enabled to start	Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2 Serious, circuit 2	Par. E026 No No No 30s Par. P003 5min 45	-	-
.70 .71 .72 .73 .74 .75 .76	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up BLDC circuit 2: low pressure differential	A M A A A A (R) A	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2	Serious, circuit 2 Serious, circuit 2	Par. E026 No No No 30s Par. P003 5min 45 P004 No	-	-
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp.	A M A A A A A A A A A A A A A A A A A A	Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 2	Serious, circuit 2	Par. E026 No No No 30s Par. P003 5min 45 P004 No 30s	5	3600
170 171 172 173 174 175 176 177 178 180	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp. Speeddrive circuit 2: offline Speed drive circuit 2: alarm + error code Source delivery water temperature probe broken or	A M A A A A (R) A (R) A (R) A (R)	Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown	Serious, circuit 2	Par. E026 No No No 30s Par. P003 5min 45 P004 No 30s	5	3600
\(\frac{170}{171}\) \(\frac{171}{172}\) \(\frac{172}{173}\) \(\frac{173}{174}\) \(\frac{175}{175}\) \(\frac{177}{178}\) \(\frac{177}{178}\) \(\frac{177}{178}\) \(\frac{178}{178}\) \(\fra	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: low pressure differential BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp. Speeddrive circuit 2: offline Speed drive circuit 2: alarm + error code Source delivery water temperature probe broken or disconnected - circuit 1	A M A A A (R) A M A A (R)	Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 2 shutdown Shutdown Shutdown Shutdown	Serious, circuit 2	Par. E026 No No No No 30s Par. P003 5min 45 P004 No 30s	5	3600
A70 A71 A72 A73 A74 A75 A76 A77 A78 A79 A80 A81	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: low pressure differential BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp. Speeddrive circuit 2: offline Speed drive circuit 2: alarm + error code Source delivery water temperature probe broken or disconnected - circuit 1 Unit: EVD Evolution not compatible	A M A A A (R) A M A A (R) A A A (R) A	Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 2 Shutdown Shutdown Shutdown Shutdown Shutdown Shutdown Unit shutdown	Serious, circuit 2 Serious, circuit 1 Serious, circuit 1	Par. E026 No No No No 30s Par. P003 5min 45 P004 No 30s No No No	5	3600
A70 A71 A72 A73 A74 A75 A76 A77 A78 A79 A80 A81	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp. Speeddrive circuit 2: offline Speed drive circuit 2: alarm + error code Source delivery water temperature probe broken or disconnected - circuit 1 Unit: EVD Evolution not compatible Circuit 1 - Source fan/pump alarm	A M A A (R) A M A (R) A M A (R) A M A (R) A M M A M M M M M M M M M M M M M M M	Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 2 shutdown Shutdown circuit 1 Unit shutdown Shutdown Shutdown Shutdown Shutdown	Serious, circuit 2 Serious, circuit 1 Serious, circuit 1	Par. E026 No No No No 30s Par. P003 5min 45 P004 No 30s No No No	5	3600
770 771 772 773 774 775 776 777 778 779 880 881 885 887	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp. Speeddrive circuit 2: offline Speed drive circuit 2: alarm + error code Source delivery water temperature probe broken or disconnected - circuit 1 Unit: EVD Evolution not compatible Circuit 1 - Source fan/pump alarm Circuit 2 - Source fan/pump alarm	A M A A A A (R) A A (R) A A (R) A M A (R) A M M M M	Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 1 Shutdown Shutdown circuit 1 Unit shutdown Shutdown circuit 1 Shutdown circuit 1	Serious, circuit 2 Serious, circuit 1 Serious, circuit 1 Serious, circuit 1	Par. E026 No No No No Sos Par. P003 Smin 45 P004 No Sos No No No No No No No No	5	3600
A70 A71 A72 A73 A74 A75	EVD circuit 2: MOP EVD circuit 2: motor error EVD circuit 2: emergency closing EVD circuit 2: incomplete valve closing EVD circuit 2: offline Circuit 2: envelope alarm + zone alarm BLDC circuit 2: high pressure differential at start-up BLDC circuit 2: failed start-up BLDC circuit 2: low pressure differential BLDC circuit 2: high gas discharge temp. Speeddrive circuit 2: offline Speed drive circuit 2: alarm + error code Source delivery water temperature probe broken or disconnected - circuit 1 Unit: EVD Evolution not compatible Circuit 1 - Source fan/pump alarm	A M A A (R) A M A (R) A M A (R) A M A (R) A M M A M M M M M M M M M M M M M M M	Shutdown circuit 2 BLDC 2 not enabled to start - Shutdown circuit 2 Shutdown circuit 2 Shutdown circuit 2 Circuit 2 / BLDC 2 shutdown Circuit 2 / BLDC 2 shutdown Shutdown circuit 1 Unit shutdown Shutdown Shutdown Shutdown Shutdown	Serious, circuit 2 Serious, circuit 1 Serious, circuit 1	Par. E026 No No No No 30s Par. P003 5min 45 P004 No 30s No No No	5	3600

Tab. 8.b

μchiller +0300053EN rel. 2.5 - 03.10.2024 Alarms and signals 107



9. TECHNICAL SPECIFICATIONS

Model	UCHBP* (panel models)	UCHBD* (DIN rail models)
Physical specifications	•	
Dimensions	See figures	See figures
Case	Polycarbonate	Polycarbonate
Assembly	panel	DIN rail
Ball pressure test temperature	125°C	125°C
Ingress protection	IP20 (rear) - IP65 (front)	IP00
Front cleaning	Use soft, non-abrasive cloth and neutral detergent	-
	or water	
Environmental conditions		
Storage conditions	-40T85°C, <90 % RH non-condensing	-40T85°C, <90 % RH non-condensing
Operating conditions	-20T60°C, <90 % RH non-condensing	-20T60°C, <90 % RH non-condensing
Electrical specifications		
Rated power supply	24 Vac/dc (SELV or PELV power supply, Class 2)	24 Vac/dc (SELV or PELV power supply, Class 2)
Operating power supply voltage	24 Vac/dc, +10% -15%	24 Vac/dc, +10% -15%
Input frequency (AC)	50/60 Hz	50/60 Hz
Maximum current draw	600 mA rms	DIN without ExV valve driver: 600 mArms DIN with ExV valve driver: 1.25 Arms
Absorbed power for transformer sizing	15 VA	Models without valve driver: 15 VA
Clock	precision: ± 50 ppm; min time maintenance after power	Models with valve driver: 30 VA precision: ± 50 ppm; min time maintenance after
	off: 72 h	power off: 72 h
Software class and structure	A	A
Pollution degree	3	3
Class of protection against electric shock	To be incorporated in class I or II appliances	To be incorporated in class I or II appliances
Type of action and disconnection	1.C	1.C
Rated impulse voltage	relay outputs: 4 kV; 24 V input: 0.5 kV	relay outputs: 4 kV; 24 V input: 0.5 kV
Surge immunity category	relay outputs: III; input 24V: II	relay outputs: III; input 24V: II
Control device construction	Device to be incorporated	Device to be incorporated
Terminal block	Plug-in male-female. Wire sizes: see the connector table	Plug-in male-female. Wire sizes: see the connector
Terrilliai block	riug-iii iiiale-ieiiiale. Wiie sizes. see tile conflector table	table
Purpose of the controller	Electrical operating control	Electrical operating control
User interface Buzzer	integrato	not included on the controller, built into the
Display	LED 2 rows, decimal point, and multi-function icons	user terminal LED 2 rows, decimal point, and multi-function icons
Display	EED 2 fows, decimal point, and multi-function feoris	LED 2 fows, decimal point, and multi-function reons
Connectivity	Man distance 10 and posicible and dis-	Man distance 10 man verible according
NFC	Max distance 10mm, variable according to the mobile device used	Max distance 10mm, variable according to the mobile device used
Bluetooth Low Energy	Max distance 10m, variable according to the mobile device used	Max distance 10m, variable according to the mobile device used
BMS serial interface	Modbus over RS485, not opto-isolated	Modbus over RS485, not opto-isolated
FieldBUS serial interface	Modbus over RS485, not opto-isolated	Modbus over RS485, not opto-isolated
HMI interface	Modbus over RS485, not opto-isolated	Modbus over RS485, not opto-isolated
J2 S1, S2, S3: NTC	NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the	· ·
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC	range -50T50°C, ±3°C in the range 50T90°C;	the range -50T50°C, ±3°C
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%;	the range -50T50°C, ±3°C in the range 50T90°C;
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC	range -50T50°C, ±3°C in the range 50T90°C;	the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC J3 S4: 0-5 V ratiometric / 4-20 mA / NTC S6: 0-5 V ratiometric / 0-10V / 4-20 mA / NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%	the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1%
S5: 0-5V ratiometric / 4-20 mA / NTC J3	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%	the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC J3 S4: 0-5 V ratiometric / 4-20 mA / NTC S6: 0-5 V ratiometric / 0-10V / 4-20 mA / NTC J9 S7: NTC (DIN version only)	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1%	in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error::±1°C in
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1%	the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the range 50T90°C;
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% - UCHBP* (panel models)	the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the range 50T90°C; UCHBD* (DIN rail models)
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1%	the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error: $\pm 1^{\circ}$ C in the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; UCHBD* (DIN rail models) Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% - UCHBP* (panel models) ID1(*)	the range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error:±1°C in the range -50T50°C, ±3°C in the range 50T90°C; UCHBD* (DIN rail models) Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% - UCHBP* (panel models) ID1(*)	the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error: $\pm 1^{\circ}$ C in the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; UCHBD* (DIN rail models) Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 19% 0-10 V: error 2% fs, typical 1% - UCHBP* (panel models) ID1(*) ID2 ID3(*), ID4, ID5,	the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error: $\pm 1^{\circ}$ C in the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; UCHBD* (DIN rail models) Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω
J2 S1, S2, S3: NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% - UCHBP* (panel models) ID1(*)	the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error: $\pm 1^{\circ}$ C in the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; UCHBD* (DIN rail models) Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω
J2 S1, S2, S3: NTC S5: 0-5V ratiometric / 4-20 mA / NTC J3 S4: 0-5 V ratiometric / 4-20 mA / NTC S6: 0-5 V ratiometric / 0-10V / 4-20 mA / NTC	range -50T50°C, ±3°C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 19% 0-10 V: error 2% fs, typical 1% - UCHBP* (panel models) ID1(*) ID2 ID3(*), ID4, ID5,	the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; 0-5 V ratiometric: error 2% fs, typical 1%; 4-20mA: error 5% fs, typical 1% 0-10 V: error 2% fs, typical 1% NTC: resolution 0.1 °C; 10Kohm @ 25 °C, error: $\pm 1^{\circ}$ C in the range -50T50°C, $\pm 3^{\circ}$ C in the range 50T90°C; UCHBD* (DIN rail models) Voltage-free contact, not optically-isolated, typical closing current 6 mA, voltage with contact open 13 V, max contact resistance 50Ω

Technical specifications 4 pchiller +0300053EN rel. 2.5 - 03.10.2024



Model	UCHBP* (panel models)	UCHBD* (DIN rail models)
Analogue outputs (Lmax=10m)		
J14	Y1, Y2	010 Vdc: 10 mA max
Digitaloutputs (Lmax=10m)		
	NO1, NO2, NO3 and NO4 must not exceed 8 A	
J6 NO1(5A), NO2(5A),	5A: EN60730: 5A resistive, 250Vac, 50k cycles; 4(1), 230Vac,	5A: EN60730: 5A resistive, 250Vac, 50k cycles; 4(1),
NO3(5A), NO4(5A)	100k cycles; 3 (1), 230Vac, 100k cycles UL60730: 5A resis.,	230Vac, 100k cycles; 3 (1), 230Vac, 100k cycles
J7 NO5(5A)	250Vac, 30k cycles; 1FLA, 6LRA, 250Vac, 30k cycles; Pilot Duty C300, 30k cycles	UL60730: 5A resis., 250Vac, 30k cycles; 1FLA, 6LRA, 250Vac, 30k cycles; Pilot Duty C300, 30k cycles
J11 NO6(5A) - only for DIN	Duty C500, 50k Cycles	230vac, 30k cycles, 1 liot Duty C300, 30k cycles
Emergency powersupply		
J10: Ultracap module (optional,	-	13 Vdc ±10%
available only on DIN version)		
Probe and terminalpowersupply (Lmax=1	10m)	
5V	$5 \text{ Vdc} \pm 2\%$ to power the 0 to 5 V ratiometric probes.	$5 \text{ Vdc} \pm 2\%$ to power the 0 to 5 V ratiometric probes.
	Maximum current delivered: 35 mA protected against	Maximum current delivered: 35 mA protected
	short-circuits	against short-circuits
+V	8-11 V to power the 4-20 mA current probes. Maximum	8-11 V to power the 4-20 mA current probes. Maxi-
	current delivered: 80 mA protected against short-circuits	mum current delivered: 80 mA protected against short-circuits
VL	Not used	Not used
J8	User terminal power supply	User terminal power supply
Serialports BMS	Integrated	 Integrated
BIVIS	Protocol: Modbus	Protocol: Modbus
Lmax=500 m, shielded cable (RS485 1½	HW driver: asynchronous half duplex RS 485 Circuit 2	
twisted pair) (1)	Not optically-isolated	cuit 2
	3-pin plug-in connector, 3.81 mm pitch	Not optically-isolated
	Max data rate: 115200 bit/s	3-pin plug-in connector, 3.81 mm pitch
	 Maximum number of connectable devices: 16 	Max data rate: 115200 bit/s
		• Maximum number of connectable devices: 16
FieldBus	Integrated	Integrated
	HW driver: asynchronous half duplex RS 485 Circuit 1.	• HW driver: asynchronous half duplex RS 48
J5: Lmax=10 m, shielded cable (RS485 1½	Typical reception resistance 96 kohms, equal to 1/8	Circuit 1. Typical reception resistance 96 kohm:
twisted pair) (1)	of unit load, i.e. 1/256 of maximum load applicable	equal to 1/8 of unit load, i.e. 1/256 of maximun
	on the line	load applicable on the line
	 Not optically-isolated 	Not optically-isolated
	 Max data rate: 19200 bit/s 	Max data rate: 19200 bit/s
	 Maximum number of connectable devices: 16 	 Maximum number of connectable devices: 16
	Protocol: Modbus RTU	Protocol: Modbus RTU
Cable lengths		
Analogue inputs/outputs, digital inputs/	<10m (*) (*) in the panel version, if using the +13 V power su	apply in domestic environments, the maximum cable
outputs, probe power	length is 2 m.	
Valve	< 2 m, < 9 m with shielded cable	< 2 m, < 9 m with shielded cable
BMS and Fieldbus serial cables	<500m with shielded cable	<500m with shielded cable
Conformity		
Electrical safety	EN/UL 60730-1, EN/UL 60335-1	EN/UL 60730-1, EN/UL 60335-1
Electromagnetic compatibility	EN 61000-6-1, EN 61000-6-2,	EN 61000-6-1, EN 61000-6-2,
2.cca o.magnetic compatibility	EN 61000-6-3, EN 61000-6-4	EN 61000-6-3, EN 61000-6-4
Applications with flammable	EN/UL 60079-15, EN/UL 60335-2-34,	EN/UL 60079-15, EN/UL 60335-2-34,
refrigerant gases	EN/UL 60335-2-40, EN/UL 60335-2-89	EN/UL 60335-2-40, EN/UL 60335-2-89

Tab. 9.a

Note: (1) it is recommended to use a BELDEN 8761 cable (AWG 22).

µchiller +0300053EN rel. 2.5 - 03.10.2024

Technical specifications 109





9.1 Connector/cable table

Ref.	Description	Wiring terminals	Wire cross- section (mm²)	Lmax (m)
J1	Controller power supply	Panel model: plug-in terminal, screw, 2-pin, pitch 5.08	0.51.5	10
		DIN rail model: plug-in terminal, screw, 2-pin, pitch 5.08	0.213.31	10
J2	Inputs S1, S2, S3, S5, ID1, ID2; outputs Y2, Y2	10-pin Microfit crimp connector	0.050.52	10
J3	Inputs S4, S6, ID3, ID4. ID5	8-pin Microfit crimp connector	0.050.52	10
J4	BMS	Plug-in screw terminal, 3-pin, pitch 3.81	0.0811.31	500
J5	Fbus	Plug-in screw terminal, 3-pin, pitch 3.81	0.0811.31	10
J6	Outputs NO1, NO2, NO3, NO4	6-pin Microfit crimp connector	0.51.31	10
J7	Output NO5	3-pin Microfit crimp connector	0.51.31	10
J8	Unit terminal	Connection cable P/N: ACS00CB000010 (L=3m)-/20 (L=1.5m)	0.13	2 (*)
J9	Inputs S7, ID6	4-pin Microfit crimp connector	0.050.52	10
J10	Ultracap	3-pin JST connector	0.13	2
J11	Output NO6	3-pin Microfit crimp connector	0.51.31	10
J14	Unipolar ExV valve	CAREL ExV unipolar valve connector, pre-wired	-	2, 6 with shielded cable

Tab. 9.b

10. RELEASE NOTES

The information and functions described in this manual refer to uChiller versions 3.5.0 or higher

110 Release notes µchiller +0300053EN rel. 2.5 - 03.10.2024

^(*) device to be incorporated.



CAREL INDUSTRIES - Headquarters Via dell'Industria, 11 - 35020 Brugine - Padova (Italy) Tel. (+39) 049.9716611 - Fax (+39) 049.9716600 e-mail: carel@carel.com - www.carel.com